

HOW TO VACUUM YOUR POOL MANUALLY



What You'll Need to Vacuum Your Pool:



Telescopic Pole

Vacuum Head



Skimmer Vacuum Plate (optional)



Vacuum Hose

Step-by-Step Instructions:

1. Attach the vac head to the open end of the telescopic pole - click in place
2. Take one end of the vacuum hose and attach to the top of the vac head
3. Place the vac head, pole, and hose in the pool, completely immersed in water
4. With the pump and filter running, take the other end of the hose and put it up against a return jet in the pool. This will push water through the hose and get all the air out.
Note: Bubbles will come up from the vacuum head on the floor of the pool. Once the bubbles stop, all the air is out of the hose.
5. If a vacuum plate is NOT being used, remove the basket inside your pool's skimmer, block (with your hand) the end of the hose that was up against the return jet, and bring it over and into the skimmer. Make sure the hose is inserted into the suction hole at the bottom of the skimmer.

If a vacuum plate is being used (provided with your pool's skimmer), place the vacuum plate inside your skimmer. Attach the end of the hose, that was up against the return jet, to your vacuum plate. Be sure to create a good seal or suction will be lost.

This will create the suction from the vac head, through the hose, into the skimmer, and through your pool's filter system. Now it's time to vacuum your pool!

Note: If suction is lost, repeat steps 4 and 5. If you do not get all the air out of the hose before connecting to your skimmer, your pump may stall.