

Automatic Soap Dispenser Use and Care Manual

Product Information: Drop-shaped, silver (resin and silver material), dimensions 7.4"L x 6.37"W x 3.34"H; capacity 17oz/500ml

Usage Instructions

1. Power Preparation: Insert 4 AA alkaline batteries (not included) into the bottom battery compartment following correct positive (+) and negative (-) polarity, then close the cover securely.
2. Soap Filling: Unscrew the top cover, slowly pour compatible liquid soap into the transparent container (do not overfill). Tighten the cover firmly to prevent leakage.
3. Operation: Place the dispenser on a flat, dry surface. Turn on (if applicable) and test by holding your hand or light-colored object 0-2.36 inches under the sensor for automatic soap dispensing. Press "+/-" buttons to adjust between 5 soap output levels.
4. Application Scenarios: Suitable for home, hotel, school, office and other indoor occasions; no power outlet restriction.

Care & Maintenance

1. Cleaning: Wipe the dispenser exterior with a soft, damp cloth; avoid abrasive cleaners. For clogs, clean the no-drip spout promptly. Ensure the battery compartment stays dry during cleaning.
2. Storage: When not in use for a long time, remove batteries and empty remaining soap. Store in a cool, dry place away from direct sunlight and excessive moisture.
3. Refill Reminder: Check soap level through the transparent container and refill in time to ensure normal use.

Safety & Notes

1. IPX4 waterproof rated for normal bathroom/kitchen use, but avoid direct water immersion or excessive water contact to prevent short circuits.
2. Keep away from open flames and high-temperature environments. Keep out of reach of children without adult supervision.
3. Do not use with corrosive or viscous liquids that may damage the dispenser or clog the spout.

4. If soap fails to dispense, check battery polarity, soap level, or clean the spout before further use.