



FLEXSCREEN

THE WORLD'S FIRST AND ONLY FLEXIBLE WINDOW SCREEN

FULL-SCREEN INSTALLATION & REMOVAL GUIDE*

IMPORTANT REMINDER: FlexScreens have a front and back. The front is where the warning label is placed, and you can see the mesh welded to the frame. When applying pressure, please be sure to press only on the front side of the screen to avoid possible damage.

INSTALLATION


STEP 1

While keeping the sides compressed, place one top corner of the screen into the screen track.




STEP 2

Keeping both sides compressed, place the opposite top corner into the screen track.

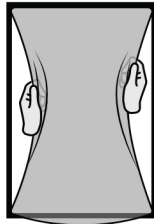


STEP 3

Continue to keep sides compressed, and insert screen into a bottom corner. [Lift slightly if your window has a lip on the sill.] Release this side of the screen.

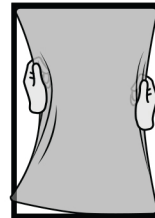

STEP 4

Place the last corner into the screen track and release completely once all corners are in place.

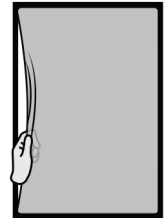

REMOVAL

STEP 1

Gently press on the center of the screen until you can wrap your hands around the FlexScreen frame. Squeeze both sides inward 4"-6".




STEP 2

While keeping the sides compressed, lift the screen up and remove one of the bottom corners from the screen track.




STEP 3

Remove the opposite bottom corner from the screen track.

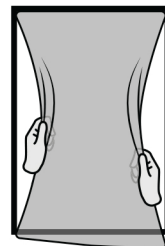

STEP 4

With both corners out of the screen track, pull FlexScreen down from the top and remove the screen.

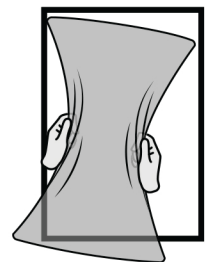

SCAN THE QR CODE FOR
AN INSTRUCTIONAL VIDEO

*For windows that are wider than they are tall, rotate the screens 90 degrees and proceed with instructions using the horizontal sides.