


# PARTS DIAGRAM

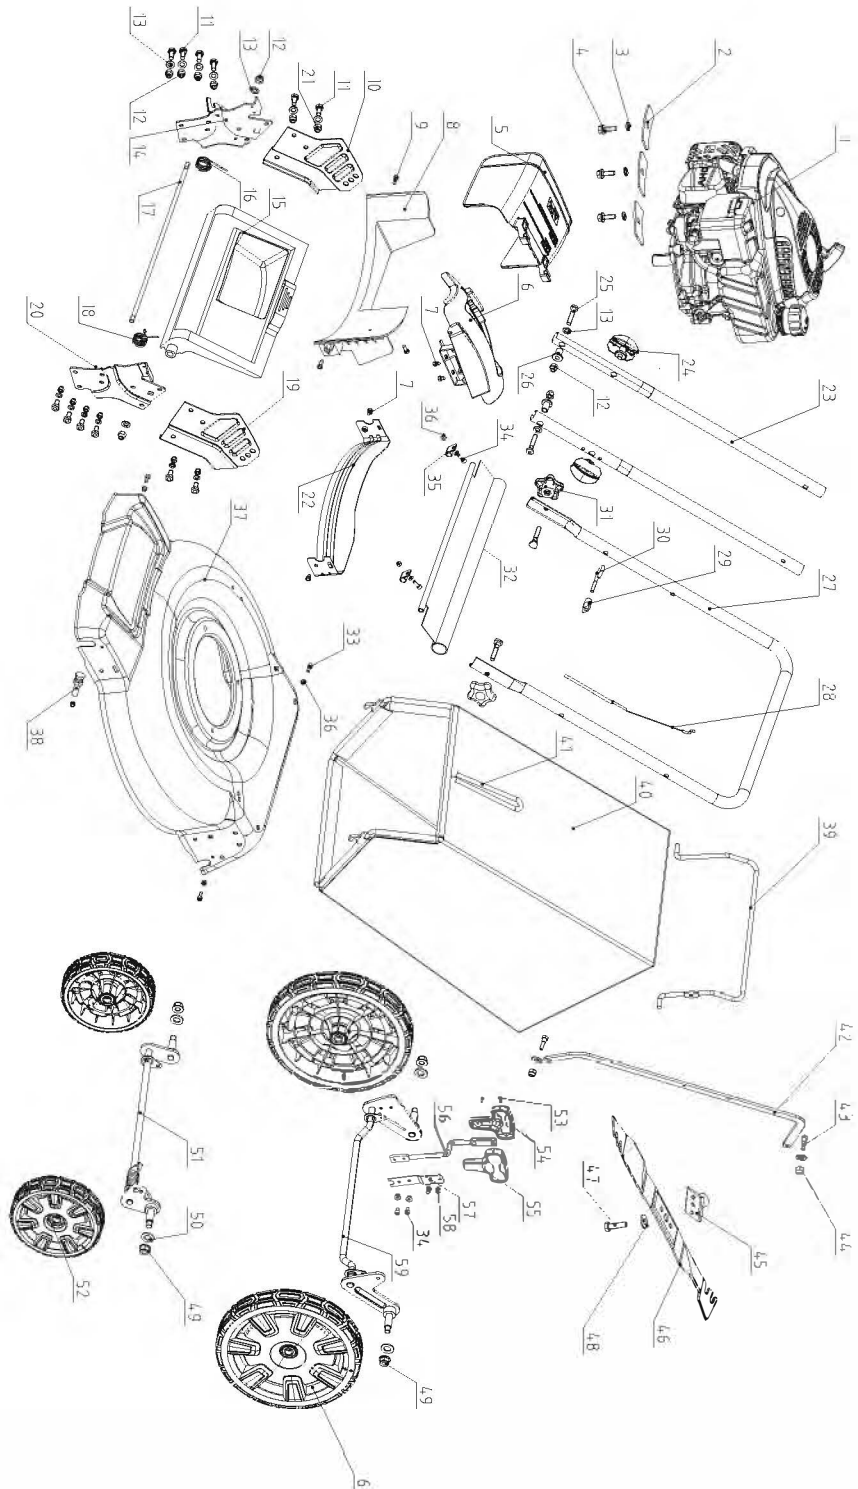

## YG1650 PARTS LIST

No.	Description	Qty
1	Engine	1
2	Engine Bolt Gasket	3
3	Spring Washer 8	3
4	Bolt M8x25 (Torque 18-22 Nm)	3
5	Side Discharge Chute	1
6	Mulching Cover Assembly	1
7	Hexagon Head Self-tapping Locking Screw M6x12	4
8	Rear Baffle	1
9	Hexagon Head Nylon Self-tapping Screw ST6x13	3
10	Right Handle Bracket-Upper	1
11	Bolt M8x20	12
12	Lock Nut M8	4
13	Flat Washer 8	12
14	Right Handle Bracket-Lower	1
15	Rear Discharge Cover	1
16	Right Torsion Spring	1
17	Rear Deflector Rotating Shaft	1
18	Left Torsion Spring	1
19	Left Handle Bracket-Upper	1
20	Left Handle Bracket-Lower	1
21	Thick Lock Nut M8	12
22	Front Baffle	1
23	Lower Connecting Handlebar	2
24	Unlock Knob	2
25	Hexagon Socket Round Head Screw M8x35	2
26	Bushing	2
27	Upper Handle	1
28	Engine Start/Stop Control Cable	1
29	Guide Knob	1
30	Rope Guide	1

No.	Description	Qty
31	Wing Knob	2
32	Shield-Trailing	1
33	Bolt M5x12	3
34	Bolt M5x16	4
35	Trailing Shield Holder	2
36	Nut M5	8
37	Cutting Deck	1
38	Groove Bolt	1
39	Engine Start/Stop Control	1
40	Grass Bag	1
41	Grass Catcher	1
42	Height Adjustment Connecting Rod	1
43	Positioning Bolt	2
44	Nut M6	2
45	Blade Support	1
46	Blade	1
47	Blade Bolt 3/8-24UNF-2A-45	1
48	Spring Washer for Blade	1
49	Nut M10	4
50	Washer 14	4
51	Front Wheel Axle	1
52	Front Wheel	2
53	Screw ST3.5x13	2
54	Height Adjustment Handlebar Knob-Right	1
55	Height Adjustment Handlebar Knob-Left	1
56	Height Adjustment Handlebar	1
57	Arm Pivot	1
58	Rivet 4 x10	2
59	Rear Wheel Axle	1
60	Rear Wheel	2