



Item # 1000000000

Model # H61HUTCH

USE AND CARE GUIDE

Husky 61 in. Hutch with 2-Drawer Riser Cabinet

Questions, problems, missing parts?

Before returning to the store, call


Husky Customer Service

8 a.m – 7 p.m., EST, Monday-Friday

9 a.m – 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

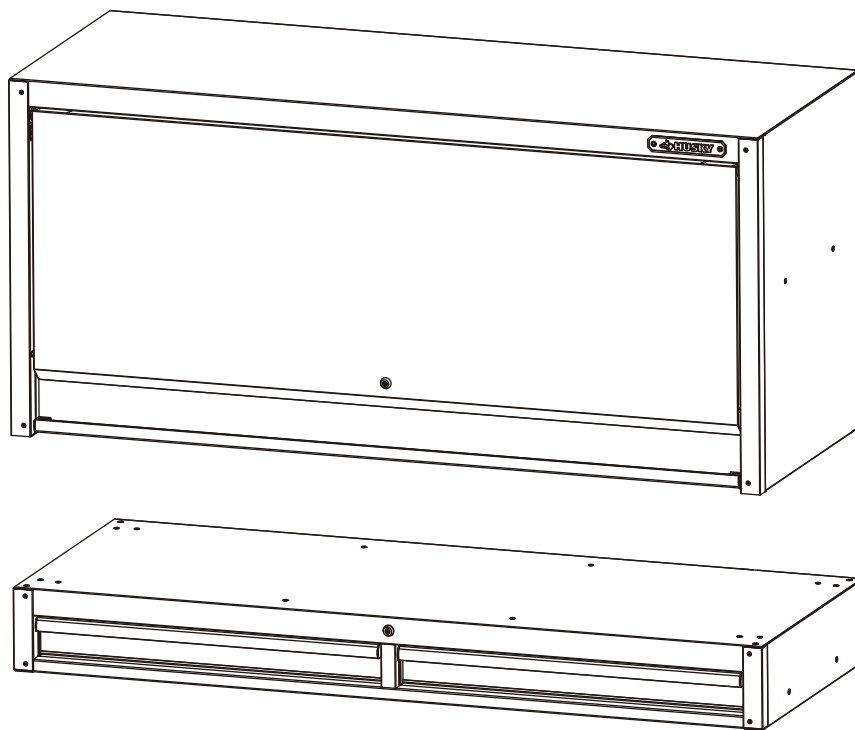

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this hutch & riser. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents.....	2	Assembly	6
Safety Information	2	Cordless Power Tool Battery Chargers	11
Warranty	4	Maintenance.....	11
Specifications	4	Replacement Parts	12
Package Contents.....	4		
Hardware Included.....	4		
Tools For Assembly (Not Included)	4		

Safety Information

1. To reduce the risk of injury, please read and follow the safety instructions below before assembling and using this product.
2. Two or more people are recommended for the assembly of this product.
3. Secure this product properly before moving it with a forklift.
4. Do not tow the product with power equipment.
5. Do not alter this product in any manner. For example, do not weld external lock bars or attach electrical equipment.
6. Before locking the riser cabinet, ensure the drawers are completely closed in order for the lock bars to work properly.



CAUTION: Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.



CAUTION: Lock the door and drawers before moving this product. The door and drawers could come open and make the product unstable and tip, which may cause personal or product damage.



CAUTION: Do not attach or mount this product to a vehicle or mobile trailers. This may cause personal injury or product damage. Mounting this product to any vehicle or mobile trailers in any manner will void warranty.



CAUTION: Do not stand on this product. You may fall which may cause personal injury or product damage.



CAUTION: Be careful when opening more than one drawer. The product may become unstable and tip, which may cause personal injury or product damage.

7. Extension cord

- ❑ Follow all manufacturers' Warnings and Operating Instructions for your extension cord.
- ❑ Do not insert extension cord through hole without grommet in place.
- ❑ Only use a three-wire extension cord with all three prongs intact. Never remove the round grounding prong.
- ❑ Extension cord must be connected to a 125 Volt GFCI protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI protection built in.
- ❑ Check the insulation and plugs of extension cord before using. Do NOT use cord if it is worn or damaged.
- ❑ Do NOT overload extension cord.
- ❑ Remove extension cord from the hole before moving or transporting Hutch.
- ❑ Only use an extension cord that is rated for outdoor use.
- ❑ Do NOT connect extension cord to outlet that also supplies critical safety equipment with power.

8. Electrical Shock Hazard

- ❑ Do not plug cord into outlet with wet hands.
- ❑ Do not use this Hutch near a bathtub, a shower, or a swimming pool.
- ❑ Hutch plugs must match the outlet.
- ❑ Never modify the plug in any way.
- ❑ Do not use any adapter plugs with earth (grounded) Hutch power strips.
- ❑ Unmodified plugs and matching outlets will reduce the risk of electric shock.
- ❑ Avoid body contact with earthed or grounded surfaces. There is an increased risk of electric shock if your body is earthed or grounded.



CAUTION: RISK OF ELECTRICAL SHOCK: This unit has one power supply cord. Make sure the cord is unplugged before any servicing or cleaning.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient or relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

Warranty

The manufacturer warrants the product to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, setup, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the products such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.huskytools.com.

Specifications

Maximum weight per (riser drawer)	120 lbs.
-----------------------------------	----------

Package Contents

 
HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



NOTE: Begin product assembly close to the final intended location of your hutch/riser. The product is heavy and may be difficult to move after assembly.



AA



BB



CC



DD



EE



FF



GG



HH




II

TOOLS FOR ASSEMBLY (Not Included)



*8 mm wrench or socket
*16 mm wrench or socket

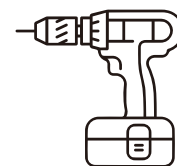

Power Drill

Part	Description	Quantity
AA	Template	1
BB	M8 hexagon head large flat head bolt (M8×192mm)	4
CC	Hexagon head flange bolt (M6*48mm)	4
DD	Hexagon head flange wood self-tapping screw (ST5.5*25mm)	5
EE	Shelf clip	5
FF	Storage hook	2
GG	Hex socket button cap bolt	4
HH	L hex key	1
II	Cable clip	6


Package Contents (continued)



NOTE: Hutch keys are attached to door.



NOTE: Riser cabinet keys are inside drawer.

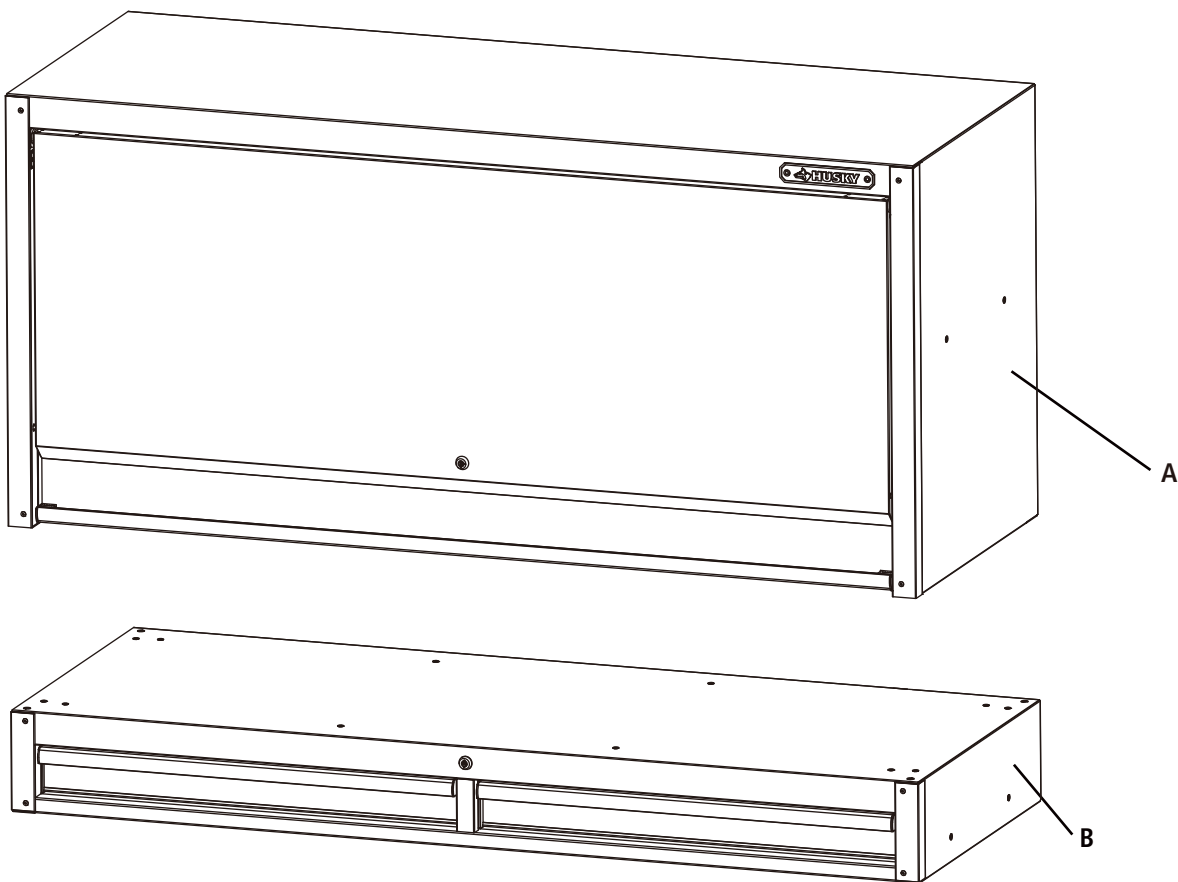

Part	Description	Quantity
A	Hutch	1
B	Riser	1

Assembly

The 61 in. Hutch and Riser Cabinet is designed to specifically fit only on the Husky 61 in. 15-Drawer Heavy Duty Workbench Model # H61MWC15HP

SKU # 1005517358


The wood top on the H61MWC15HP will be reused as the top for the 2-Drawer Riser Cabinet.



CAUTION: Two people are recommended for assembly.


1 Remove the wood top

1. Unscrew 8 bolts from the wood top of the H61MWC15HP cabinet, but **DO NOT DISCARD** the bolts.
2. Remove the wood top.

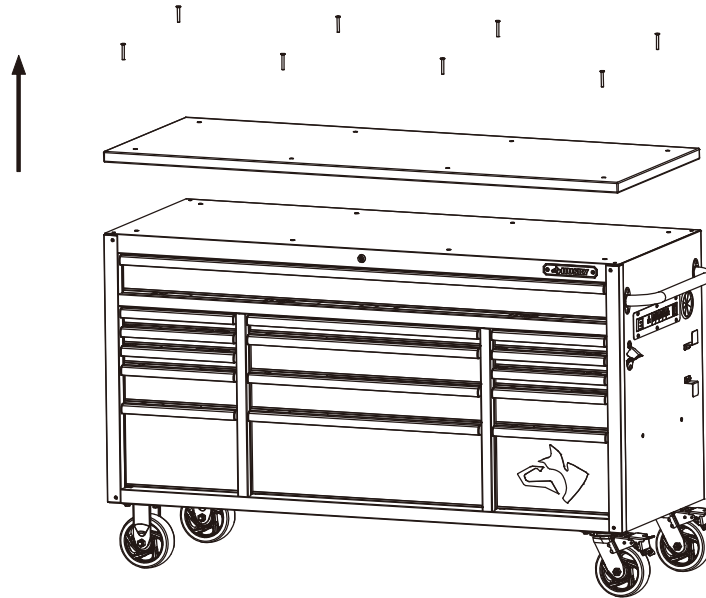


2 Drilling holes on the wood top

1. Align and fix the Template (AA) on the right side of the wood top, over the two existing holes.
2. Use a 3/8 in. diameter drill bit to drill cleanly through the wood top.
3. Flip the Template (AA) over and repeat this procedure on the left side.

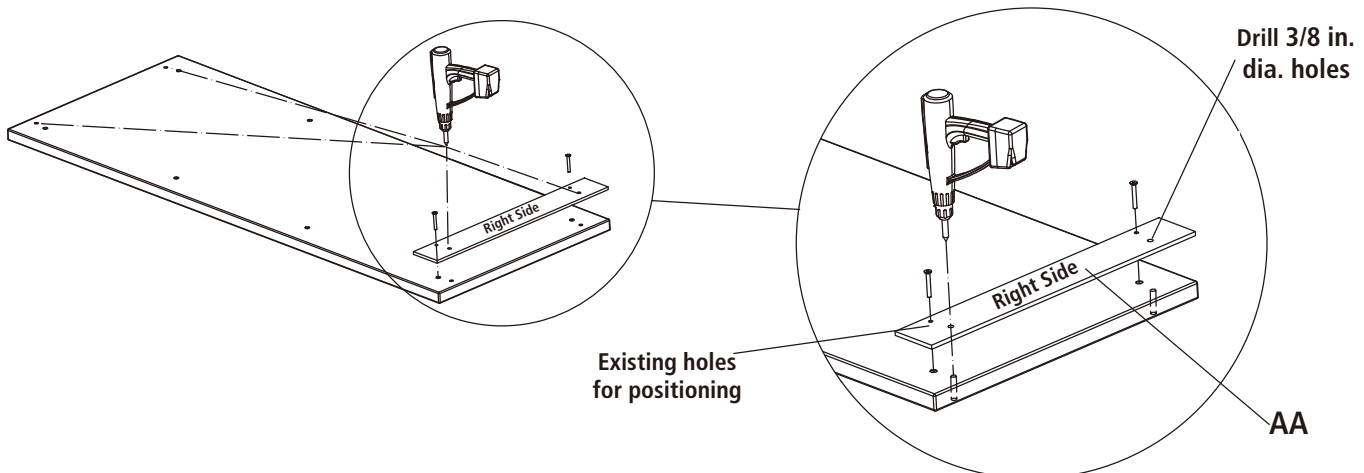


3 Attaching the riser

1. Place the Riser cabinet on top of the H61MWC15HP cabinet.
2. Using a 16mm socket or wrench, attach the Riser with 4 pcs M8×192mm long bolts (BB) in the four corners. Be careful not to over tighten.

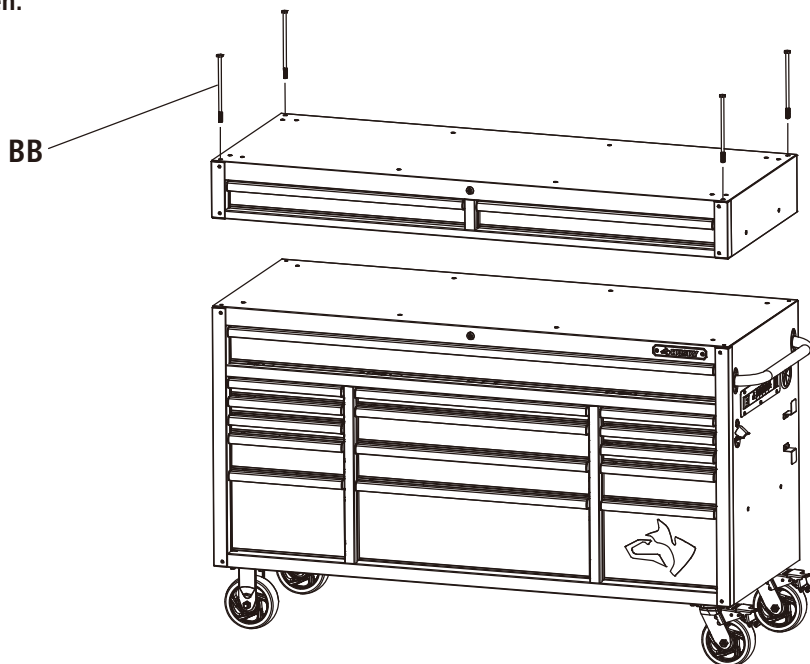


4 Re-attach the wood top

1. Position the wood top on the Riser.
2. Ensure the four 3/8 in. holes drilled in Step 2 align with the threaded holes in the Riser.
3. Attach the wood top to the riser with 8 bolts previously removed from the H61MWC15HP cabinet.

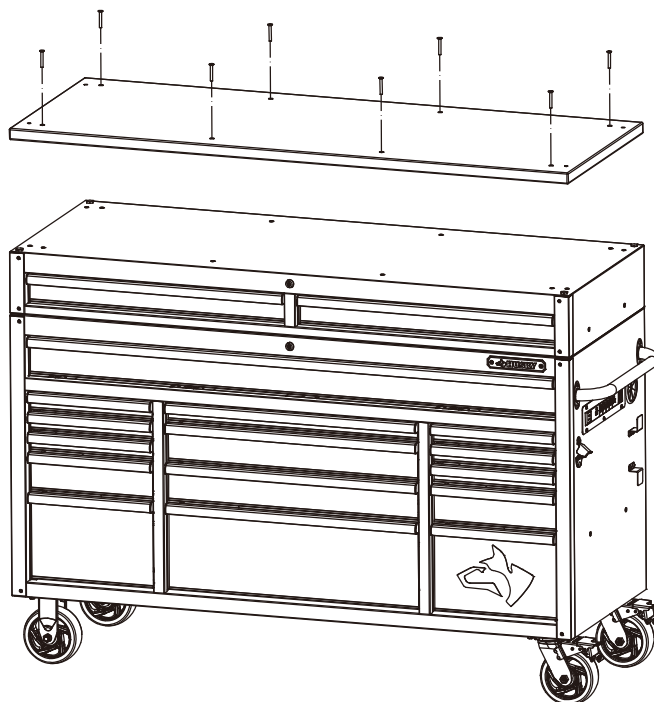


5 Attach the hutch to the riser

1. Place the Hutch on the Riser after the wood top is installed.

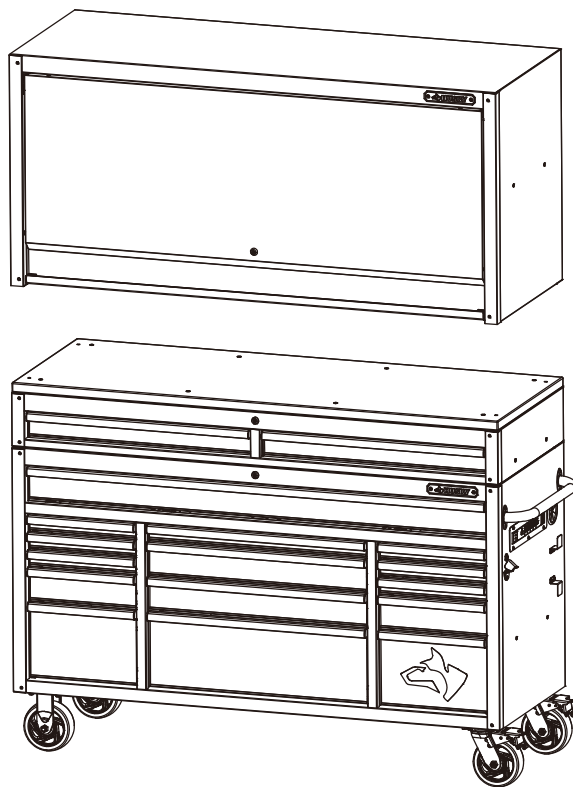


2. Open the Hutch door.
3. Use 4 pcs M6*48mm flange bolts (CC) in the 4 corners and tighten with a 8mm socket or wrench.
4. Using a 3/32 in. drill bit, pre-drill 5 holes into the wood top along the pegboard backwall. Be careful to only drill 1 in. deep.
5. Using an 8mm socket, install 5 pcs. ST5.5*25mm wood self-tapping screws (DD) into the pre-drilled holes in the wood top along the rear of the pegboard. Be careful not to overtighten.

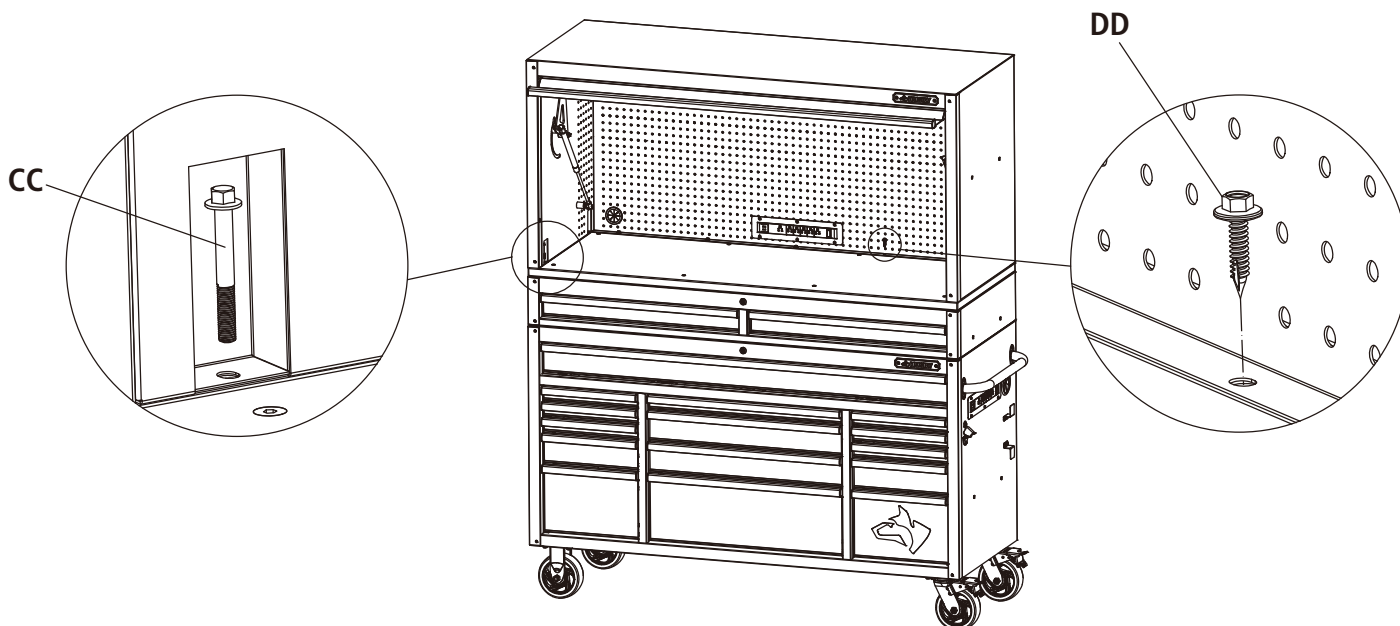


6 Attach the LED light


1. The LED light has been pre-installed on the shelf. Remove the nylon cable ties bundled at both ends of the LED light, and removed the plastic bag.

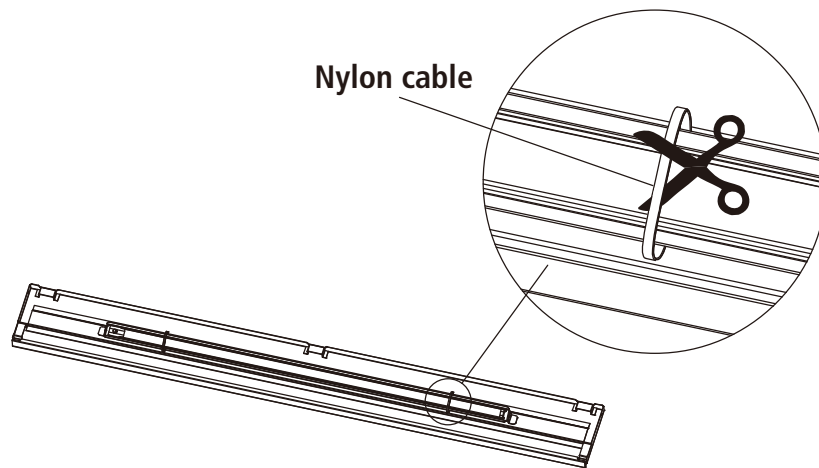

2. Insert the power cable into the end of the LED fixture, and reposition so it's centered on the shelf.
Note: The back of the LED fixture is magnetic and attaches directly to the holder under the shelf.

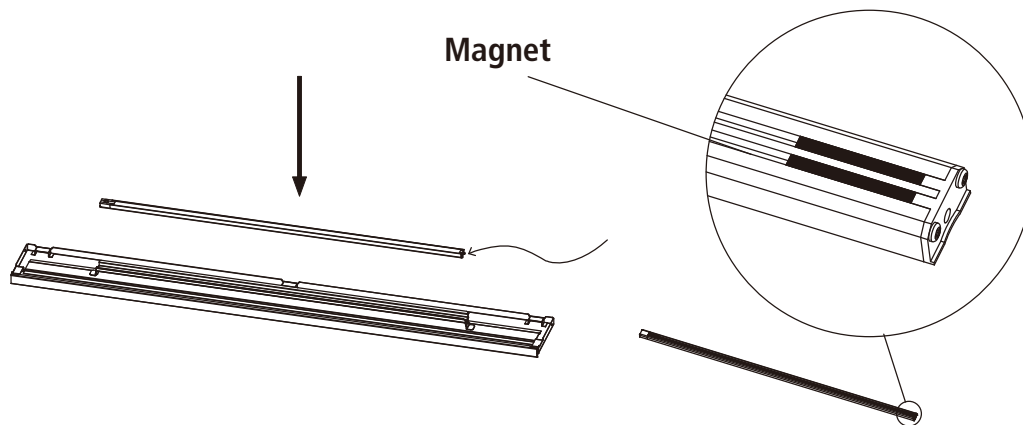


3. Use the Cable clips (II) to attach the power cord from the LED light and route the wire along the backwall to either the USB in the Hutch or the H61MWC15HP cabinet.

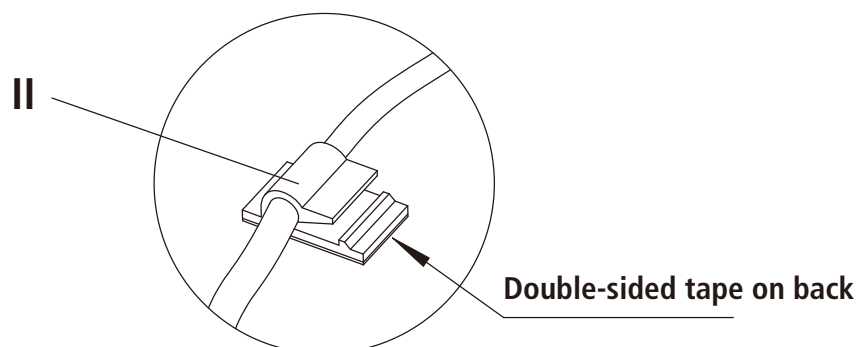


7 Attach the shelf in the hutch

1. Put the shelf into the inner cavity of Hutch at the desired height and fasten the 5 pcs Shelf Clips (EE) to the pegboard to align with the notches in the shelf.

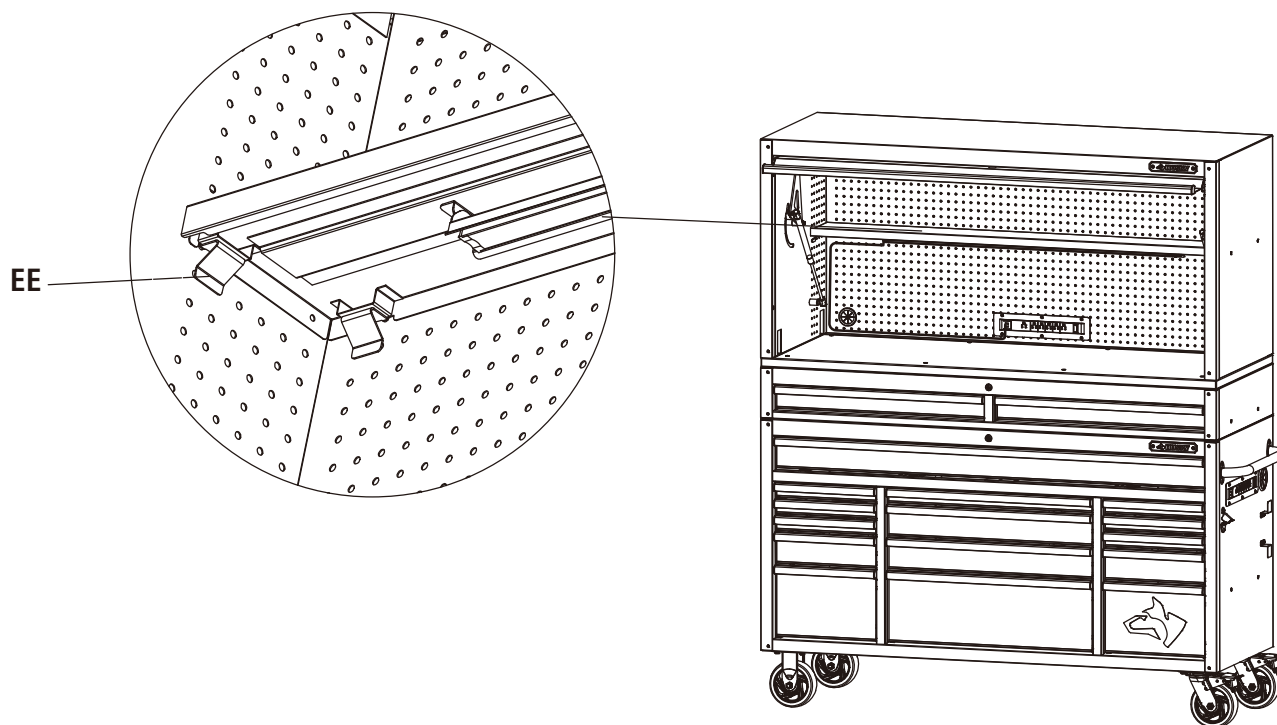

8 Attach the storage hooks

1. Attach the Storage Hooks (FF) for the power cord on the back of the Hutch with 4 pcs Hex socket bottom cap bolt (GG).
2. Tighten with L Hex Key (HH).

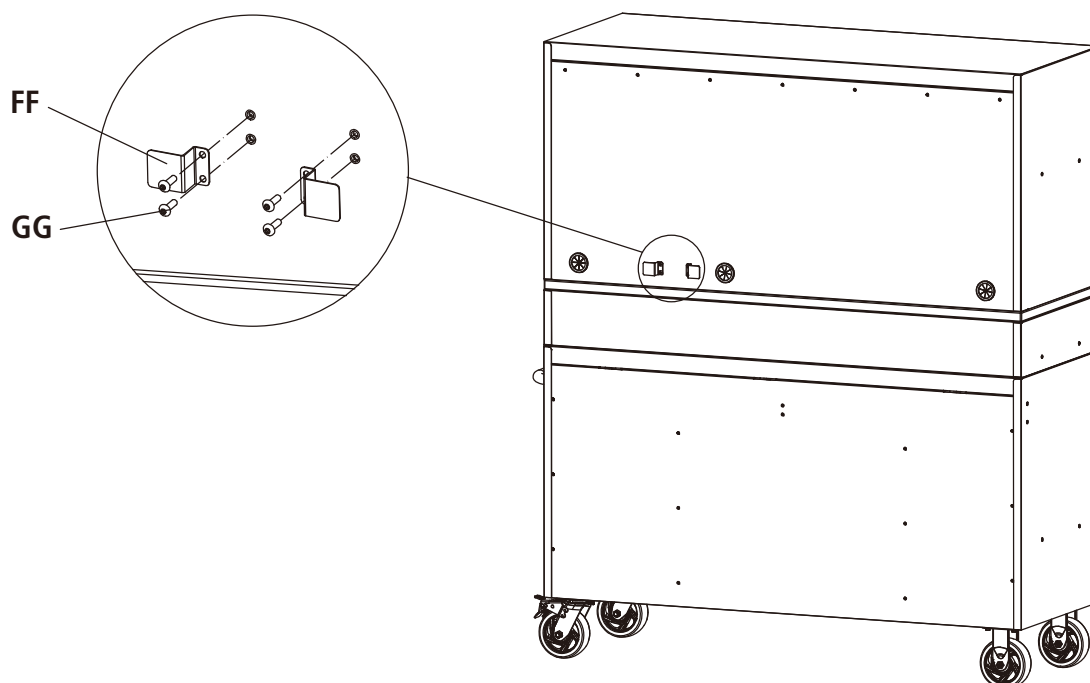


Cordless Power Tool Battery Chargers

- See Charger's Owner's Manual for proper use and care of charger and batteries. Follow all Warnings and Instructions provided with your battery charger.
- Chargers are for use in dry locations only. Do NOT expose to liquid, vapor, or rain. Should your charger become wet, Do NOT attempt to use. Unplug extension cord from supply before handling wet charger or cords.
- Only use chargers and batteries that are intact and operating properly.
- Do NOT touch metal prongs when plugging charger into extension cord.
- Keep flammable materials like paper or rags away from charger, cords or connections.
- Do NOT place or attempt to charge lead acid, car type batteries in Hutch.

Maintenance


- Lubricate the slides semi-annually with high-quality bearing grease.

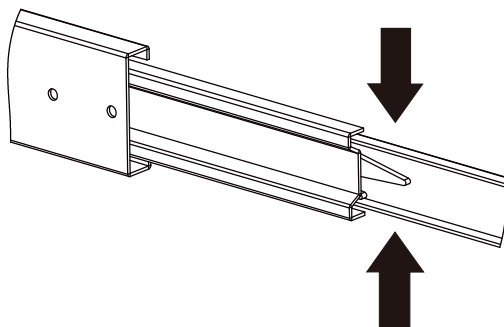

- Periodically clean the drawer fronts, drawer trim, and other surfaces with a mild detergent and water.
- Remove grease and oil with a standard nonflammable cleaning fluid.

Replacement Parts

For assistance with replacement parts please call 1-888-HD-HUSKY.

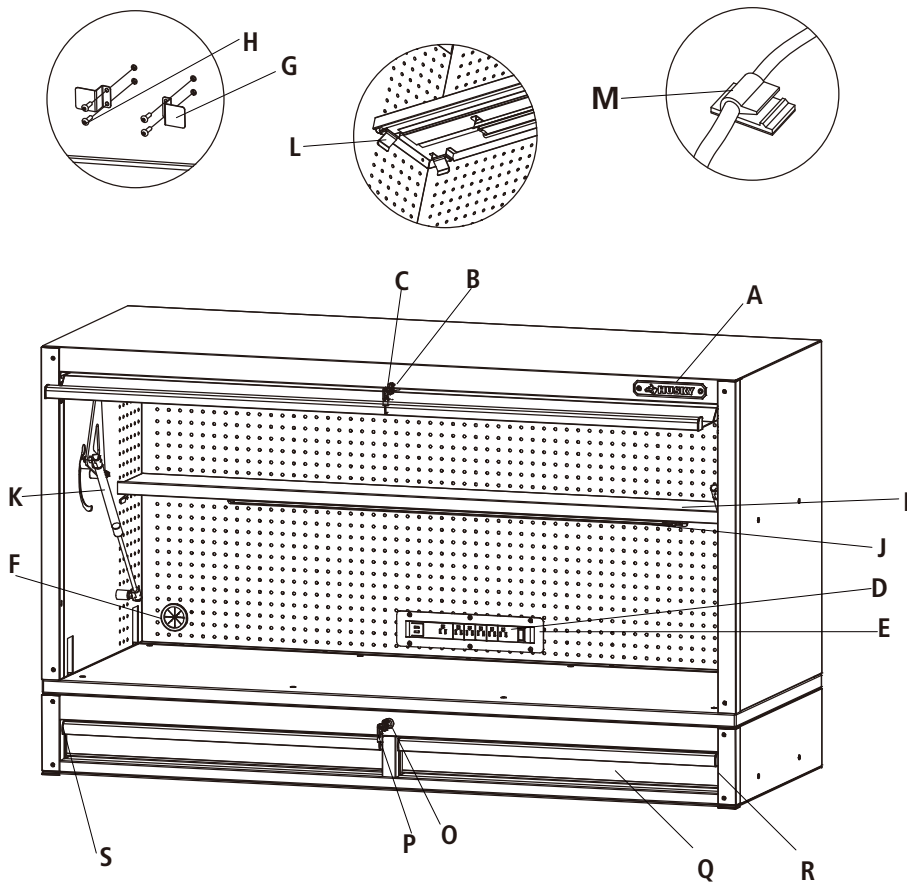

HUTCH

Part	Description	Quantity
A	Badge	1
B	Lock	1
C	Key	2
D	Outlet	1
E	Outlet Panel Cover	1
F	Rubber Grommet	5
G	Storage Hook	2
H	Storage Hook Bolt	4
I	Shelf	1
J	LED light and Cord	1
K	Gas strut	2
L	Shelf clip	5
M	Cable clip	6

RISER

Part	Description	Quantity
O	Lock	1
P	Key	2
Q	Drawer Liner	2
R	Drawer Slide	4
S	Drawer End Cap	4



Questions, problems, missing parts? Before returning to the store call

Husky Customer Service

8 a.m. - 7 p.m., EST, Monday-Friday

9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.