




LSXS26396S QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS/CLEARANCES/WEIGHT		
Α	Depth without Handles	34"
В	Width	35-7/9"
С	Height to Top of Case	69-3/8"
D	Height to Top of Door Hinge	70-1/4"
Е	Back Clearance	2"
F	Depth without Door	29-1/16"
G	Depth (Total with Door Open)	51-1/8"
M	Depth with Handles	36-5/16"
Width (Door Open 90° with Handle)		le) 44-1/5"
Width (Door Open 90° without Handle)		andle) 39-1/4"
Door Edge Clearance with Handle 1-3/8		
Door Edge Clearance without Handle		dle 3/8"
Installation Clearance Sides 1/8", Top 1", Back 2		
Weight (Unit/Carton)		310 lbs / 334 lbs
Car	rton Dimensions (WxHxD)	38-1/2" x 72-1/4" x 37-31/64"

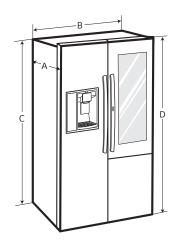

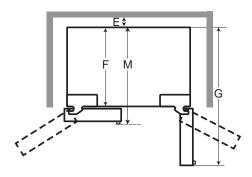

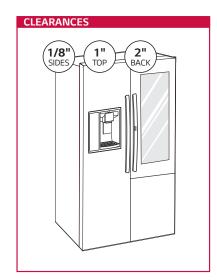








CONNECTING POWER AND SECURING SPACE FOR WATER SUPPLY PIPE

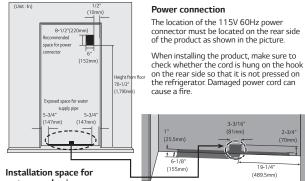

water supply pipe

Place the water hose for ice maker and water dispenser as shown in the picture, and prepare hose to come up from the floor (Copper pipe with diameter of 5/16"(8mm) is recommended for the water hose.) If the water pipe and water hose is located far from the product, bury the water hose on the floor and provide appropriate treatment.

Make sure the location of the water supply pipe is within the marked range.

▲ Before connecting the power, always make sure to ground the product. (If the product is not grounded, the user may be able to feel the electricity due to the minute leakage current when touching the refrigerator door handle or side corner to the product is a few productions.) even when there is no issue with the product.)

Do not ground the product to gas pipe, plastic water pipe or telephone wire etc. It can cause electric shock and explosion.

LG Brand_Side by Sides Fin_1.indd 18