








INSTRUCTION MANUAL

GAS GRILL YF-01JY SERIAL

		
YF-01JY04-A	YF-01JY05-A	YF-01JY06-A
		
YF-01JY04-B	YF-01JY05-B	YF-01JY06-B



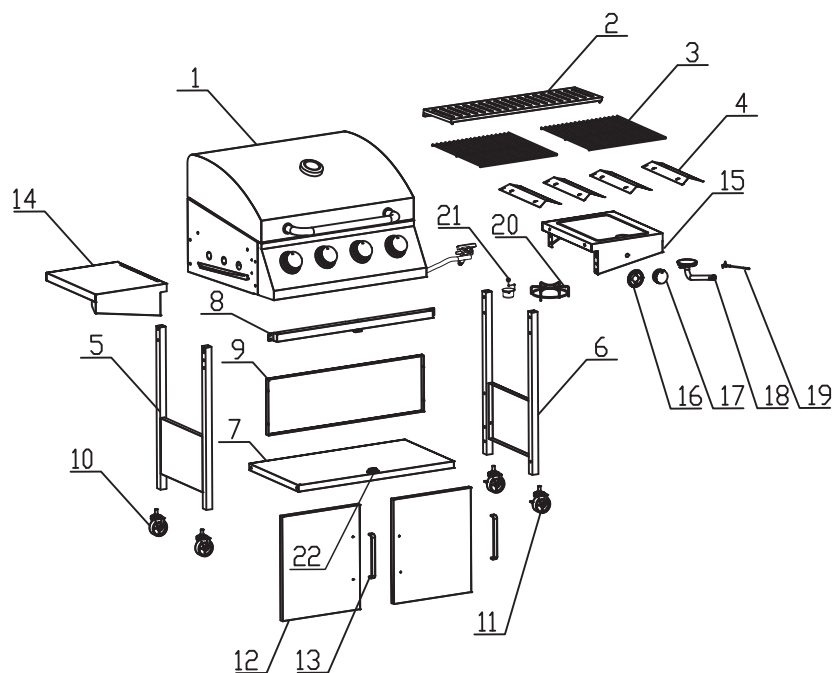









 






 











(Pic. per 4 burners+1 side burner)



SAFETY INSTRUCTIONS


1. Read the instruction manual carefully before use and keep it for future reference. Failure to comply with the instructions can result in death, serious injury or property damage.
2. For outdoor use ONLY! Do not use indoors.
3. Do not use below ground level.
4. The accesible parts can get very hot. Keep small children, elderly people and animals away from the gas grill. Grill glove is adviced.
5. Do not move the product while it is alight.
6. Turn off the gas supply at the gas cylinder when the grill is not in use or after use.
7. Any modification of the product, misuse or failure to follow the instructions may be dangerous and will void the warrenty.
8. Check your gas grill anually for leaks. Check whether the hose connections are tight and leak test them each time you reconnect the gas cylinder.
9. Do not use the gas grill within 1 meter of combustibile materials or surfaces.
10. LP gas cylinders should not be placed directly underneath the grill.
11. Open the hook of the grill before lighting.
12. Do not leave the grill unateended when it is lit.
13. Be careful when opening the hook, as the hot steam inside is released upon opening.
14. Do not cover the grill untill it has completely cooled down.
15. Do not use aerosols near the grill.
16. Do not store or use petrol or other flammable vapours or liquids in the vicinity of this gas grill or any other appliance.
17. If you smell gas, turn off the gas supply at the gas cylinder; extinguish any open flame; open the hood. If still have it, stop use.

PART LIST

No.	Pic.	Qty	No.	Pic.	Qty
1		1	17		1
2		1	18		1
3		2	19		1
4		4	20		1
5		1	21		1
6		1	22		2
7		1	23		1
8		1	A		9
9		1	B		24
10		2	C		2
11		2	D		1
12		2	E		2
13		2	F		2
14		1	G		2
15		1	H		2
16		1			


Assembly

Note: Please do not tight the screws and nuts till all assembly steps completed.

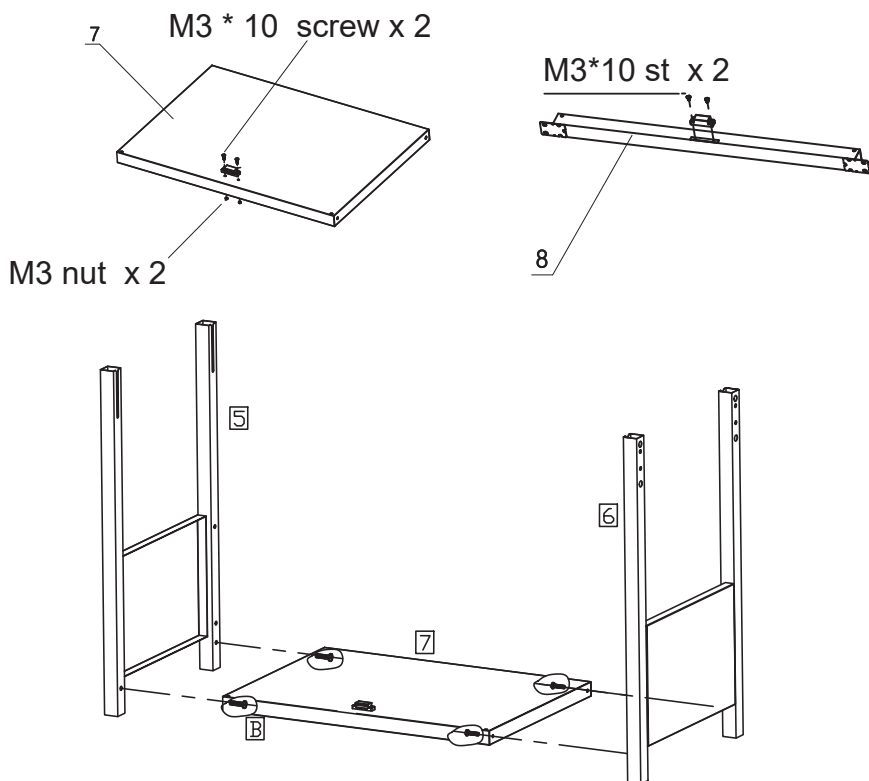


1. Assemble the LH and RH frame (5&6) to bottom shelf (7) with 4pcs M5 screws (B).

Assembly

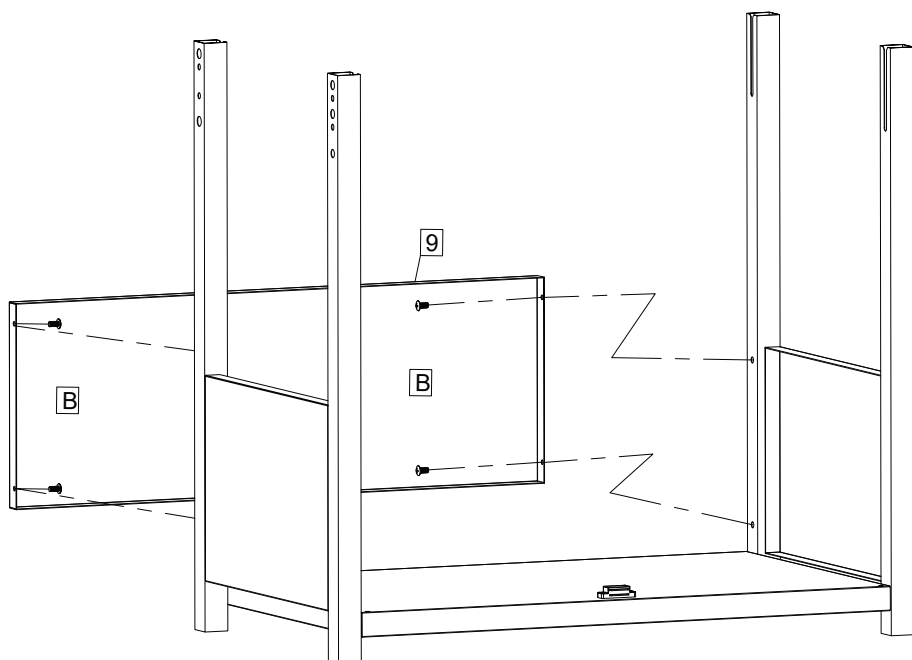


2. Assemble the back shelf (9) to the frames with 4 pcs M5 screws (B).

Assembly

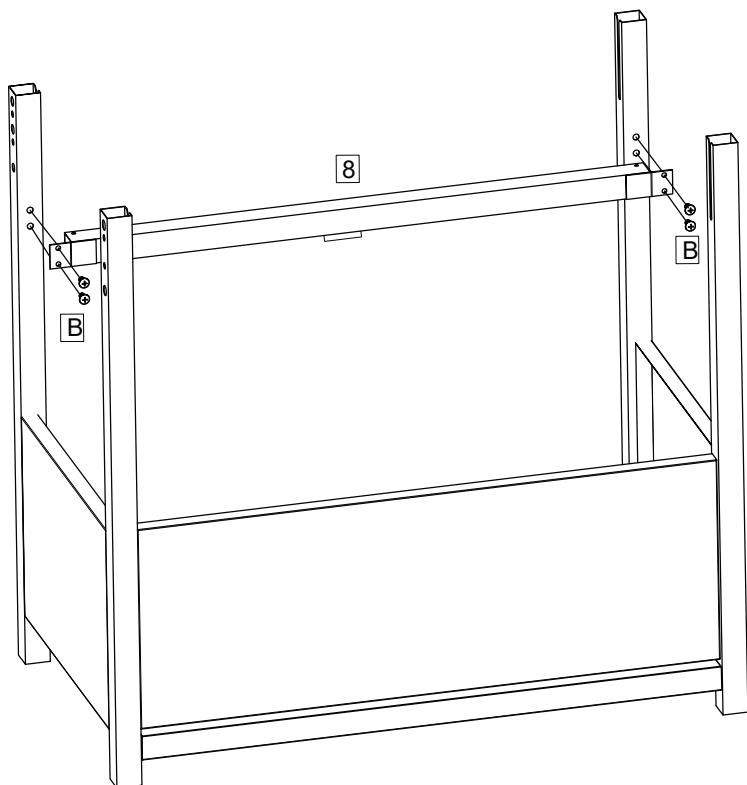


3. Assemble the front beam (8) to the front of frames with 4pcs M5 screws (B).

Assembly

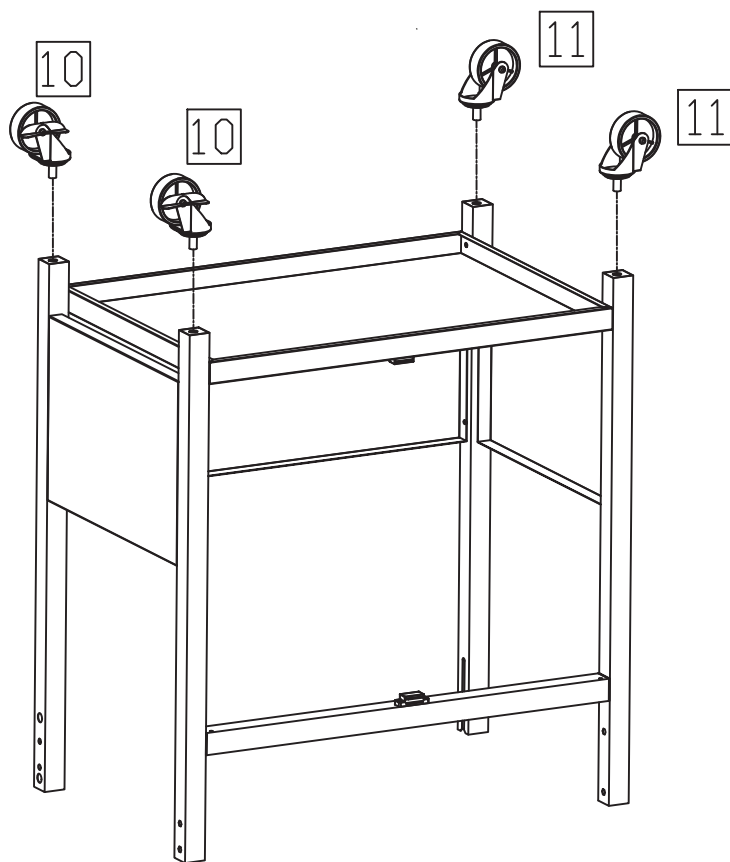

4. Assemble the 4pcs wheels (10&11) to the end of frame legs.
Note: the 2pcs wheels with break (10) are always in the same side.

Assembly

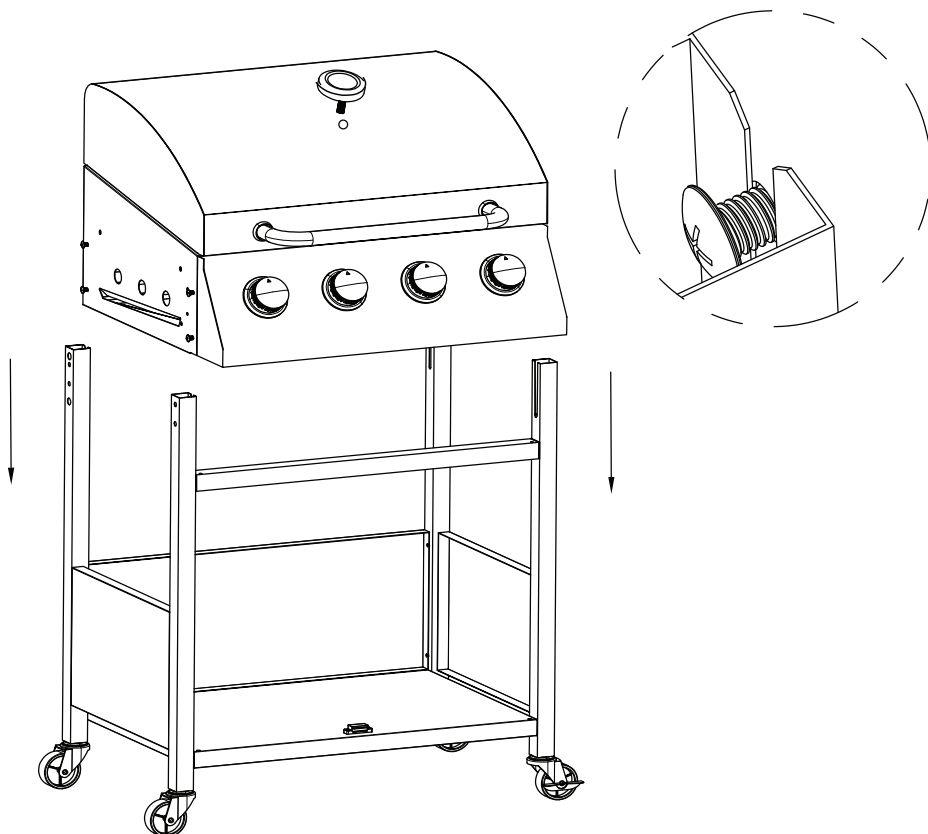


5. The body (1) is slid into the frame legs with 8 pcs pre-assembled M5 screws (See detailed pic.). Tight screws after body slid into position.

Thermometer (23) is fixed to the lid by its own screw.


Note: make sure the 8pcs screws are pre-assembled before sliding.

Assembly

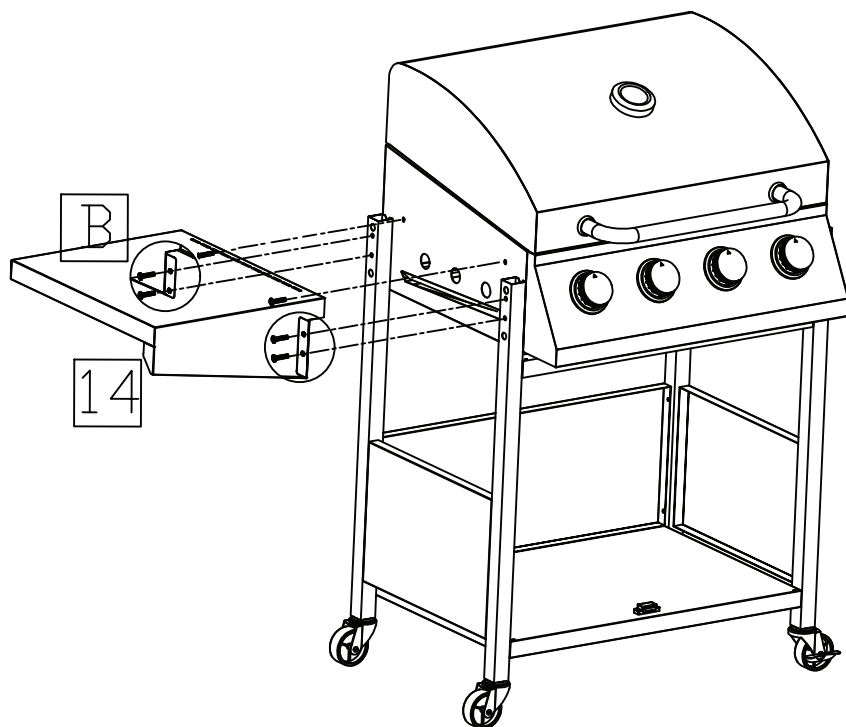

6. LH side shelf (14) is assembled to the body with 6 pcs M5 screws (B).


Assembly

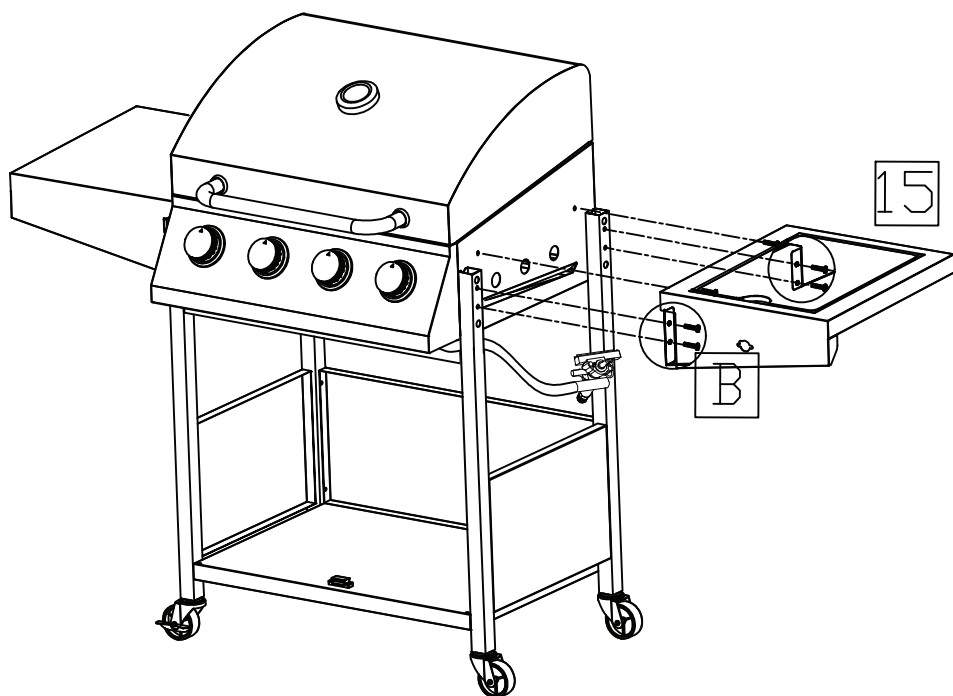

7. RH side shelf (14) is assembled to the body with 6 pcs M5 screws (B).


Note: RH side shelf for A serial. RH side burner shelf for B serial.
Here takes B serial for install instruction explain.

Assembly

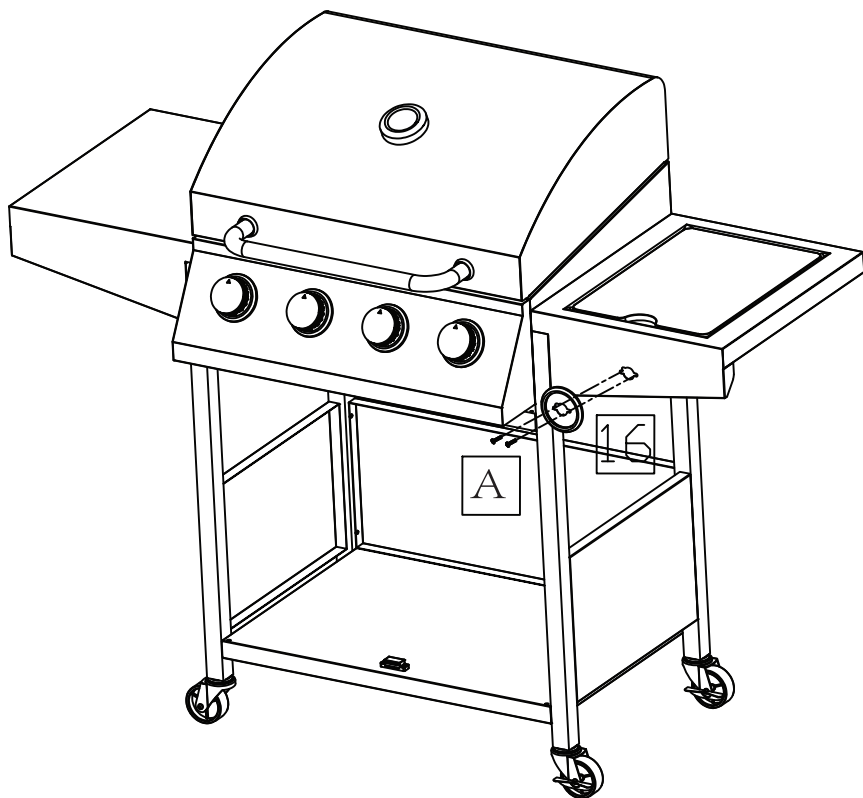

8. Side burner rotary switch base (16), side burner front plate and side burner valve (inside shelf front plate) are assembled together with 2pcs M4 countersunk screws (A).
Note: No need for this step for A serial.


Assembly

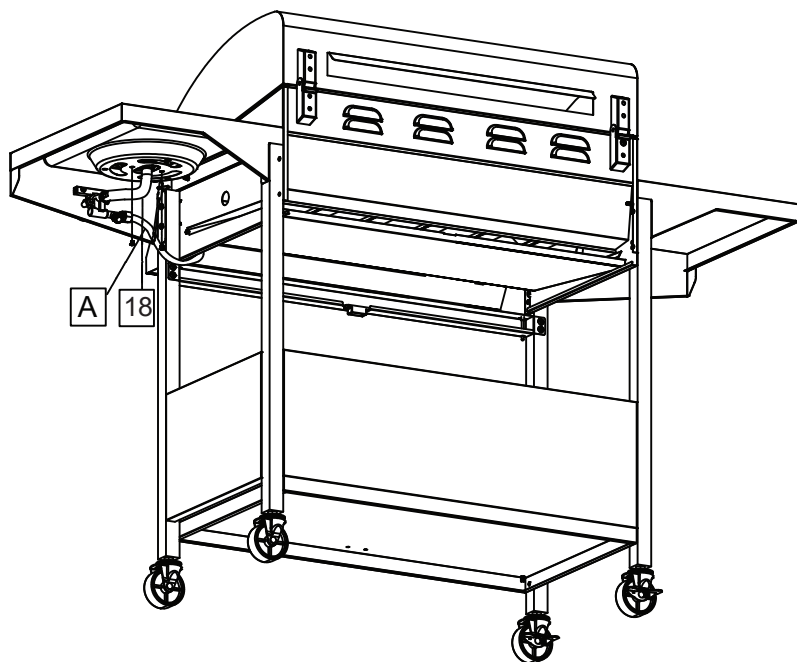

9-1. Side burner (18) is assembled into the side burner shelf with 2 pcs M4 screws (A). Insert the tube to valve connector.


Note: No need this step for A serial.

Assembly

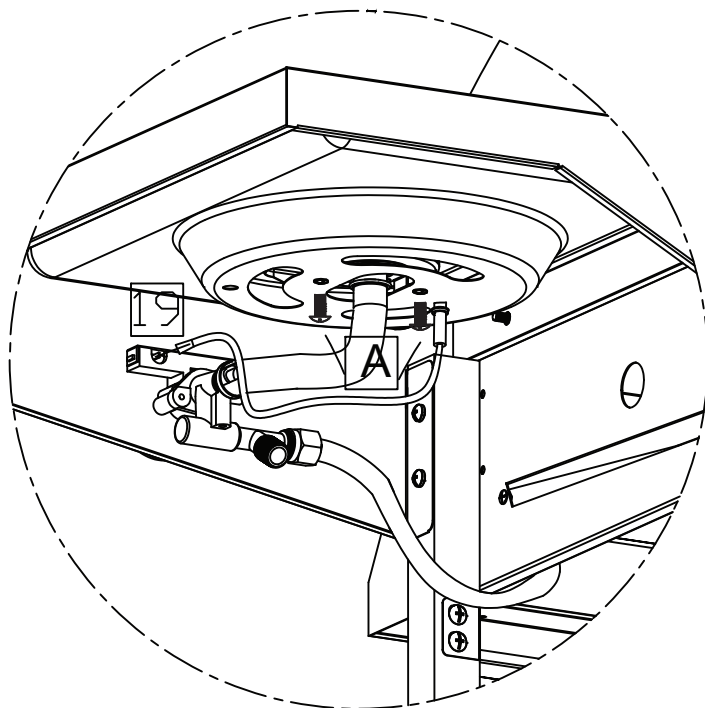

- 9-2. One end of ignition (19) is assembled to the side burner shelf with 1 pc M4 screw (A) and 1pc M4 nut (D). The other end is assembled to the valve connector.
Note: No need this step for A serial.


Assembly

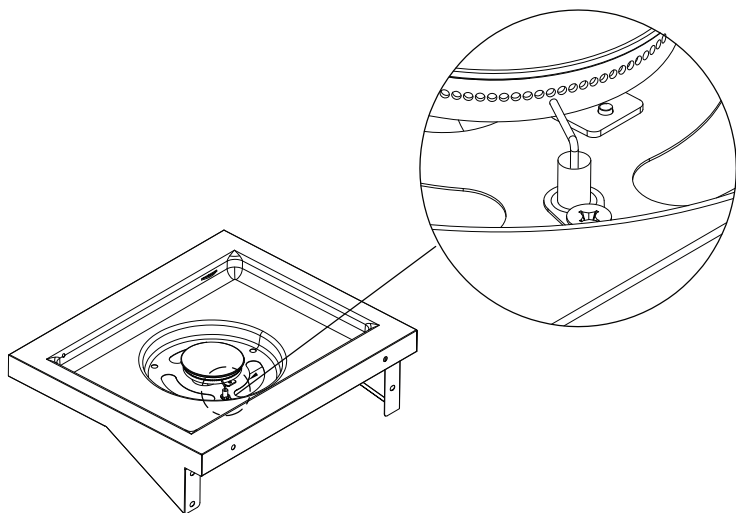

NOTICE

In order to succeed in lighting the side burner, make sure the ignition needle's head is directed at one of side burner's gas hole.


Assembly

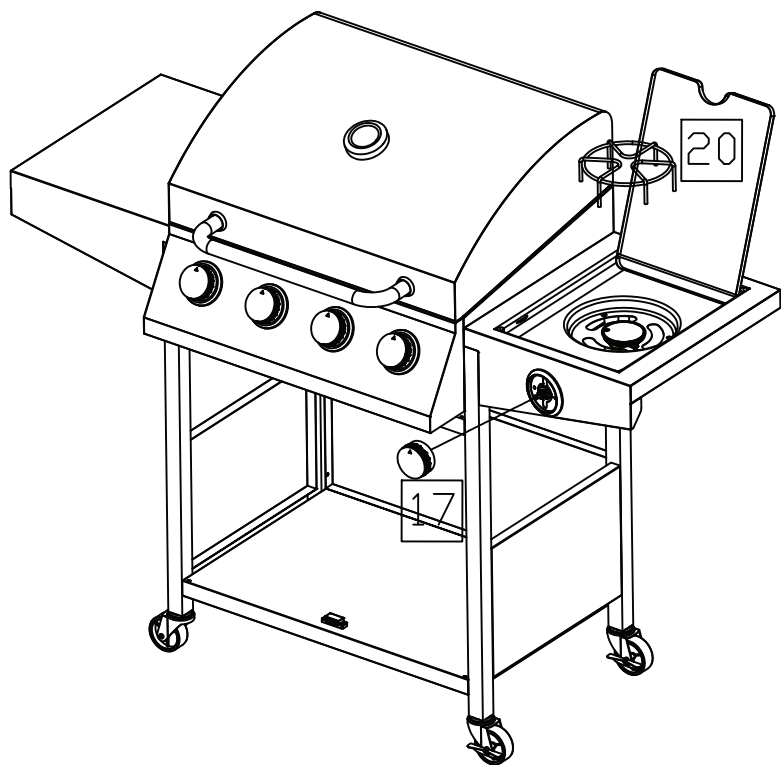

10. Decorated knob (17) is assembled to side burner's front plate. Grate (20) is putted on side burner shelf, with 3 longer legs into the holes.


Note: No need this step for A serial.

Assembly

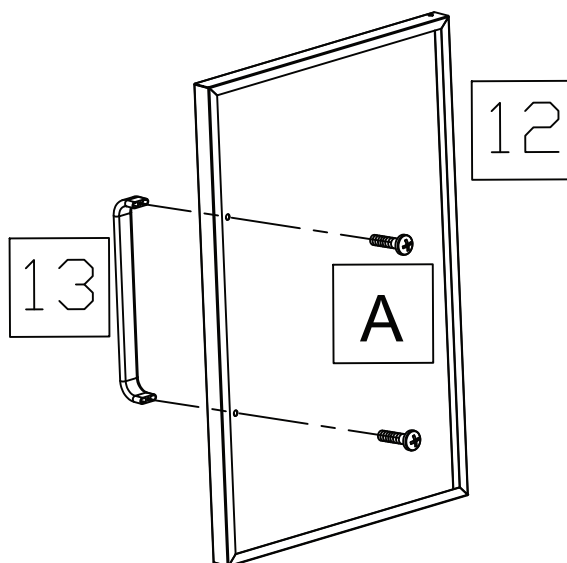


11. Handles (13) are assembled to front doors (12) with 4pcs M4 screws (A). Totally 2 pcs doors.

Assembly

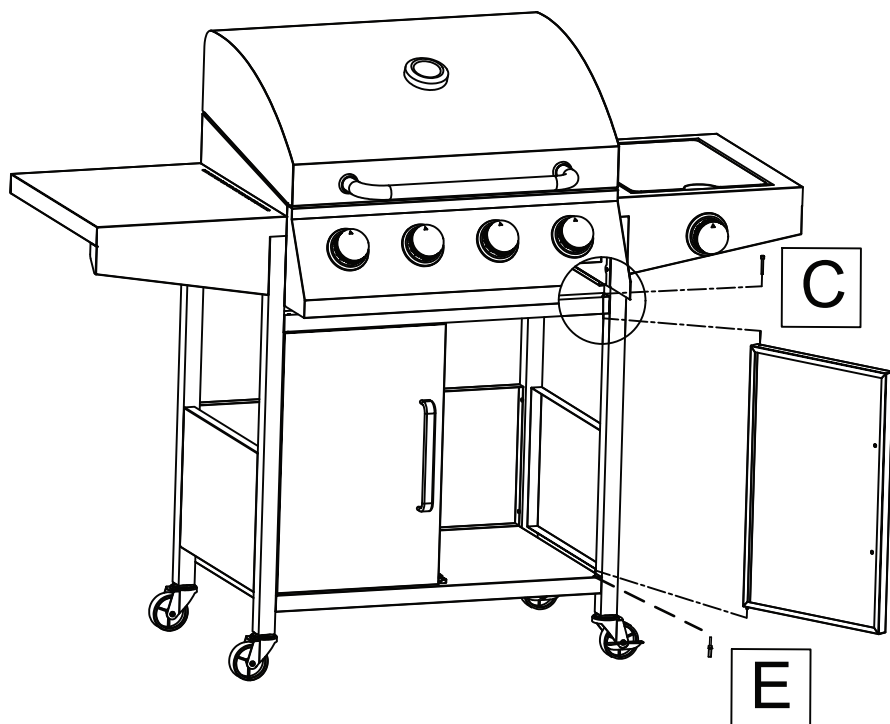


12. Doors are assembled to frames' front legs with top and bottom pins (C&E).

Assembly

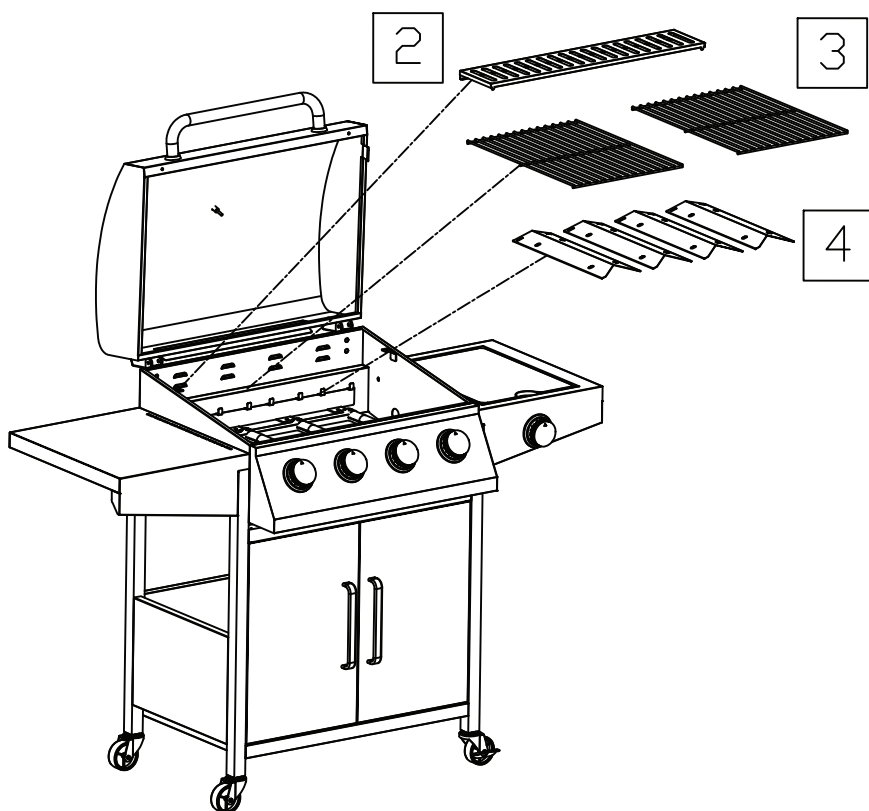

13. Warming grid (2), cooking grids (3) and heat tents (4) are fixed into the body.

Assembly

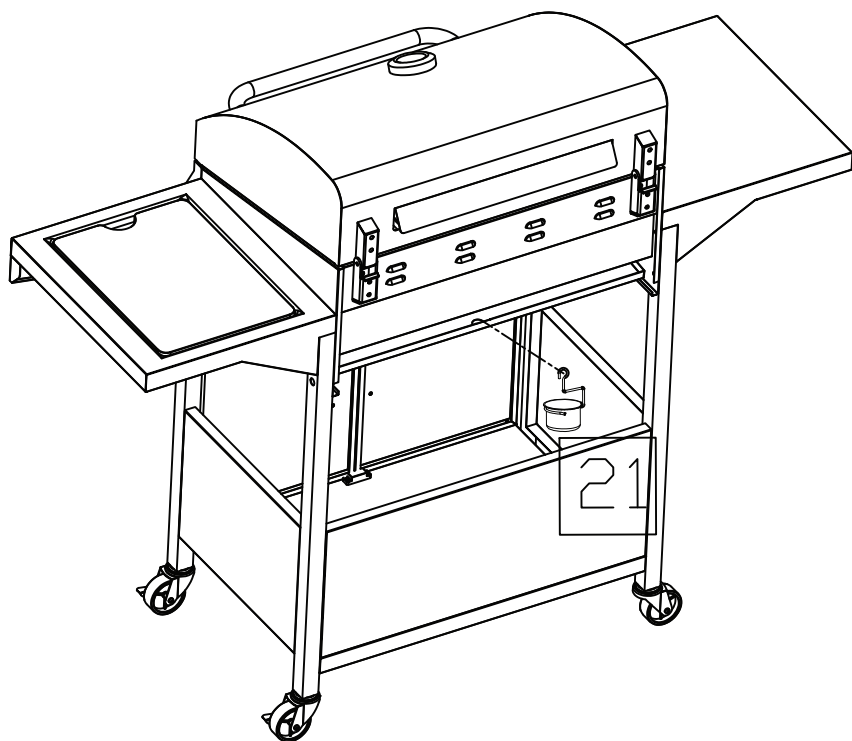

14. Oil cup (21) is assembled to the oil pan.

Tight all screws before use
Assembly completed