

OPERATING

Operating

Determining Weight for Cart

CAUTION: Avoid injury! Excessive towed load can cause loss of traction and loss of control on slopes. Stopping distance increases with speed and weight of towed load.

Total towed weight must not exceed combined weight of pulling machine, operator and front ballast, or the maximum capacity of the cart.

The following maximum loaded cart weight capacities are the average weight of each cart model loaded with dry sand leveled with the top of the cart.

Model Cart	Loaded Weight Capacity
7P	226 kg (500 lb)

CAUTION: Avoid injury! If additional weight is required when towing a cart, add weight at or forward of the rear wheels. Adding weight behind the rear wheels can affect machine steering.

Towing cart capacity will vary with weight of towing machine and operator. Add the weight of your machine to operator weight to find the maximum capacity of the towing cart.

With all cart usage, the cart load should be reduced when operating on slopes or slippery surfaces to maintain stability.


Example:

If Towing Machine Weighs:	225kg (500 lb)
Add Your Weight:	90kg (200 lb)
Combined Weight Equals	315kg (700 lb)

To maintain stability using the cart in this example, you cannot safely carry more than 315 kg (700 lb) without first adding additional ballast to the towing machine.

Using Cart Pocket

CAUTION: Avoid injury! The cart pocket is not designed to support operator weight. Do not attempt to use the cart pocket as a step.

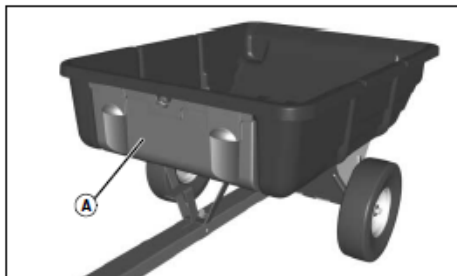

MX27746

Use the pocket (A) on the front of the cart to store gloves or tools you may need while using the cart.

Check to be sure the pocket is latched in the closed position before dumping the cart to avoid objects falling out.

Unloading Cart

1. Park machine safely. (See Parking Safely in the Safety section in the machine operator's manual.)

CAUTION: Avoid injury! Before dumping cart:

- Park machine safely.
- Before backing up, make sure area is clear of bystanders, especially children.
- Make sure cart is installed to the towing machine.
- Evenly distribute load before releasing lock bar.
- Ensure operator is a safe distance when dumping cart! The lock bar to release the bed has the potential to release quickly.

2. Move cart lock bar forward to release cart box.
3. Tilt cart box back to unload cart.
4. Push cart down and move cart lock bar toward cart and lock into place.

Service

General Maintenance

NOTE: Unload cart before performing any maintenance or service.

- Wash cart bed after each use to avoid damage to bed or hardware.
- Check tire pressure with an accurate gauge, add or remove air if necessary.

Specifications

Model 7P Cart

Maximum Towing Speed	13 kph (8 mph)
Bed Capacity (Heaped)	.20 m ³ (7 cu ft)
Maximum Load	226 kg (500 lb)
Maximum Tongue Weight	45 kg (100 lb)
Empty Weight	21 kg (65 lb)