



# Stainless Steel Hot Dog Machine

## User Manual

---

The “Roller Dog” stainless steel hotdog maker was designed by incorporating the advantages of both home use and commercial rollers. It has many valuable features including an innovative design, quality construction, convenient operation, and quick heating elements to name a few....

## I. Specifications

MODEL #	VOLTAGE	WATTAGE	TEMP RANGE	ROLLER QTY	DIMENSIONS
RD12SS	120V	1000W	40° - 475°F	5	22.8" x 10" x 6.7"
RD18SS	120V	1400W	40° - 475°F	7	22.8" x 13" x 6.7"
RD24SS	120V	1800W	40° - 475°F	9	22.8" x 16" x 6.7"
RD30SS	120V	2200W	40° - 475°F	11	22.8" x 18.9" x 6.7"

## II. Safety

### Important Precautions to Remember:

- A. NEVER immerse motor base in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth on the canopy or base unit.
- D. NEVER use a scouring pad on the canopy or base unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER place anything other than what is intended to be cooked on the unit.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
- I. DO NOT place motor base in dishwasher.
- J. Keep out of reach of children.
- K. Be sure to have the drip tray in place when using the rollers to cook hotdogs.
- L. This appliance is NOT A TOY.
- M. This appliance is not intended for use by young children, or infirm persons, without supervision.
- N. Young children should be supervised to ensure that they do not play with the appliance.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before operating this appliance.

1. Avoid contact with moving parts.
2. Any appliance with a damaged cord or plug, or damaged in any manner, should not be operated.
3. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. These may cause injuries.
4. When any appliance is used by or near children, adult supervision is strongly recommended.
5. Do not use outdoors in inclement weather.
6. Do not place on or near a hot gas or electric burner, or in a heated oven.
7. To protect against electrical shock, DO NOT immerse cord, plugs or any part of the motor base in water or other liquids.
8. This appliance should not be used for any purpose other than stated in the instructions accompanying this appliance.
9. DO NOT leave unit unattended while in use or when plugged into an outlet.
10. DO NOT HANDLE THE ROLLERS WHEN IN MOTION.
11. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
12. DO NOT insert roller assembly while motor is running. Turn unit OFF first. It is preferable to be unplugged while inserting roller assembly.
13. Unplug from outlet when not in use and before removing parts for cleaning.
14. ROLLER ASSEMBLY MUST BE INSERTED CORRECTLY IN ORDER TO ROTATE ROLLERS.
15. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance. Electrical extension cords can be used if care is exercised in their use.
16. Keep hands and foreign objects out of roller assembly while operating. Check to insure proper rotation of rollers for even cooking.

### III. Transporting and Storage


During transport, the roller should be handled and packed with care. Be careful not to shake or damage the unit. Store the roller in a dry, dust free environment.

### IV. Power Specifications

- a.) The input voltage must be 120v 60hz USA power.
- b.) Use a GFCI 120v outlet, or surge protector.
- c.) Be sure all electrical connections and wiring meet safety codes and standards.

### V. Assembly

- a.) Take the hotdog machine, glass cover, and sideboards carefully out of the packaging.
- b.) Attach the glass cover to the right and left sideboards with the provided nuts and screws. (*Figure A*)
- c.) Put the completed cover onto the main machine body and fasten with the provided screws. (*Figure B*)

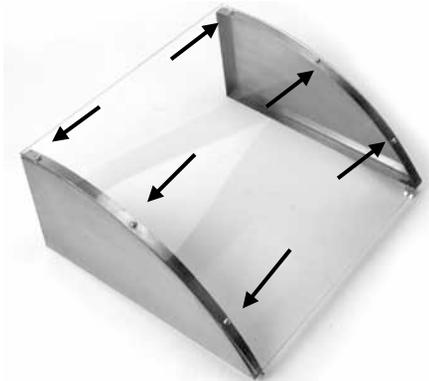

*Figure A*



*Figure B*


## VI. Operation

- a.) Place a small amount of vegetable oil on both ends of the rollers to insure they move smoothly.
- b.) Turn on the power switch.
- c.) Set the temperature control knob to your proper cooking temperature. The heating indicator light will turn on as the element rises in temperature. (*Figure C*) The element and indicator light will shut down when the element reaches the desired temperature. When the temperature drops the element will re-engage and the heating indicator will turn back on. This function works in cycles and will save energy while insuring a perfectly cooked hot dog.

There are two heat control switches and indicators on the front panel of the unit. These control the heating elements for the two heating sections. The two elements can be controlled independently, allowing you to set one element to a proper cooking temperature and the other to a warming/storage temperature.

- d.) Turn off the power switch when you are done cooking.

*Figure C*

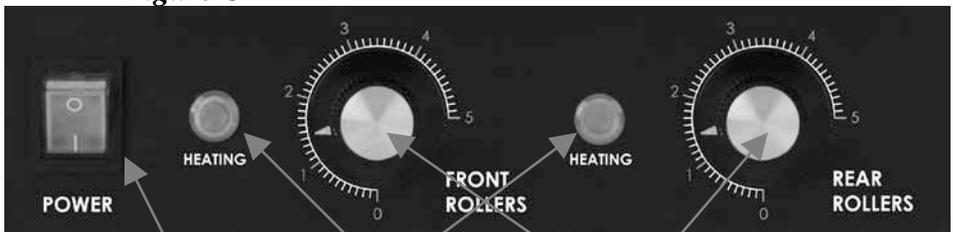

*Power Switch*

*Heating Indicators*

*Temperature Controls*

## **VII. Cleaning and Maintenance**

- a.) Be sure to turn off the power and unplug the unit during maintenance and cleaning.
- b.) The rollers are coated in a nonstick material for easy cleaning. Use a warm damp cloth or other soft material to clean. Rough or abrasive cleaners and materials may damage the nonstick coating.
- c.) DO NOT submerge the rollers or try to clean the unit with water. This may cause serious damage.

## **VIII. Accessories Included**

- 1.) Instruction Book
- 2.) Grease Tray



[productsupport@funtimepopcorn.com](mailto:productsupport@funtimepopcorn.com)

or call 1-800-629-3325 (option 4) Monday -Friday 8am to 6pm PST

This manual provides information regarding the operation and maintenance of these products. We have made every effort to ensure the accuracy of the information in this manual. We reserve the right to change this product at any time without prior notice.