
2.4G Wireless Dimming & CCT Tunable Remote Controller

THE HANDHELD REMOTE CONTROLLER



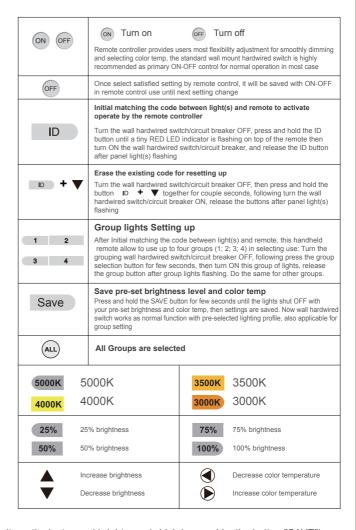

Power the light off then power it on, the last saved brightness (which is saved by the button "SAVE") and the last saved color temperature (which is saved by the button "SAVE" or "OFF") will be displayed by default. The defaulted factory setting of the light is 100% brightness and 4000K.

2.4G Wireless Dimming & CCT Tunable Remote Controller

THE WALL TYPE REMOTE CONTROLLER



ON OFF	ON Turn on OFF Turn off It has much flexibility for selecting dimming & color temp change. Can fit in a 1-gang box as wall switch for small individual/partition area or lighting cover area w/o hardwired switch & standard dimmer but circuit breaker is recommended if available for the setting up			
ON	Dual functions: 1. Momentary press to ON the light as normal; 2. Press and hold few seconds until lights shut OFF to SAVE the pre-setting profile for operating			
OFF	Momentary press it to shut OFF the light			
ON + OFF	Initial code learning between light and remote to activate the unit Turn the wall hardwired switch/circuit breaker OFF, press-hold ON & OFF buttons together till RED LED flashing on top of the remote; turn ON the wall switch/circuit breaker, release buttons after panel light(s) flashing If you need to use both hand-hold controller and wall controller for the same light, please don't use this function, directly use the following copy function.			
A	Built on RF remote dimmer (w/o any additional wirings & dimmer)			
ССТ	Keep momentary pressing this button to select color temps between 3000K to 5000K in cycle			

The matching method of hand-hold remote controller and wall-type remote controller, the wall controller can copy some of the functions of the hand-hold controller by the following method.

NO	Grouping	Hand-hold controller	Wall-type controller
1	1	1 + ID	ON+CCT
2	2	2 + ID	ON+CCT
3	3	3 + ID	ON+CCT
4	4	4 + ID	ON+CCT
5	ALL	ID	ON+CCT

After 10s of each operation the controller will enter standby power saving mode. If you need to make adjustments, simply press the "ON" button, the indicator will flash to show it is working. (If the controller is under working mode, the indicator will flash no matter which button is pressed).

Power the light off then power it on, the last saved brightness (which is saved by the button "ON") and the last saved color temperature (which is saved by the button "ON" or "OFF") will be displayed by default. The defaulted factory setting of the light is 100% brightness and 4000K.