

# Cuisinart® INSTRUCTION BOOKLET

Recipe  
Booklet  
Reverse Side



**Cuisinart® Microwave Oven**

**CMW-100**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IB-6798

---

# IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

When using electrical appliances basic safety precautions should be followed including the following:

1. Read all instructions before using the appliance.
2. Read and follow the specific warning: “PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY,” page 3.
3. This appliance must be grounded. Connect only to properly grounded outlet. See “GROUNDING INSTRUCTIONS” found on page 3.
4. Install or locate this appliance only in accordance with the provided installation instructions, pages 7-8.
5. Some products such as whole eggs and sealed containers – for example, closed glass jars – are able to explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when it is used by children.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service technicians. Contact 1-800-726-0190.
10. Do not cover or block any openings on the appliance.
11. Do not store or use this appliance outdoors.
12. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
13. Do not immerse cord or plug in water.
14. Keep cord away from heated surfaces.
15. Do not let cord hang over edge of table or counter.
16. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
17. To reduce the risk of fire in the oven interior:
  - a) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c) If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
18. Liquids such as water, coffee, or tea can be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.**
19. To reduce the risk of injury to persons:
  - a. Do not overheat the liquid.
  - b. Stir the liquid both before and half-way through heating it.

- c. Do not use straight-sided containers with narrow necks. Use a wide mouth container.
- d. After heating, allow the container to stand in the microwave oven for at least 20 seconds before removing the container.
- e. Use extreme care when inserting a spoon or other utensil into the container. This may also cause delayed eruptive boiling.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (for example, make sure that it is not bent); hinges and latches (for example, make sure that they are not broken or loosened); door seals and sealing surface.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

If the microwave unit is not kept clean, its surface could be degraded and lead to a hazardous situation.

## SPECIAL CORD SET INSTRUCTIONS


### DANGER - Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

### WARNING - Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

## GROUNDING INSTRUCTIONS

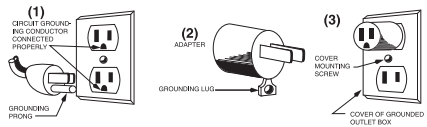

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord with a grounding wire and grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or an extension cord should not be used unless the following precautions are followed (see 3, below).
3. If a long cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should

---

be at least as great as the electrical rating of the appliance.

- The extension cord must be a grounding-type 3-wire cord.
- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

## CONTENTS

Important Safety Instructions.....	2
Precautions to Avoid Possible Exposure to Excessive Microwave Energy .....	3
Special Cord Set Instructions .....	3
Grounding Instructions.....	3
Introduction .....	4
Important Safeguards.....	4
Specifications .....	5
Containers .....	5
Setting up your Oven .....	5
Materials You Can Use in Microwave Oven .....	6
Materials to be Avoided in Microwave Oven .....	7
Installation .....	7-8
Control Panel and Features .....	8
Operation.....	8-10
Pre-Set Auto Menu Cooking Chart.....	10-11
Troubleshooting.....	11
Warranty .....	12

## INTRODUCTION

This is not your ordinary microwave oven. It has more – inside and out. Inside it's solid, nonporous, easy-to-sanitize stainless steel. Outside you'll find 25 preprogrammed control options. It performs all the standard reheating and defrosting microwave tasks with ease, setting time and temperature for specific items. But it is also large enough, and smart enough, to let you cook from scratch. Check out the recipes for cooking fish and rice, steaming vegetables, or roasting garlic. And don't miss the 2, 4 and 6 slice bacon buttons. Cook healthier, cook faster, cook easier... with the Cuisinart stainless steel microwave.

## IMPORTANT SAFEGUARDS

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. The oven must be placed on a level surface.
2. The glass turntable and turntable assembly must be in the oven during cooking. Handle the glass turntable carefully and place cookware on it gently to avoid possible breakage.
3. Incorrect use of browning dish may cause the turntable to break. See "Materials you can use in a microwave oven," page 6.
4. Use only the correctly specified bag size when using the preset popcorn program.
5. The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
6. Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
7. Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
8. Do not heat baby bottles or baby food in the microwave oven. Uneven heating/hotspots may occur and could cause injury.
9. Do not heat narrow-necked containers, such as syrup bottles.
10. Do not attempt to deep-fry in your microwave oven.
11. Do not attempt home canning in this microwave oven, as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Do not use this microwave oven for commercial purpose. This microwave oven is made for household use only.

13. To prevent delayed eruptive boiling of hot liquids and beverages or scalding yourself, stir liquid before placing the container in the oven and again halfway through cooking time. Let it stand in the oven for a short time and stir again before removing the container.
14. Failure to maintain the oven in a clean condition could lead to deterioration that could adversely affect the life of the appliance and possibly result in a hazardous situation.
15. Do not let cord hang over edge of table or counter.
16. When cleaning door and oven surfaces use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.
17. Liquids, such as water, coffee, or tea can heat beyond the boiling point without appearing to be boiling. This is called delayed eruptive boiling. When the container is removed from the oven, there is a danger that very hot liquids could suddenly boiling over when the container is disturbed or a spoon or other utensil is inserted into the liquid.

## SPECIFICATIONS

<b>Model:</b>	<b>CMW-100</b>
Rated Voltage:	120V~ 60Hz
Rated Input Power:	1450W
Rated Output Power:	1000W
Oven Capacity:	28L
Turntable Diameter:	12.40 inches
External Dimensions (WxHxD):	20.1x17.3x11.1 inches
Approximate Net Weight:	33.5 lbs.

## CONTAINERS

### CAUTION: Personal Injury Hazard

Tightly-closed containers could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the charts on pages 6 and 7 of materials you can use in microwave oven or to avoid using in your microwave oven. There may be certain non-metallic materials that are not safe to use for microwaving. If in doubt, you can test the material/container in question following the procedure below.

### Material/Container Test:


1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the material or container in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the material or container. If it is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

## SETTING UP YOUR OVEN

### Parts and Accessories

Remove the oven and all contents from the carton and oven interior.

1. Control Panel
2. Turntable Shaft
3. Turntable Assembly
4. Glass Turntable
5. Observation Window
6. Door Assembly
7. Safety Interlock System

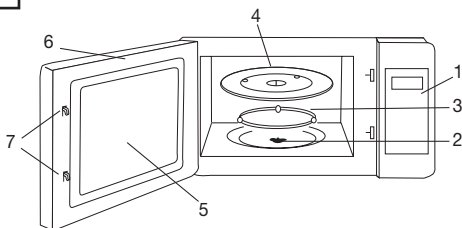

---

## MATERIALS YOU CAN USE IN MICROWAVE OVEN

### ARCING:

Sparks or electric flashes that crackle or pop. Arcing can produce heat that is quite intense and can damage the interior of the microwave or containers being used in the microwave. It can also cause fire.


Arcing occurs when metal containers are used in the microwave and can also occur with the use of metal skewers, metal clamps, or twist ties for plastic bags. To prevent arcing, use these charts (below and following page) to determine which materials are microwave-safe, or follow instructions from container/wrap manufacturer.

Aluminum foil	Shielding only. Small smooth pieces may be used to cover thin parts of the poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from the oven walls.
Browning dish	Use a browning dish in this microwave oven only if your browning dish is supplied with a microwave trivet that will lift the browning dish $\frac{3}{16}$ inch (5mm) about the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. Use tempered glass only. Jars for canning are tempered and microwave-safe.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates & cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. They should be labeled for use in microwave – with no color/dye.
Paper towels	Use to cover food for reheating and for absorbing fat. Use with supervision for short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or as a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave-Safe". Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be split, pierced or vented as directed by package instructions. Do not reuse plastic containers from carry-out foods or frozen foods.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. Vent or pierce before cooling.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture inside.

# MATERIALS TO BE AVOIDED IN MICROWAVE OVEN

Aluminum tray	May cause arcing. Transfer food to microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food to microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

## TURNTABLE INSTALLATION

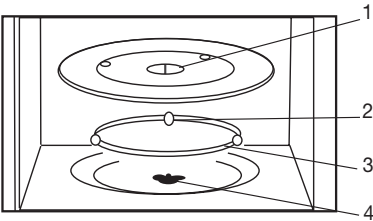

1. Hub (on bottom of glass turntable)
2. Glass Turntable
3. Turntable Assembly
4. Turntable Shaft

Never place the glass turntable upside down. Free movement of the glass turntable should never be restricted.

Both glass turntable and turntable assembly must always be used during cooking.

All food and containers of food are always placed on the glass turntable for cooking.


Do not use another type of round tray to replace original part. If glass turntable or turntable assembly cracks or breaks, a replacement can be ordered from Customer Services as a replacement part. See page 12 for details.

## COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Remove any protective film found on the microwave oven cabinet surface.

Do not remove the mica cover that is attached to the oven cavity. This is found on the right inside wall of the microwave and protects the magnetron.

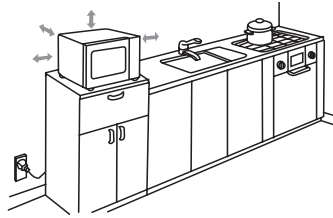

1. Select a level surface that provides enough open space for the intake and/or outlet vents.  
A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.
  - a. Leave a minimum clearance of 12 inches (30cm) above the oven.
  - b. Do not remove the legs from the bottom of the oven.
  - c. Blocking the intake and/or outlet openings can damage the oven.
  - d. Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

## CONTROL PANEL AND FEATURES

1. AM/PM
2. Memory
3. Kitchen Timer
4. Auto Defrost
5. Time Defrost
- 6 Auto Menu
7. Number Keys
8. Clock/Pre-Set
9. Power
10. Stop/Clear

Clears all previous settings pressed before cooking starts. During cooking, press once to stop oven; twice to stop and clear all entries.

11. Start/+30 seconds

## OPERATION


### 1. Power Level

Ten power levels are available.

Level	Power	Display
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7
6	60%	PL6
5	50%	PL5
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1

**Note:** If you want to set the power level to something other than high, press the power button repeatedly until desired power level is reached. Power counts down from high to low.

Use number buttons to set a cooking time. You can set a time from one second

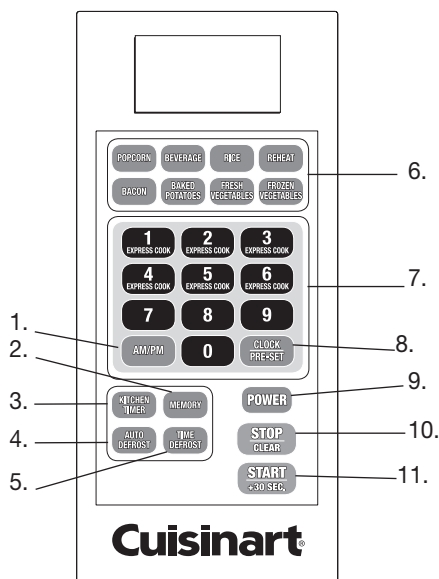

to 99 minutes, 99 seconds. To set a time over one minute enter the seconds too. For example, to set 30 minutes, enter 3-0-0-0.

### 2. Setting the clock/pre-set






 
- a. Press the CLOCK button.
- b. To enter the time of day at least 3 numbers must be pressed. For example for 2:21pm press 2-2-1
- c. Press the AM/PM button to select AM/PM.
- d. Press Clock button to set.

### 3. Kitchen Timer

- a. Press KITCHEN TIMER.
- b. Press the number keys to enter the desired cooking time, for example press 2-3-0 for 2 minutes and 30 seconds (the maximum cooking time is 99 minutes and 99 seconds).
- c. Press START/+30SEC. to confirm setting. Clock indicator will be lighted.
- d. When the cooking time is finished, clock indicator will go out and the buzzer will ring 5 times.



#### 4. Microwave cooking

- Press POWER repeatedly to select microwave power.  and  or  will show on display.
- Press number keys to enter the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- Press START/+30SEC. to start cooking, and the remaining cooking time will be displayed. “:”, ,  or  indicators will be flashing.




**Note:** In the process of cooking, if the STOP/CLEAR button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

#### 5. Express Cooking

- For quick starting, instant cooking at 100% power level can be started by selecting a cooking time from 1 to 6 minutes by pressing Express Cook number pads 1 to 6. Press START/+30SEC. to increase the cooking time; the maximum cooking time is 99 minutes and 59 seconds.
- For quick starting, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing START/+30SEC. Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 59 seconds.

**Note:** Each press on START/+30SEC. will increase the cooking by 30 seconds for the microwave and Auto menu cooking. However, the operation will not work with Auto Defrost operation.


 
#### 6. Auto Defrost

- Press AUTO DEFROST. LED will display “0”. At the same time, the , ,  indicators will be lighted.








- Press numerical pads to enter weight of food to be defrosted.

Enter the weight between 4 and 100 oz.

- If the weight entered is not between 4 to 100, the entry will be invalid. No beep will sound and the microwave will not work until valid numbers are entered.
- Press START/+30SEC. to start defrosting and the remaining cooking time will be displayed. “:”,  and  indicators will be flashing and the “Oz” indicator will go out.

#### 7. Defrosting by Time

- Press TIME DEFROST. At the same time, , ,  indicators will be lighted.
- Press number keys to enter defrosting time. The time range is 00:01 to 99:99 minutes.
- If the time entered is not within 0:01 to 99:99, no beep will sound and the microwave will not work until valid numbers are entered.
- The default microwave power is power level 3. If you want to change the power level, press POWER once, and the LED will display “PL 3”, then press the number pad for the power level you want.
- Press START/+30SEC. to start defrosting. The remaining cooking time will be displayed. “:”  and  indicators will be flashing.

#### 8. Memory Function

- Press MEMORY to choose memory 1-5 procedure. The LED will display 1,2,3...5.
- If the procedure has been set, press Start/ +30 Sec. to use it. If not, continue to set the procedure.
- After setting, press MEMORY to save the procedure and turn back to the stand-by state. If you press Start/ +30 Sec., it will save the setting and run the procedure.

#### 9. Child-Lock Function

**To Lock:** For quick start, press STOP/CLEAR for 3 seconds. There will be a

long beep denoting the activation of the child-lock state.

**To unlock:** Press STOP/CLEAR for 3 seconds. There will be a long beep denoting that the lock is deactivated.



## 10. Cooking End Signal

When the cooking is over, the buzzer will sound 5 beeps to signal that the cooking is finished.

## 11. Multi-section Cooking

The microwave can be programmed to cook on 2 different power levels for the duration of a cooking cycle. For example, if you want to cook with 80% microwave power for 5 minutes and then 60% microwave power for 10 minutes, follow these steps:

1. To select 80% microwave power, press POWER repeatedly until PL8 is displayed.
2. Press the number buttons “5”, “0”, “0” to set the cooking time.
3. To select 60% microwave power, press POWER repeatedly until PL6 is displayed.
4. Press number buttons “1”, “0”, “0”, “0” to set the cooking time.
5. Press START/+30 SEC to start cooking.

## 12. Pre-Set Function

The microwave can be programmed to start in advance. For example, if the time of day is 7pm the microwave can be set to start cooking at 9pm. First select either the power level and time or auto menu options of your choice (see page 8 and 11 for instructions). Follow steps below to set the Pre-Set function:

1. Press CLOCK/PRE-SET and enter the time of day to begin program cooking (for example, 9.00).
2. Press the start button.

3. The clock icon on the LED display will flash until the unit operates at the pre-set time.

To cancel the Pre-Set function, press STOP.

## 13. Inquiring Function

During use the microwave CLOCK/PRE-SET, POWER, and AM/PM buttons can be pressed to inquire current status or setting.

1. AM/PM button: In the clock setting the AM/PM button can be pressed to display either A or P time setting.
2. CLOCK/PRE-SET button: During cooking operation when the CLOCK/PRE-SET button is pressed the LED will display the clock for three seconds and the AM/PM for another three seconds.
3. In pre-set state, the LED will display the clock and the seconds will be flashing at the same time. Press AM/PM and either A or P will be displayed for 3 seconds. Then press CLOCK/PRE-SET to inquire the pre-set time. The pre-set time will be flashing for three seconds, the AM/PM will be displayed for another three seconds. The oven will then turn back to the clock state setting.
4. During cooking when the POWER button is pressed, the current microwave power will be displayed on LED for three seconds. After which the oven will return to previous state.

## 14. OTHER SPECIFICATIONS

- a. In standby state, if the set clock digital tube displays current time, the icon “:” would flash; otherwise, it shows “0:00”.
- b. In setting function state, LED displays corresponding setting.
- c. In working or pause state, LED displays remainder cooking time.

## Preset Microwave Auto Menu Cooking

You can easily prepare foods using the Preset Microwave Cooking buttons on your Cuisinart Microwave.

Press the desired button to choose cooking function. The LED display will show the first amount/serving size. Press the button repeatedly to select proper amount/serving size. Press START/+30 SEC button to begin cooking.

## PRESET AUTO MENU COOKING CHART

Item	Weight/Amount	Notes
Popcorn (Use only prepackaged bagged popcorn. Do not pop loose popcorn)	1.75 ounces 3.00 ounces 3.5 ounces	Place prepackaged bagged popcorn in microwave according to package directions, making sure proper side of bag is up. Pop only one bag at a time. Use care when removing from microwave and opening hot bag.
Beverage	8 ounces 16 ounces	Reheat beverage in microwave-safe mugs/cups. Do not cover. Place cups in microwave. After heating stir well.
Rice	1 cup white rice + 2 cups liquid 2 cups white rice + 4 cups liquid 1 cup brown rice + 2½ cups liquid	To prepare rice, combine rice and cooking liquid (water, stock, broth) in a 3-quart microwave-safe casserole with lid. Let rice stand for 10 minutes after cooking.
Reheat	Dinner plate Soup, 1 cup Soup, 2 cups Casserole, 1 cup Casserole, 2 cups	Place food on microwave-safe plate or in microwave-safe bowl. Cover loosely with wax paper or plastic wrap, or a purchased microwave dish cover.
Bacon	2 slices 4 slices 6 slices	Place a double layer of microwave-safe paper towels on a microwavable dish large enough to fit a single layer of bacon slices – two to six slices. Do not allow strips to overlap. Cover with another paper towel.  Let bacon stand for 2 minutes before removing and serving, to allow carry-over cooking to finish.
Baked potato	8 ounces 16 ounces 24 ounces	Scrub potatoes well. Prick each potato several times with a fork or tip of a sharp knife. After cooking, let stand 3 minutes before serving.  Can be used to precook potatoes before placing in traditional oven to crisp skins.
Fresh vegetables	1 cup 2 cups 3 cups	Wash well. Place in a microwave-safe casserole or bowl with lid. Add a small amount of water. Cover. After cooking, let stand for 2 minutes before serving. This is a general cooking time, and may not be suitable for cooking all vegetables.
Frozen vegetables	1 cup 2 cups 3 cups	Remove from packaging and place in microwave-safe casserole or bowl. Add a small amount of liquid (2 to 4 tablespoons). Cover and cook. Stir and let stand. Add more cooking times as needed.

# TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	<ul style="list-style-type: none"> <li>a. Electrical cord for oven is not plugged in.</li> <li>b. Door is open.</li> <li>c. Wrong operation is set.</li> </ul>	<ul style="list-style-type: none"> <li>a. Plug into the outlet.</li> <li>b. Close the door and try again.</li> <li>c. Check instructions.</li> </ul>
Arcing or sparking	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. The oven was operated when empty.</li> <li>c. Spilled food remained in the interior.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Do not operate with oven empty.</li> <li>c. Clean interior with wet towel or micro fiber cloth specifically for stainless steel.</li> </ul>
Unevenly cooked foods	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. Food was not defrosted completely.</li> <li>c. Cooking time, and/or power level were not suitable.</li> <li>d. Food was not turned or stirred.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Completely defrost food.</li> <li>c. Use correct cooking time and/or power level.</li> <li>d. Turn or stir food.</li> </ul>
Overcooked food	Cooking time and/or power level was not suitable.	Use correct cooking time and/or power level.
Undercooked foods	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. Food was not defrosted completely.</li> <li>c. Oven ventilation ports were blocked.</li> <li>d. Cooking time, and/or power level was not suitable.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Completely defrost food.</li> <li>c. Check to see that oven ventilation ports are not blocked.</li> <li>d. Use correct cooking time and/or power level.</li> </ul>
Improper defrosting	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave were used.</li> <li>b. Cooking time and/or power level was not suitable.</li> <li>c. Food was not turned or stirred.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Use correct cooking time and/or power level.</li> <li>c. Turn or stir food.</li> </ul>

---

# WARRANTY

## LIMITED THREE-YEAR WARRANTY

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Microwave Oven that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Microwave Oven will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We suggest you complete and return the enclosed product registration card promptly to facilitate verification of the date of original purchase. However, return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Microwave Oven should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please enclose \$15.00 for shipping and handling of the product.

Please pay by check or money order (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

**NOTE:** For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model # (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

Your Cuisinart® Microwave Oven has been manufactured to the strictest specifications and has been designed for use with the authorized accessories and replacement parts.

This warranty expressly excludes any defects or damages caused by accessories, replacement parts, or repair service other than those that have been authorized by Cuisinart.

This warranty does not cover any damage caused by accident, misuse, shipment or other ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

### CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190.

Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

©2006 Cuisinart  
Cuisinart® is a registered  
trademark of Cuisinart

150 Milford Road  
East Windsor, NJ 08520  
Printed in China  
www.cuisinart.com

06CU26058

Any other trademarks or service marks referred to herein are the trademarks or service marks of their respective owners.

Version no.: CMW-100 IB-6798

SIZE: 140MM(W) x 216MM(H)  
Total Pages : 36pcs

Material:  
Cover:157gsm Matt Artpaper  
Inside: 120gsm Gloss Artpaper

Coating: Varnishing in cover page

Color:  
Cover: 4C + 1C (Black)  
Inside: 1C + 1C (Black)

Date: 07/20/06

P. O.: 4500086422