





INSTRUCTION

PRODUCT INTRODUCTION

No tools are required for assembly. Operated on 3AA batteries(NOT included). Simple operation will provide home a beautiful decorative string light. IP44 waterproof for indoor and outdoor use.

Power option: 3XAA Batteries

1. Take out the product.
2. Open the battery box and insert 3 "AA" alkaline batteries(not included).

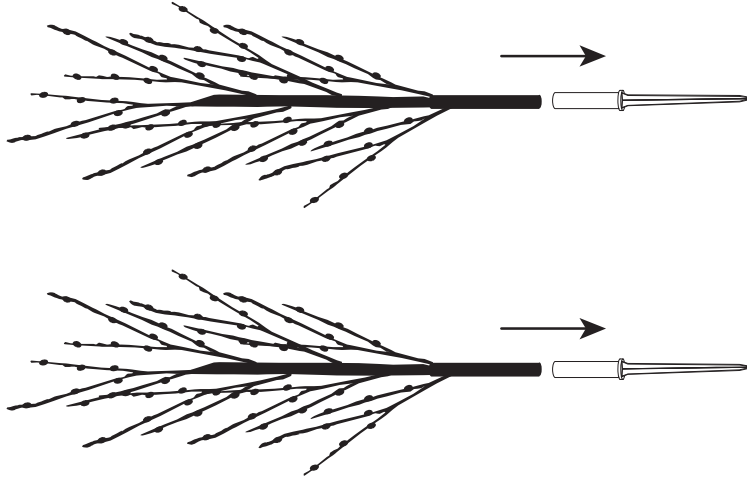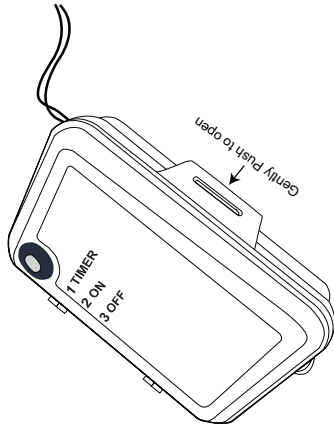

Equipped with 2pcs ground stakes for outside garden decor.

USE NOTES:

1. TIMER press once: The timer function is activated. Lights will be 6 hours ON and 18 hours OFF each day automatically.
2. ON press again/press twice: Lights will remain on until user turns it off.
3. OFF press again/press three times: Lights are not in operation.
4. Bulbs cannot be replaced.
5. Please contact us for assistance.
6. Avoid any damage to the isolation of the wiring.

IMPORTANT SAFETY INSTRUCTIONS

1. Please read and follow all instructions and warnings on the instructions and product carefully before use.
2. Retain the instruction for future reference.
3. This product is to be used only as intended.
4. For indoor / outdoor use.
5. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
6. Do not secure the wiring of this product with staples or nails, or place on sharp hooks, nails or in a manner that can cut or damage the wire or insulation.
7. This is an electric product, not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.
8. Avoid the product and extension cords being caught by doors or windows, which may damage the wire and insulation.

BATTERY WARNING

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).
- Rechargeable batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The battery supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not dispose batteries in a fire - batteries may leak or explode.

TROUBLESHOOTING

1. If the whole set doesn't light up:
Please kindly check if the batteries are intalled properly.
2. If the lights get dim:
This may be caused by low battery, please try to replace the batteries.
3. One or more of the branches don't light up:
Please check each bulb on the unlighted branch has been well welded by toughing slightly, or bending the branch slightly. If it doesn't work please follow step 4.
4. Any problem not mentioned above or unsolved:
Please contact us at service@ehomeinc.com for assistance.

WARRANTY

Lightshare guarantees that this product is free of defect in material and workmanship, and provides a one-year limited hardware warranty for the product commencing from the date of purchase. Please keep your receipt for proof of purchase. This product is designed for light or decoration usage only. Using this device in any other capacity voids the warranty. The warranty offered covers normal use. Defect or damage that result from improper operation, storage, misuse or abuse, accident or neglect, which are not the fault of Lightshare, are excluded from warranty coverage.

E HOME INTERNATIONAL INC.
 725 Old Norcross Rd, Ste D Lawrenceville, GA 30046
 Customer Service Line: (888) 997-9468
www.ehomeinc.com
service@ehomeinc.com