

EVERBILT

TM

Model # ELE-36X80T

USE AND CARE GUIDE

ACCORDION DOOR



Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service.

8a.m.-7p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-305-1726

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Everbilt through the purchase of this Accordion door. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing Everbilt!

Table of Contents

Safety Information 2

Warranty 2

Pre-Installation..... 3

 Planning Installation..... 3

 Tools Required..... 3

 Hardware Included..... 3

Installation..... 4

Safety Information

Please read and understand this entire manual before attempting to assemble, operate or install the product.



CAUTION: The accordion door is not intended to limit or prevent passage of children, pets, etc., or to deter vandalism or burglary.



IMPORTANT: This accordion door is adjustable in height only.

Warranty

In the event that our products or any parts thereof should prove to be defective in material or workmanship, under normal use and service, and such defects are reported to us within one (1) year from the date of purchase, at our option, we will repair or replace the door. Replacement door could vary in style due to changes in suppliers and product design. In addition, the paint finish is warranted not to blister, crack, or fade for one year from the purchase date. Damage due to rust is excluded from this warranty. This warranty does not cover damage caused by vandals, break-ins, or attempted break-ins. This warranty is voided if the products is modified in any way. We assume no responsibility for incidental or consequential damages arising from defective products; nor do we assume any responsibility for failures, breakage or cost which result from abuse, abnormal use, misuse, negligence, accident, exposure to corrosive fumes, condensates, fire or damage as a result of improper installation. Except as stated above, we make no warranties, either expressed or implied, as to any matter whatever, including without limitation, the condition of our products ,their merchantability or fitness for any particular purpose. We assume no other expense such as labor costs of any kind for removal, replacement or parts, repairs or reinstallation.


Contact the Customer Service Team at 1-800-305-1726 or visit www.HomeDepot.com.

Pre-Installation

PLANNING INSTALLATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

TOOLS REQUIRED

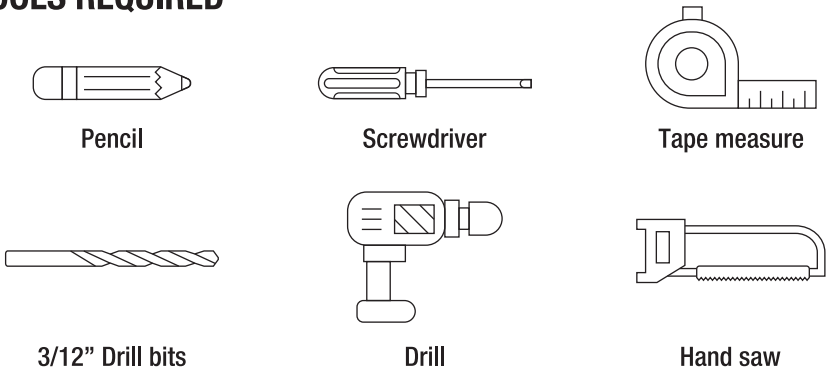

HARDWARE INCLUDED

 **NOTE:** Hardware not shown to actual size.

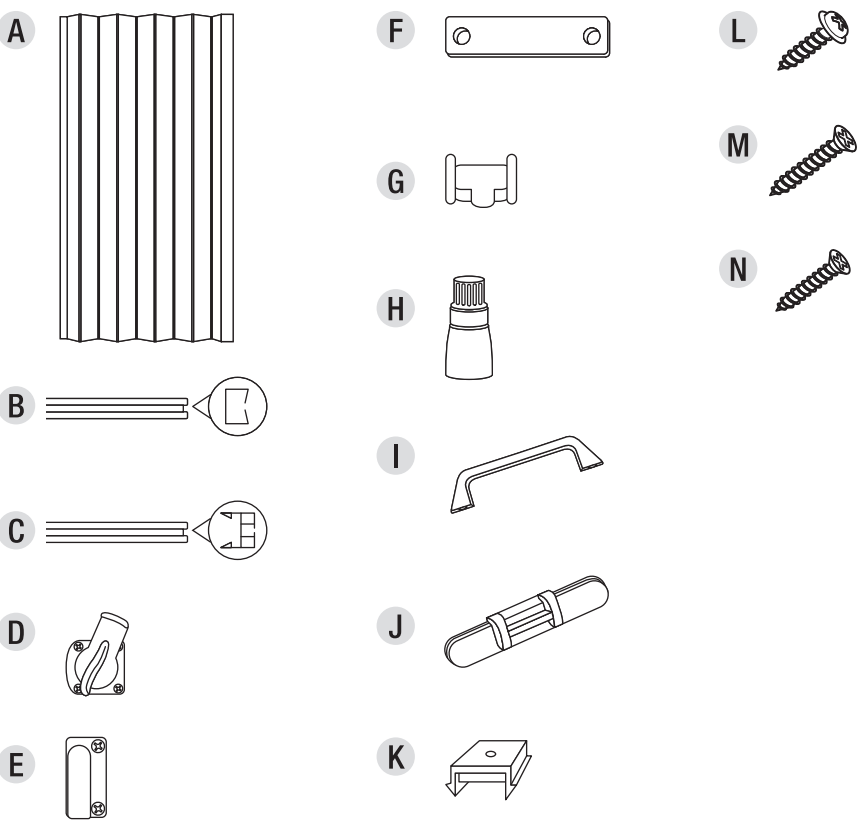


Part	Description
A	Door
B	Top Track
C	Closing channel
D	One lock
E	2 pieces closing clip
F	Two Magnetic plate
G	Sliders
H	One Lubricant tube
I	Two handles
J	Two Handle pins
K	Five pressure clips
L	1 round head screw (3x12mm)
M	20 Flat screws (3x25mm) Includes one spare
N	8 Flat screws (3x20mm) Includes two spare

Installation


1 Measure the door opening

- If the height of the door opening is the same as the measurement of the door, it won't be necessary to cut the door height, if the opening is less; the door should be reduced by cutting off the excess in the bottom part of the door panels. Place and attach the door panels together, use adhesive tape if necessary and cut off the excess with a saw or handsaw. If the opening is less than the door width, cut the Top track 1/8" shorter than the width of the opening.

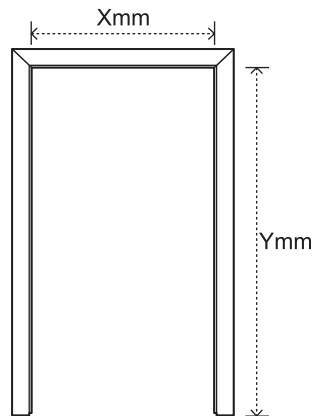


2 Install the Top Track

- Place the top track in the upper part of the door opening, so that it can be straightened and centered. Mark the screw guides with a pencil, then punch using a drill with a 3/32" bit. Place one 1" track screw through the screw hole of the Top track. Do not tighten it completely. (Adhesive tape can be used to hold the Top track in place while marking and drilling).

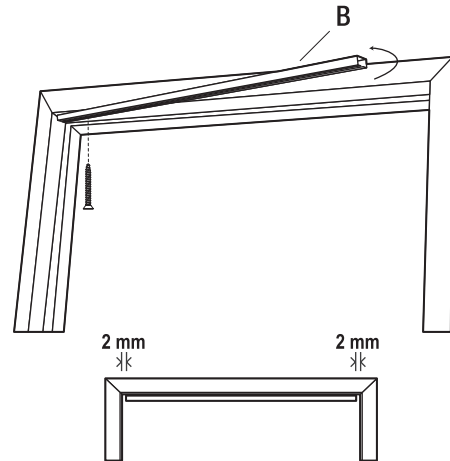

3 Install the handles

- By gently tapping introduce the two Handle pins in the handles, then insert the pins through the door track holes. Press the other handle against the handle pins. If necessary one of the handles can be supported with a solid object to attach the other handle and tap gently on both sides evenly inserting the pins until the handles are attached. Do not hit in the center of any of the handles.

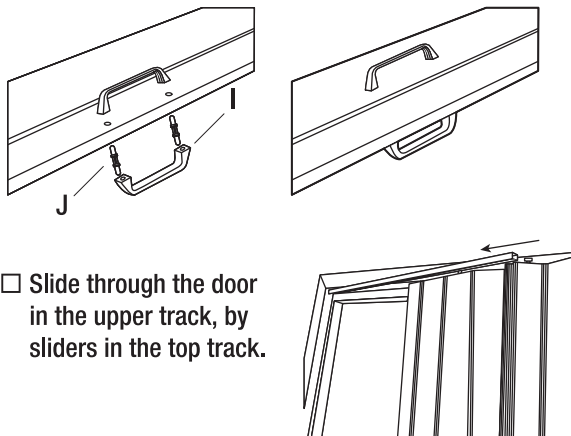


- Slide through the door in the upper track, by sliders in the top track.

4 Fix the Top track

with 7pcs (25mm screws)

- Turn the Top track to its original position. After drilling the screw holes (with a 3/32" drill bit), place the 1" track screws through each hole in the track. Place all the screws as straight and tight as possible to ensure the proper functioning of the door. (Be careful to avoid damaging the top track with the drill bit).
- Apply lubricant inside the top track, slide the door along the track. Slide the door repeatedly in order to spread the lubricant.

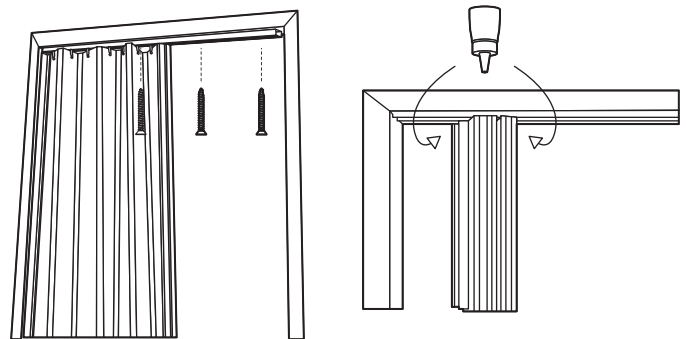


Installation

5 Install the Pressure clips

with 5pcs (25mm screws)


- Drill five holes in the fixed side of the door frame. Fasten the pressure clips, and then align the anchor panel and press against the clips until they snap.

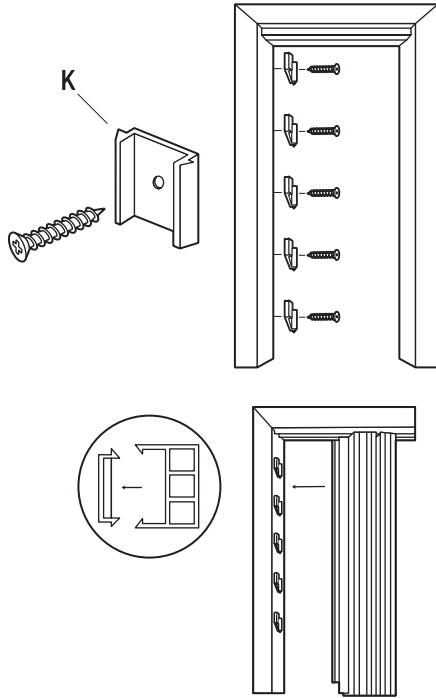

6 Install the Closing channel

with 3pcs (25mm screws)


- Align the closing channel on the side where the door closes. Ensure that the channel is perpendicular. Mark each of the screw holes (according to the image). If necessary, cut the closing channel to the measurement of the door. If necessary drill holes for the screw guides (with a 3/32" drill bit) then install the closing channel and the plates with 4pcs (25mm screws).

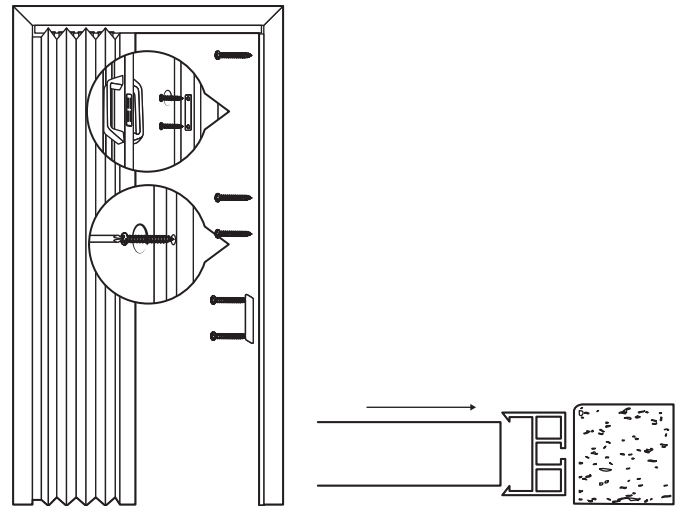

7 Install the lock

with 1pc (12mm screw) in center of handle, and 6 pcs (to fix lock)

- Use the screws to attach the lock to the lead panel just below the handles. Fasten safety clip, choosing 1 piece for right closing or left closing, with screws to the closing channel. Ensure that the lock and the safety clip are properly aligned.

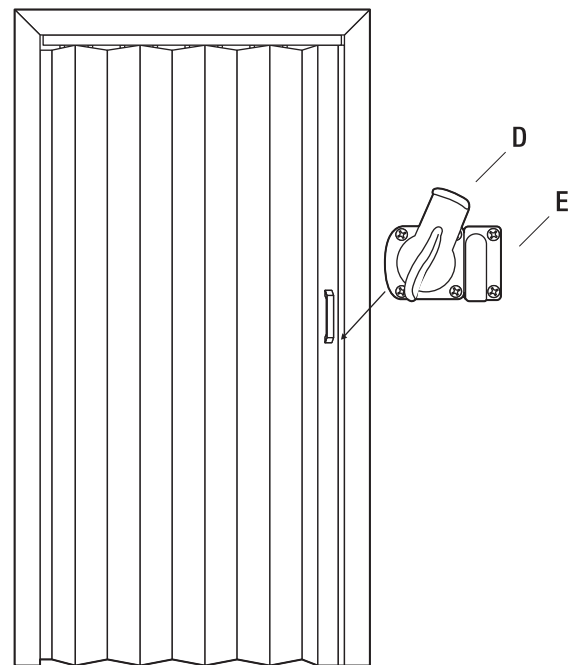



Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service.

8a.m.-7p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-305-1726

HOMEDEPOT.COM

Retain this manual for future use.