




USE AND CARE GUIDE

BELLMORE OPEN NIGHTSTAND WHITE BELLMORE OPEN NIGHTSTAND EBONY

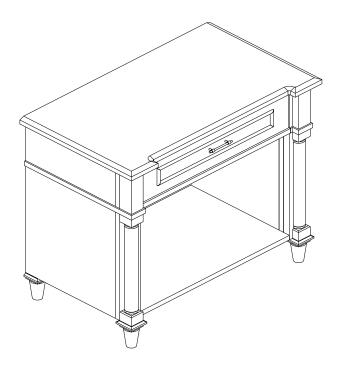

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this Nightstand. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	3
3 Years Warranty	3
What is Covered	
What is Not Covered	3
Pre-assembly	4
Planning Assembly	
Tools Requied	4
Hardware Included	
Pre-assembly (Continued)	5
Package Contents	
•	

Assembly	6
Assembly (Continued)	7
Assembly (If Necessary)	8
Maintenance	9
Care and cleaning	

Safety Information



DANGER

- Keep children and animals away from the work area.
 Small parts can choke them if they are swallowed.
- □ Read and follow instructions carefully.

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted on the wall or floor.
- Unit can tip over causing severe injury or death
- Do not exceed the recommended weight limits
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.



NOTE: If you are unsure about your wall type of what mounting methoud you should use, consult a qualified professionnal.



CAUTION

- Do not use power tools to assemble your item. Power tools may strip or damage parts/product.
- Do not over tighten connectors (screws, bolts, etc.)
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- □ DO NOT USE SUBSTITUTE PARTS.
- ☐ This product should only be used on a flat, level surface.
- Product is designed to hold [100lbs]. Exceeding this limit may damage the product or cause injury to the user.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the Unit or your floor.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product tobe free of manufacturring defects to the original purchaser for three years.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

PLANNING ASSEMBLY

Compare all parts to the Hardware Included and Package Contents lists. If any part appears missing or damaged, do not assemble or use the product. Contact Custormer Service at 1-800-986-3460.

TOOLS REQUIRED



HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

Part	DESCRIPTION	Quantity
AA	BRACKET	2
BB	TIPPING RESTRAINT	1
CC	LONGER SCREW	1
DD	SHORTER SCREW	1

Pre-assembly (continued)


PACKAGE CONTENTS

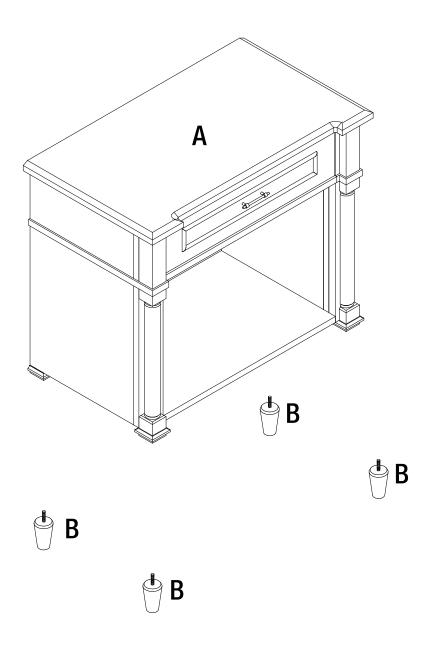

Part	DESCRIPTION	Quantity
Α	NIGHTSTAND	1
В	LEG	4


Assembly

Take the foot box out of the pull box.

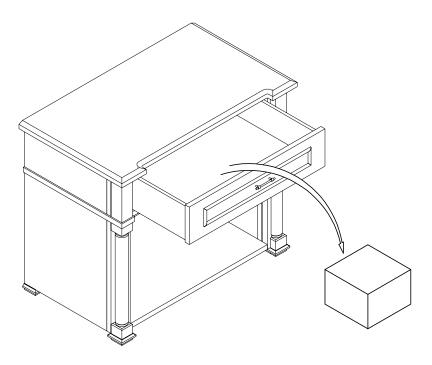


2 Assemble the nighstand to the leg .


 $\hfill\Box$ Attaching the nightstand (A) to the leg (B).

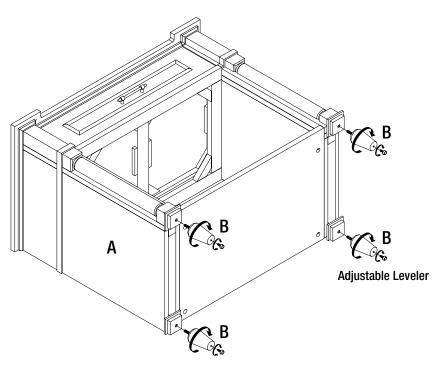

Assembly (continued)

The tipping restraint kit shall be securely attached to the back top rail of the furniture.

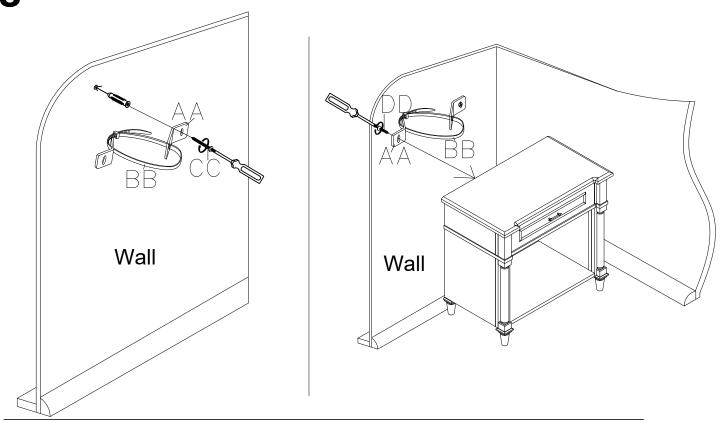


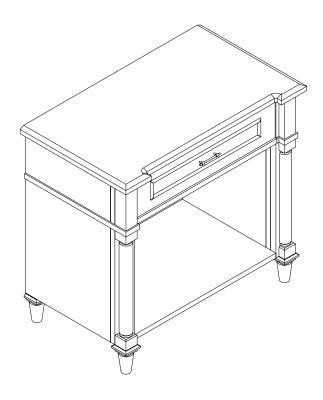


Assembly (if necessary)

4 Removing the drawers


- ☐ Open the drawer as far as possible.
- □ Simultaneously, press the right side spring clip downward and the left side spring clip upward.
- Once both spring clips are held in the indicated position, pull the drawer straight out.

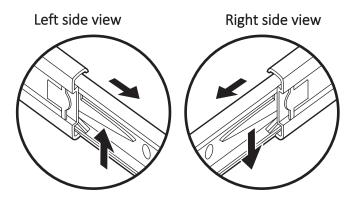

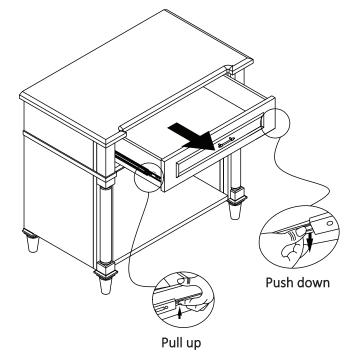

B. To Reinstall Drawers

- □ Insert the drawers by pulling cabinet tracks on both sides. All the way out (including ball bearing rack).
- □ Align tracks on drawer with sliders and push in the drawer until there is audible "click" sound.

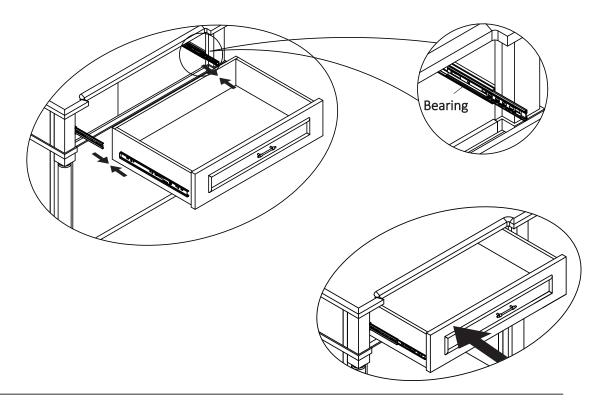

Maintenance	
☐ Please periodically check all fittings and re-tighten a☐ Do not use this product if parts are missing, damage	,
Care and Cleaning	
 Never allow any kind of liquid to remain on your funder-laminate. 	uniture. Absorption can cause wood to warp or finishes to
\square Please do not drag and pull your furniture.	
 Please do not place hot items (e.g. hot drinks) dire placement or coaster. 	ctly on the surfaces. Please make sure you use a
 Remove the drawers then lift them if need moving then insert back in original position. 	g. We recommend to make a marking before remove it



Questions, problems, missing parts?

Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.