


Item #1000 000 000

Model# CL121PA

HAMPTON BAY[®]

USE AND CARE GUIDE

STOCKTON 11 FT. X 11 FT. CANOPY WITH NETTING

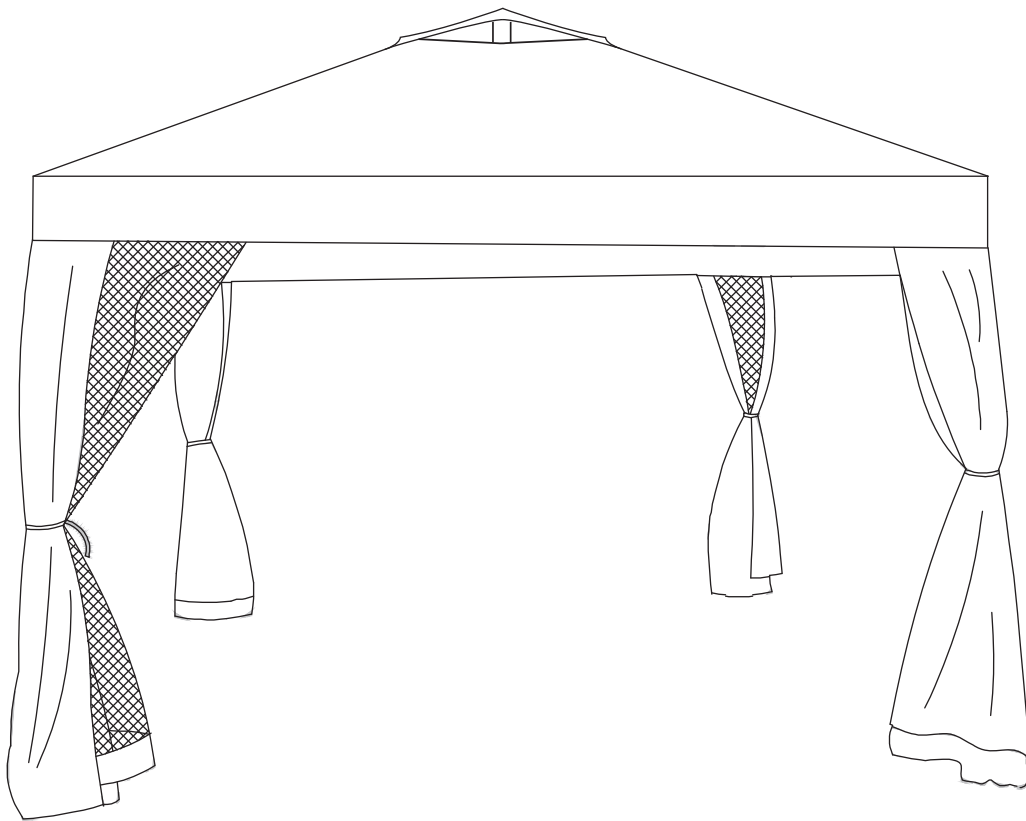

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this canopy. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Safety Information.....	2	Setting Up the Canopy	3
Warranty.....	2	Taking Down the Canopy	4
Pre-Installation	3	Care And Cleaning	4
Package Contents	3	Service Parts.....	5

Safety Information



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.
This tent is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.
The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



WARNING: Do not leave the tent where there is a risk of high wind, as possible damage will occur to the structure.



CAUTION: Take care not to pinch your fingers in the frame during set up and take down.



CAUTION: Never set up or continue to use in any rain, wind, storm conditions, or lightning storms. Damage can occur to the tent and put you and others in potential danger.



CAUTION: Avoid setting up the tent on steep inclines.



CAUTION: Do not climb on top of the tent. Falling off the tent can result in serious injury, or even death.



CAUTION: Never leave the tent unattended.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purpose. The item is warranted to be free from defects in material or workmanship for a period of 1 year.


WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-888-502-9589, 9:00 a.m. to 4:00 p.m. PST; email care@OutdoorDesignz.com; or visit www.HAMPTONBAY.com.

Pre-Installation

PACKAGE CONTENTS

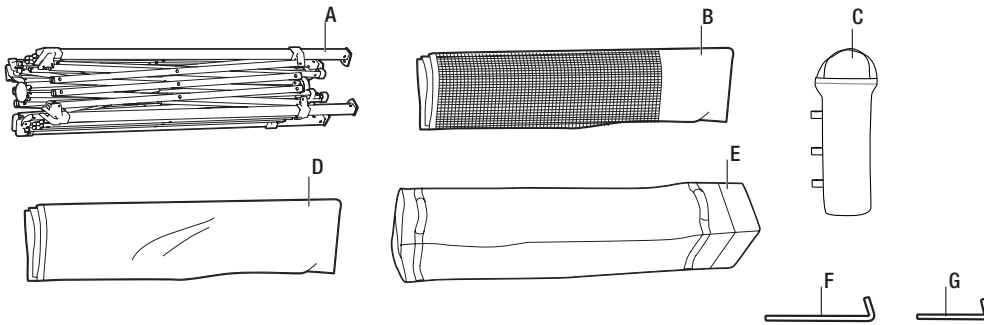


Part	Description	Quantity
A	Canopy frame	1
B	Mosquito netting	1
C	Weight bag	4
D	Top	1
E	Wheeled storage bag	1
F	Stake	8
G	Hex wrench	1

Setting Up the Canopy


1 OPENING THE CANOPY FRAME

- With a person on each end, lift and partially pull the canopy frame (A) apart.

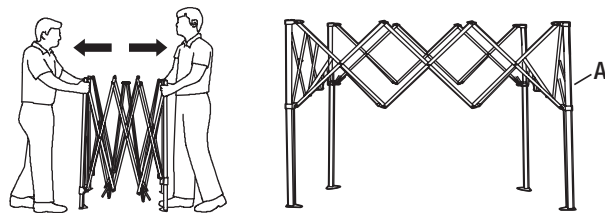


2 ATTACHING THE CANOPY TOP

- Unfold the top (D) and place it on top of the canopy frame (A).
- Secure the top (D) to the corners of the canopy frame (A) using the Velcro connections.

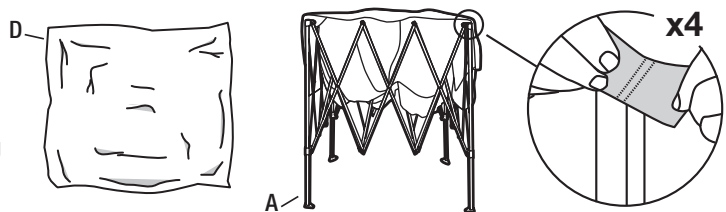


3 LOCKING THE FRAME

- From underneath the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.

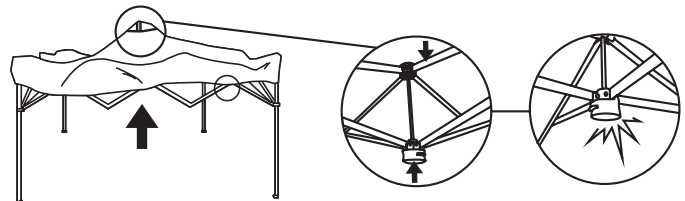

4 ADJUSTING THE CANOPY HEIGHT

- Press the red button on each leg and raise or lower to adjust the canopy height.

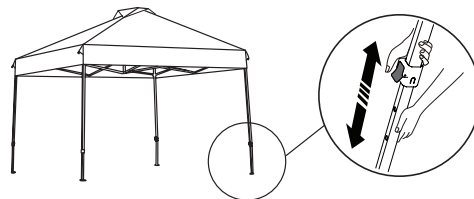

5 SECURING THE CANOPY IN PLACE


- Insert a stake (F) into the foot of each canopy leg.
- Measure each leg to a proper distance and secure four stakes (F) to the ground. Tie the ropes to the stakes (F) in the ground. Ensure the rope has the proper tension using the plastic adjusters on the ropes.



Setting Up the Canopy (continued)


6 ALWAYS USE WEIGHT BAGS TO SECURE THE CANOPY

- Fill the weight bags (C) with sand or gravel. Connect the velcro loops of the weight bags (C) around each leg. The included weight bags (C) are designed for quick and easy use.

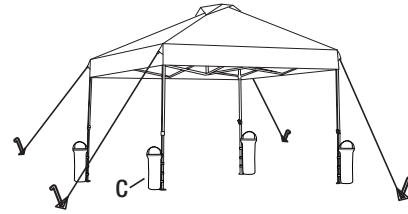

7 HANGING THE MOSQUITO NETTING


- Unfold and open one zipper of the mosquito netting (B). Go under the canopy and wrap the string around the canopy frame (A) to secure the mosquito netting in place. Hook the mosquito netting (B) end into the leg holes on the canopy legs.

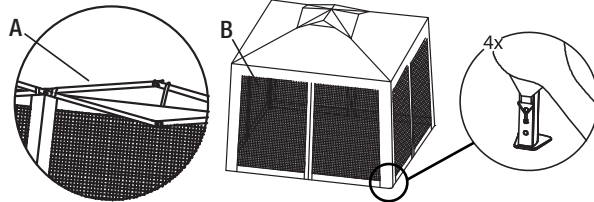

Taking Down the Canopy


1 TAKING DOWN THE MOSQUITO NETTING

- Pull out the netting end from the leg holes on the canopy legs. Open one zipper of the mosquito netting (B). Go under the canopy and unwrap the string from around the canopy frame (A) to take down the mosquito netting.

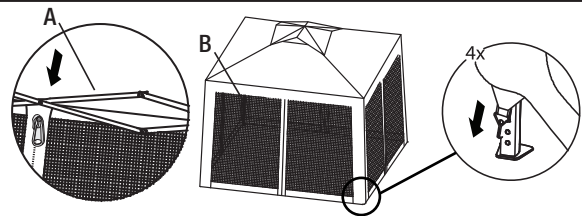


2 REMOVING THE STAKES AND RETRACT THE LEGS

- Pull up all of the stakes (F) from the ground.
- Press the button on each leg and retract the legs to their original height.

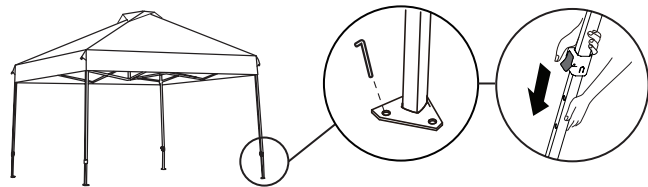


3 UNLOCK THE CENTRAL LOCK

- Get underneath the canopy and press the red lock button. Pull down on the central hub until it is separated from the central pole.

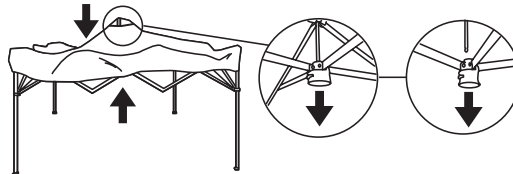


4 FOLDING THE FRAME

- Lift one corner of the canopy frame (A) until all legs are raised off the ground except for the one leg on the opposite corner. Push inward until the frame is fully closed.

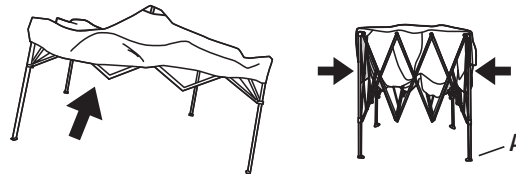

5 PACKING THE CANOPY IN THE STORAGE BAG

- With the canopy feet facing the rollers, slide the wheeled storage bag (E) over the closed canopy frame (A).
- Close the zipper on the wheeled storage bag (E).

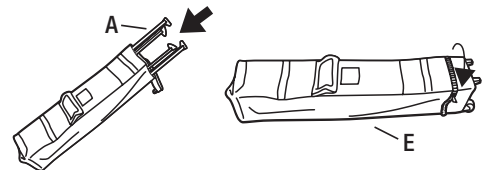


Care and Maintenance

- Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives, or bleach.
- Do not machine wash.
- Never fold or store the canopy when it is wet or damp. Allow it to dry completely to avoid mildew.

Spare Parts

To access spare parts, please call toll free 1-888-502-9589, Monday - Friday, 9:00 AM - 4:00 PM PST; visit www.crown-shades.com; or email care@OutdoorDesignz.com.

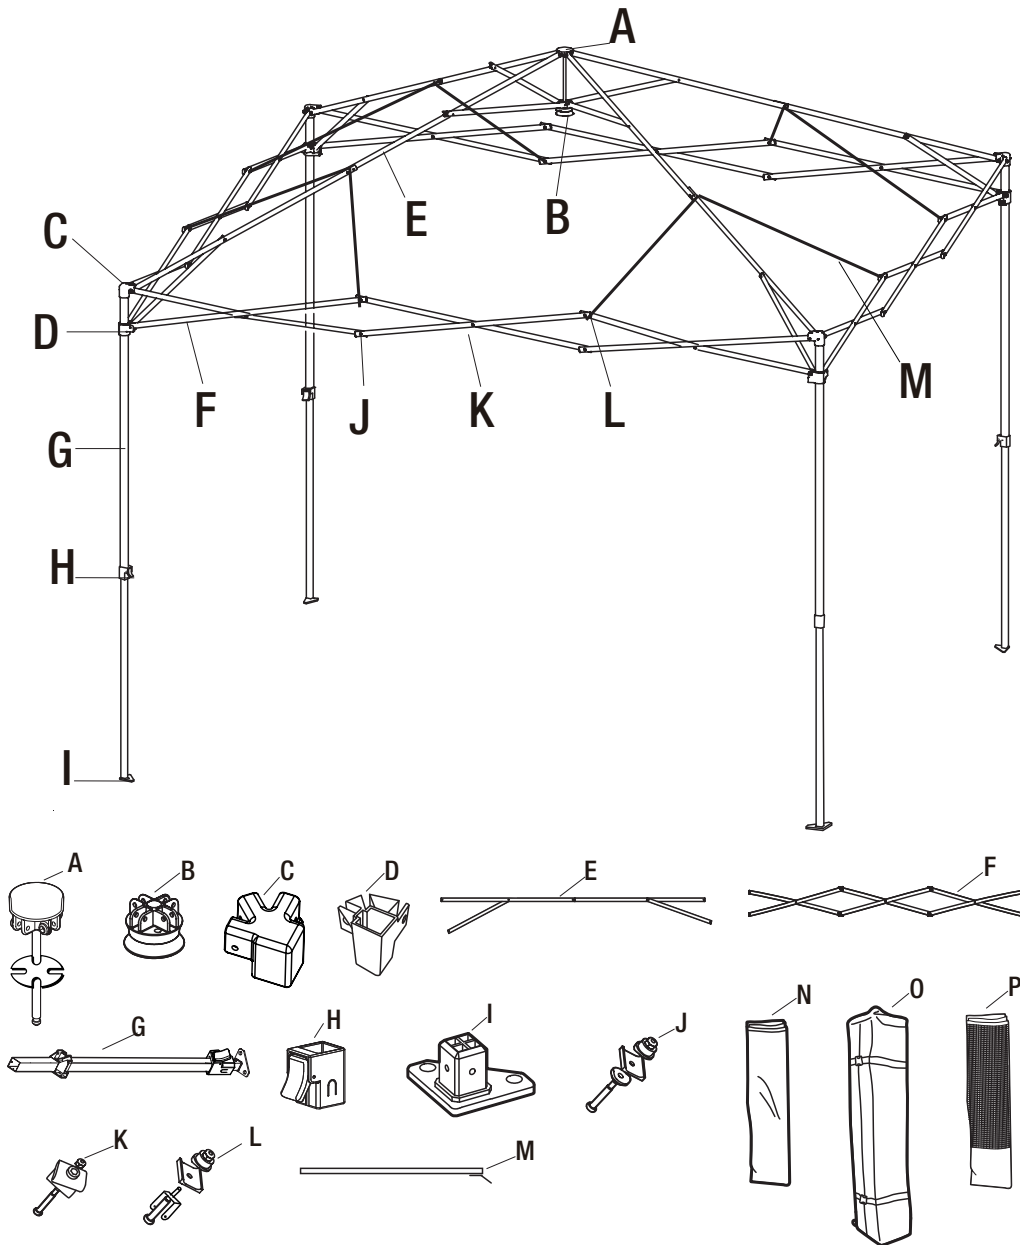

Part	Description	Reference No.	Part	Description	Reference No.
A	Central Pole	UNCP82BECL	I	Plastic Foot	UNFT01BE4P
B	Central Bottom Hub	UNCH00BECL	J	M5-Bolt Kit	UNBKM5BE2P
C	Leg cap-30	UNLC12BEMI	K	M4-Bolt Kit	UNBKM4BE3P
D	Slider-30	UNLS12BEMI	L	M5-Bolt Kit (w/U Bracket)	UNBKM5BEPL
E	Ceiling Assembly	CSCA11BE00	M	Ceiling Support	UNCS11BE00
F	Eave Assembly	CSEA11BE00	N	Top Fabric-Khaki/Brown	EBT311KHBR
G	Leg Assembly	CSLA12BEPB	O	Wheeled Bag	EBCB11BKSW
H	Leg Extender	UNLE12BEKH	P	Mosquito Netting	UNMN11BR00

HAMPTON BAY[®]

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.