 


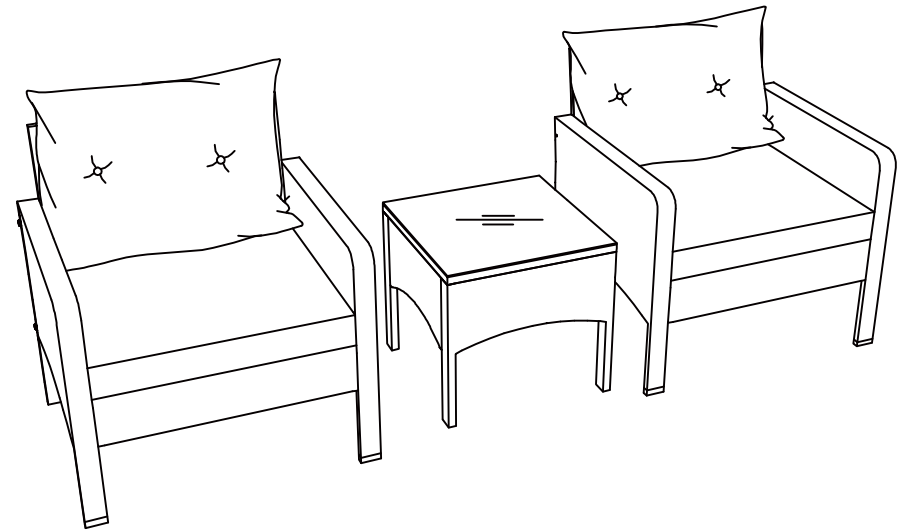

USER'S MANUAL

 
3Pcs Wicker Bistro Set

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP!

FLOOR AREA
2MX2M

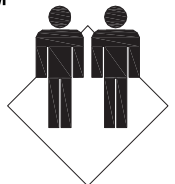

ASSEMBLED BY 2 ADULTS

 
V




Contact Us!

Do NOT return this item.




Contact our friendly customer service department for help first.








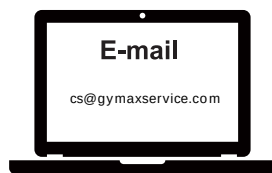




Before You Start

 


- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

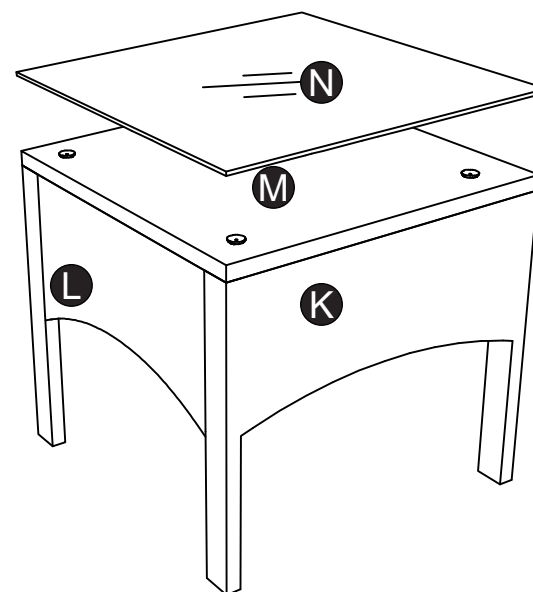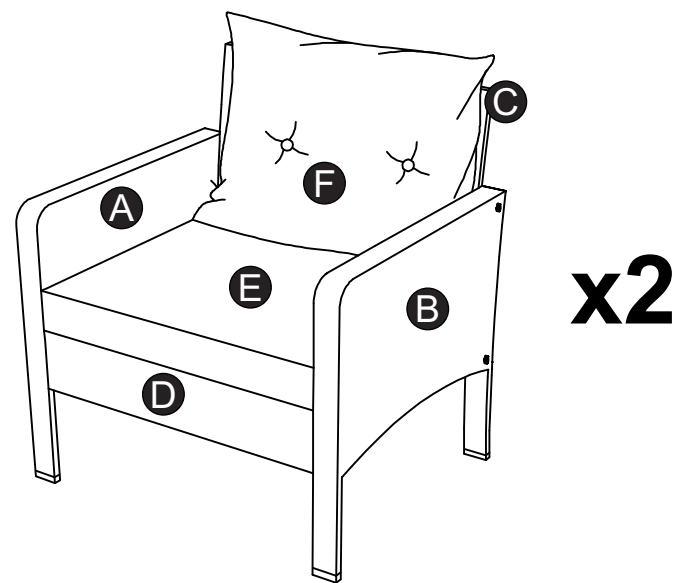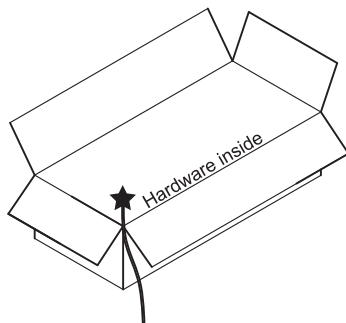   

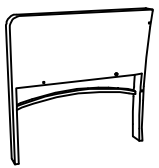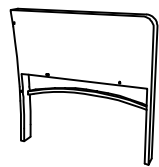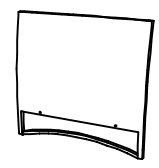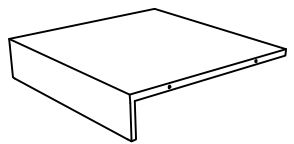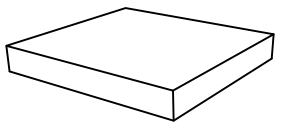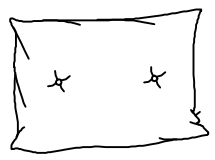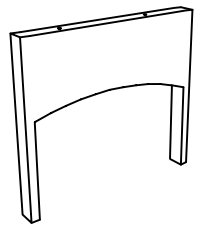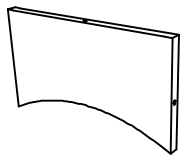        
A  (2 pcs)	B  (2 pcs)
C  (2 pcs)	D  (2 pcs)
E  (2 pcs)	F  (2 pcs)
K  (2 pcs)	L  (2 pcs)

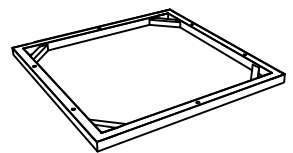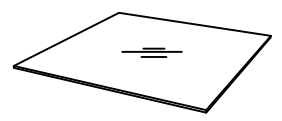  M  (1 pc)	N  (1 pc)
1  M6 x 70 mm (8 pcs)	2  M6 x 40 mm (16 pcs)
3  M6 x 30 mm (10 pcs)	4  Ø6 x 14 mm (34 pcs)
5  Allen key 4 x 98 (2 pcs)	

 
STEP 1

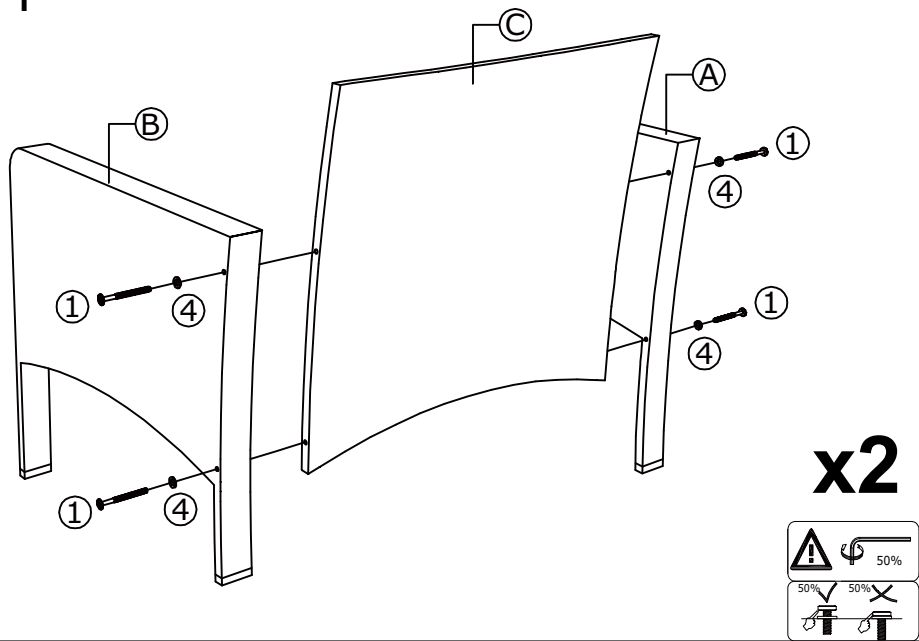

 
STEP 3

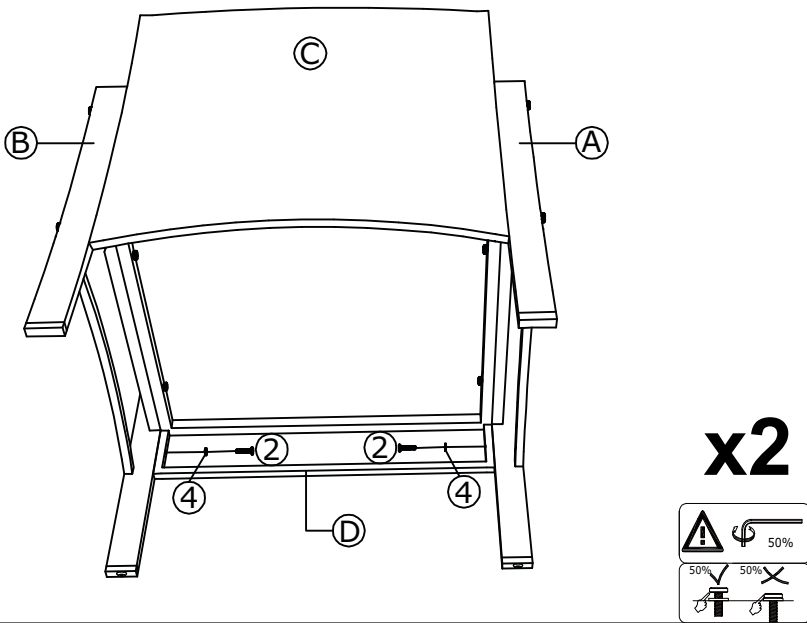


 
STEP 2

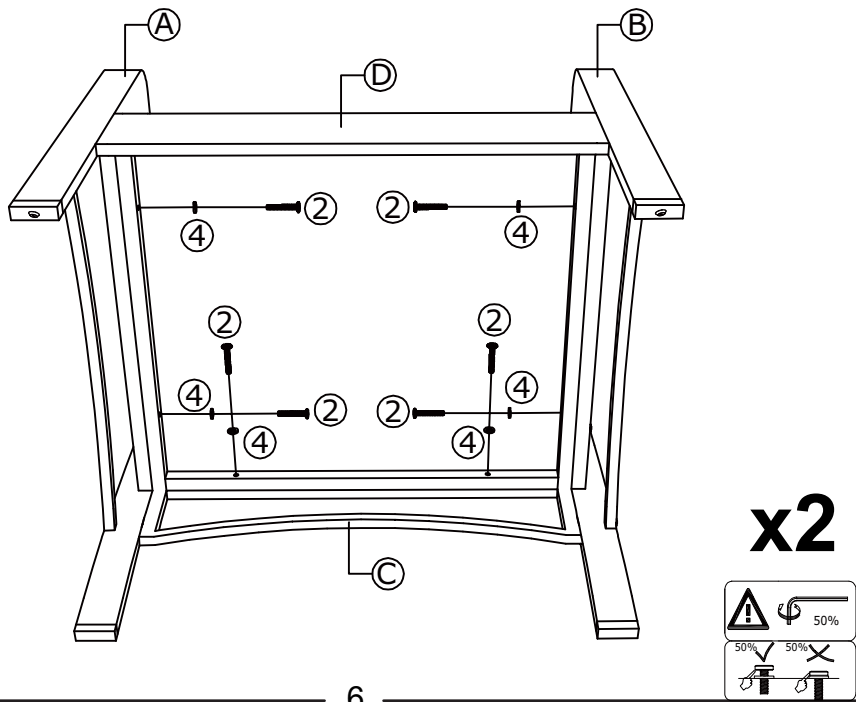


 
STEP 4

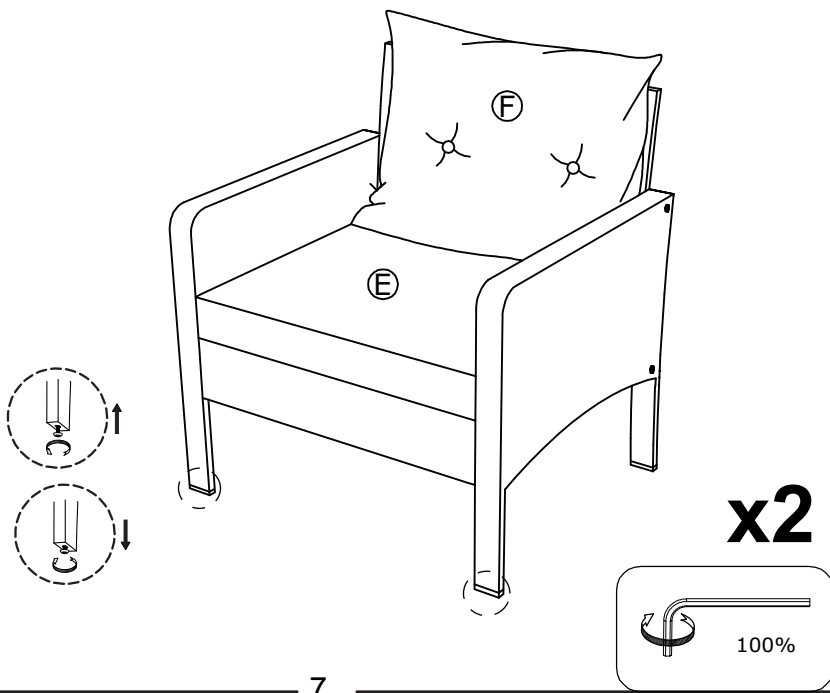

  STEP 5

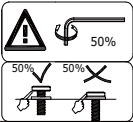
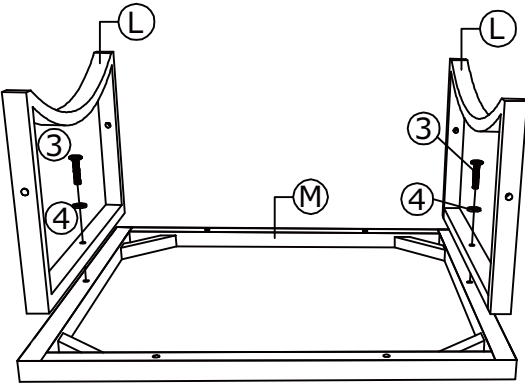


  STEP 6

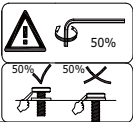
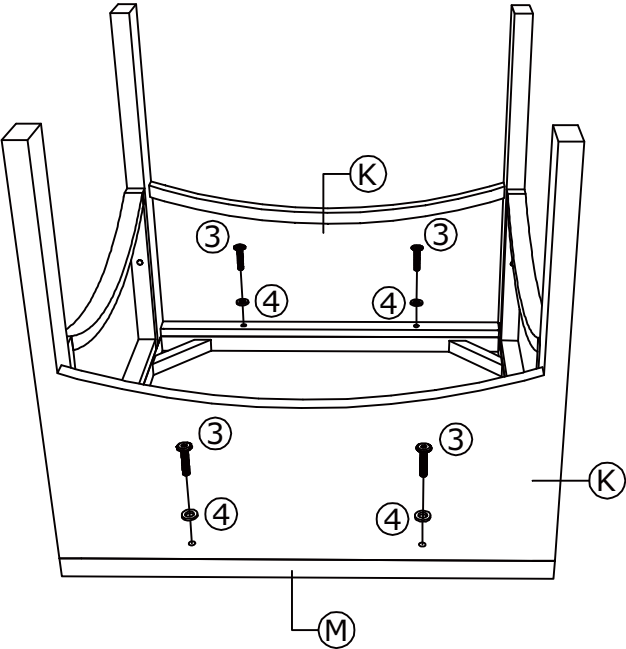


8

  STEP 7

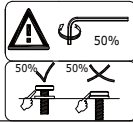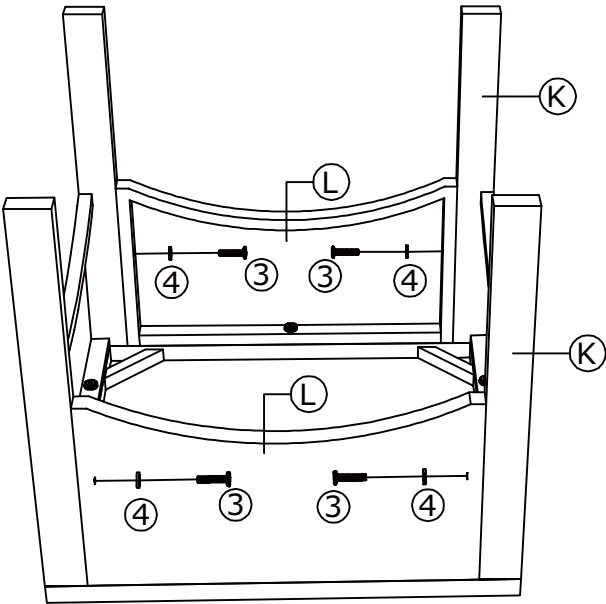

  STEP 8

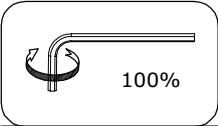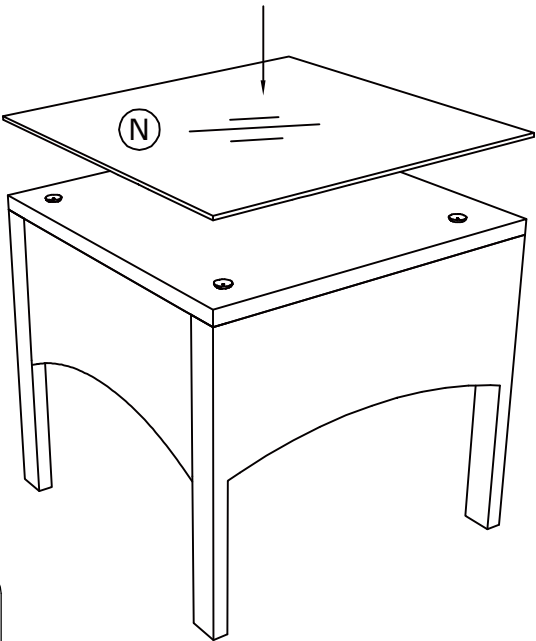

9

FINISH