

RiverRidge® Use and Care Instructions

Furniture: MDF and Metal

With regular care and maintenance, your RiverRidge® products will uphold their exceptional quality and value for many years to come. To conserve your RiverRidge® products, please follow the use and care recommendations below.

- Wipe clean with a damp cloth.
- Do not mark with permanent marker or pen.
- Periodically check screws, bolts, cam locks and wall fasteners to make sure they are secure.
- Maintain with regular dusting.
- Always use angle braces and/or wall anchors to secure to wall.
- Place heaviest items on bottom shelves/drawers and never place large items on top.
- Do not allow children to climb/hang on drawers, bins or doors.
- Do not open more than one drawer at a time.
- Refer to Assembly Instructions for weight restrictions.

Fabric or Plastic Bins

- Wipe clean with a damp cloth.
- Do not overload bins or drag when full.

