

Drill

10 mm (3/8")

 
MODEL DP3002, DP3003

13 mm (1/2")


MODEL DP4000, DP4001

13 mm (1/2")

MODEL DP4002, DP4003

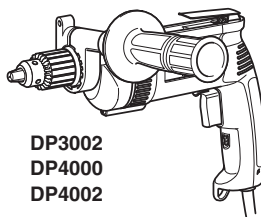

**DP3002
DP4000
DP4002**

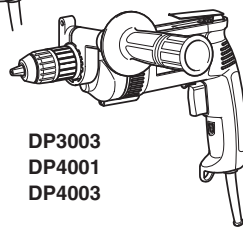 

**DP3003
DP4001
DP4003**

003006



**DOUBLE
INSULATION**

I N S T R U C T I O N M A N U A L

WARNING:

For your personal safety, **READ** and **UNDERSTAND** before using.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

SPECIFICATIONS

Model		DP3002	DP3003	DP4000	DP4001	DP4002	DP4003
Capacities	Steel	10 mm (3/8")		13 mm (1/2")			
	Wood	32 mm (1-1/4")		38 mm (1-1/2")			
No load speed (RPM)		0 - 1,200/min.		0 - 900/min.		0 - 600/min.	
Overall length		304 mm (12")	296 mm (11-5/8")	304 mm (12")	308 mm (12-1/8")	304 mm (12")	308 mm (12-1/8")
Net weight		2.0 kg (4.4 lbs)	1.8 kg (3.9 lbs)	2.2 kg (4.8 lbs)	2.0 kg (4.4 lbs)	2.2 kg (4.8 lbs)	2.0 kg (4.4 lbs)

- Manufacturer reserves the right to change specifications without notice.
- Specifications may differ from country to country.

GENERAL SAFETY RULES

USA002-2

(For All Tools)

⚠ WARNING:
Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

Work Area

1. **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.

3. **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control.

Electrical Safety

4. **Double insulated tools are equipped with a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not**

change the plug in any way. Double insulation ☐ eliminates the need for the three wire grounded power cord and grounded power supply system.

- 5. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- 6. Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- 7. Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately.** Damaged cords increase the risk of electric shock.
- 8. When operating a power tool outside, use an outdoor extension cord marked “W-A” or “W”.** These cords are rated for outdoor use and reduce the risk of electric shock.

Personal Safety

- 9. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- 10. Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.
- 11. Avoid accidental starting. Be sure switch is off before plugging in.** Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.
- 12. Remove adjusting keys or wrenches before turning the tool on.** A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.

- 13. Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations.

- 14. Use safety equipment. Always wear eye protection.** Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions. Ordinary eye or sun glasses are NOT eye protection.

Tool Use and Care

- 15. Use clamps or other practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.
- 16. Do not force tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.
- 17. Do not use tool if switch does not turn it on or off.** Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- 18. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the tool.** Such preventive safety measures reduce the risk of starting the tool accidentally.
- 19. Store idle tools out of reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
- 20. Maintain tools with care. Keep cutting tools sharp and clean.** Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
- 21. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tools operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.
- 22. Use only accessories that are recommended by the manufacturer for your**

model. Accessories that may be suitable for one tool, may become hazardous when used on another tool.

SERVICE

23. Tool service must be performed only by qualified repair personnel. Service or main-

tenance performed by unqualified personnel could result in a risk of injury.

24. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of electric shock or injury.

USE PROPER EXTENSION CORD: Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table 1 shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Table 1: Minimum gage for cord

Ampere Rating		Volts	Total length of cord in feet			
		120 V	25 ft.	50 ft.	100 ft.	150 ft.
More Than	Not More Than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	

SPECIFIC SAFETY RULES

USB001-2

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to drill safety rules. If you use this tool unsafely or incorrectly, you can suffer serious personal injury.

1. Hold tool by insulated gripping surfaces when performing an operation where the cutting tools may contact hidden wiring or its own cord. Contact with a “live” wire will make exposed metal parts of the tool “live” and shock the operator.
2. Always be sure you have a firm footing. Be sure no one is below when using the tool in high locations.
3. Hold the tool firmly.
4. Keep hands away from rotating parts.
5. Do not leave the tool running. Operate the tool only when hand-held.
6. Do not touch the drill bit or the workpiece immediately after operation; they may be extremely hot and could burn your skin.
7. Some material contains chemicals which may be toxic. Take caution to prevent dust inhalation and skin contact. Follow material supplier safety data.

SAVE THESE INSTRUCTIONS

 **WARNING:**
MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

SYMBOLS

USD201-2

The followings show the symbols used for tool.

V	volts	n₀	no load speed
A	amperes		Class II Construction
Hz	hertz	.../min	revolutions or reciprocation per minute
	alternating current		

FUNCTIONAL DESCRIPTION

⚠ CAUTION:

- Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

Switch action

 
⚠ CAUTION:

- Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the “OFF” position when released.
- Switch can be locked in “ON” position for ease of operator comfort during extended use. Apply caution when locking tool in “ON” position and maintain firm grasp on tool.

To start the tool, simply pull the switch trigger. Tool speed is increased by increasing pressure on the switch trigger. Release the switch trigger to stop.

For continuous operation, pull the switch trigger and then push the lock lever upward.

To stop the tool from the locked position, pull the switch trigger fully, then release it.

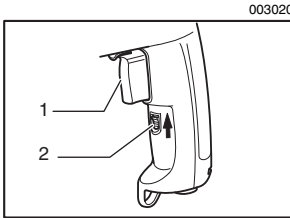


- 003020
1. Switch trigger
 2. Lock lever

Reversing switch action

This tool has a reversing switch to change the direction of rotation. Move the reversing switch lever to the ⇐ position (A side) for clockwise rotation or the ⇒ position (B side) for counterclockwise rotation.


⚠ CAUTION:

 - Always check the direction of rotation before operation.
- Use the reversing switch only after the tool comes to a complete stop. Changing the direction of rotation before the tool stops may damage the tool.

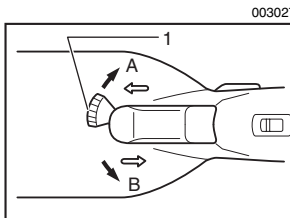

- 003027
1. Reversing switch lever

 003032

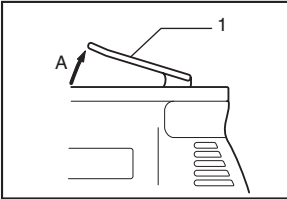


1. Hook

Hook

When using the hook, pull it out in A direction and then push it in B direction to secure in place.

When not using the hook, return it back to its initial position by following the above procedures in reverse.

 003033

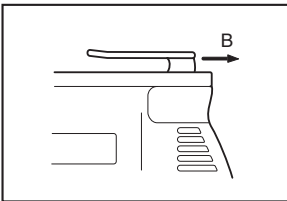


ASSEMBLY

⚠ CAUTION:

- Always be sure that the tool is switched off and unplugged before carrying out any work on the tool.

 003040

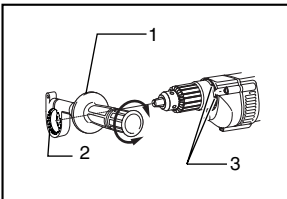

1. Side grip
2. Teeth
3. Protrusions

 
Installing side grip (auxiliary handle)

Always use the side grip to ensure operating safety. Install the side grip so that the teeth on the grip fit in between the protrusions on the tool barrel.

Then tighten the grip by turning clockwise at the desired position. It may be swung 360° so as to be secured at any position.

Installing or removing drill bit

003052

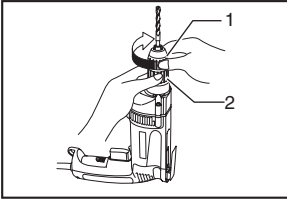

1. Sleeve

 
2. Ring

For Model DP3003, DP4001, DP4003

Hold the ring and turn the sleeve counterclockwise to open the chuck jaws. Place the bit in the chuck as far as it will go. Hold the ring firmly and turn the sleeve clockwise to tighten the chuck.

To remove the bit, hold the ring and turn the sleeve counterclockwise.

003053

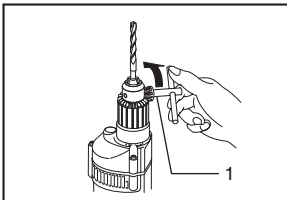

1. Chuck key

 
For Model DP3002, DP4000, DP4002

To install the bit, place it in the chuck as far as it will go. Tighten the chuck by hand. Place the chuck key in each of the three holes and tighten clockwise. Be sure to tighten all three chuck holes evenly.

To remove the bit, turn the chuck key counterclockwise in just one hole, then loosen the chuck by hand.

After using the chuck key, be sure to return to the original position.

003059

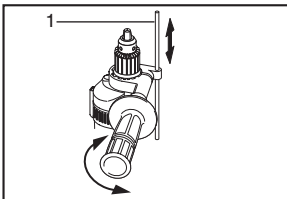

1. Depth gauge

Depth gauge (optional accessory)

 
The depth gauge is convenient for drilling holes of uniform depth. Loosen the side grip and insert the depth gauge into the hole in the side grip. Adjust the depth gauge to the desired depth and tighten the side grip.

NOTE:

- The depth gauge cannot be used at the position where the depth gauge strikes against the tool body.


OPERATION

003076

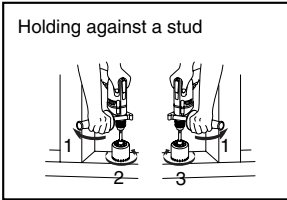

1. Reaction
2. Reverse
3. Forward

 003077

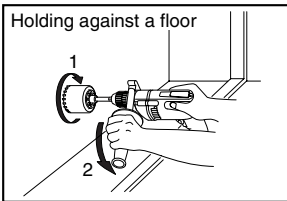

1. Forward
2. Reaction

Holding tool

When drilling a large hole with a hole saw, etc., the side grip (auxiliary handle) should be used as a brace to maintain safe control of the tool.

Grasp the rear handle and the front grip firmly when starting or stopping the tool, since there is an initial and final reaction.

When drilling action is forward (clockwise), the tool should be braced to prevent a counterclockwise reaction if the bit should bind. When reversing, brace the tool to prevent a clockwise reaction. If the bit must be removed from a partially drilled hole, be sure the tool is properly braced before reversing.

Drilling operation

Drilling in wood

When drilling in wood, the best results are obtained with wood drills equipped with a guide screw. The guide screw makes drilling easier by pulling the bit into the workpiece.

Drilling in metal

To prevent the bit from slipping when starting a hole, make an indentation with a center-punch and hammer at the point to be drilled. Place the point of the bit in the indentation and start drilling.

Use a cutting lubricant when drilling metals. The exceptions are iron and brass which should be drilled dry.

⚠ CAUTION:

- Pressing excessively on the tool will not speed up the drilling. In fact, this excessive pressure will only serve to damage the tip of your bit, decrease the tool performance and shorten the service life of the tool.

-
- There is a tremendous twisting force exerted on the tool/bit at the time of hole breakthrough. Hold the tool firmly and exert care when the bit begins to break through the workpiece.
 - A stuck bit can be removed simply by setting the reversing switch to reverse rotation in order to back out. However, the tool may back out abruptly if you do not hold it firmly.
 - Always secure small workpieces in a vise or similar hold-down device.
 - Avoid drilling in material that you suspect contains hidden nails or other things that may cause the bit to bind or break.

MAINTENANCE

CAUTION:

- Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.

To maintain product SAFETY and RELIABILITY, repairs, carbon brush inspection and replacement, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

ACCESSORIES

CAUTION:

- These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Makita service center.

- Drill bits
- Chuck key
- Depth gauge

Memo

[illegible]

Cut



First-Class
Postage
Required

Post Office will
not deliver
without proper
postage.

Makita U.S.A., Inc.
14930 Northam Street
La Mirada, CA 90638-5753



Fold

MAIL THIS PORTION

Your answers to the following questions are appreciated.

1. This product was purchased from:

- ☐ Home Center
- ☐ Hardware/Lumber Store
- ☐ Tool Distributor
- ☐ Industrial Supply
- ☐ Construction Supply
- ☐ Other ()

3. How did you learn about this product:

- ☐ Magazine
- ☐ From Dealer
- ☐ Newspaper
- ☐ Store Display
- ☐ Catalog
- ☐ Radio
- ☐ Exhibition
- ☐ From Friend
- ☐ Previous Usage
- ☐ Other ()

2. Use of the product is intended for:

- ☐ Construction Trade
- ☐ Industrial Maintenance
- ☐ Home Maintenance
- ☐ Hobby
- ☐ Other ()

4. Most favored points are:

- ☐ Design
- ☐ Features
- ☐ Size
- ☐ Price
- ☐ Makita Brand
- ☐ Repair Service
- ☐ Durability
- ☐ Power
- ☐ Other ()

5. Any comments:

DATE PURCHASED												MODEL NO.																			
MONTH				DAY				YEAR				SERIAL NO.																			
INTL.												LAST NAME / COMPANY NAME												STATUS				SEX			
																								Married Single				M F			
STREET ADDRESS																															
CITY																															
STATE				ZIP CODE								PHONE				AREA CODE															
AGE:				Under 19				20-29				30-39				40-49				50-60				Over 60							

BE SURE TO COMPLETE THE CUSTOMER'S PORTION OF THIS FORM AND RETAIN FOR YOUR RECORDS.

Please return this portion by facsimile or mail.

Facsimile No: (714) 522-8133

FACTORY SERVICE CENTERS

1-800-4-MAKITA

RETAIN THIS PORTION FOR YOUR RECORDS

ALABAMA 2365 Pelham Parkway Pelham, AL 35124 (205) 620-1791	COLORADO 11839 E. 51st Ave. Denver, CO 80239-2709 (303) 371-2850	KENTUCKY 1215 S. Hurstbourne Parkway Louisville, KY 40222 (502) 326-3740	NEW MEXICO 5805 Menaul Blvd. NE Albuquerque, NM 87110 (505) 881-4619	PUERTO RICO 200 Guayama St. Hato Rey, PR 00917 (787) 250-8776
ARIZONA 3707 E. Broadway Rd., Ste. 6 Phoenix, AZ 85040 (602) 224-2850	CONNECTICUT 508 Spring St. Windsor Locks, CT 06096 (860) 292-6405	LOUISIANA 5626 Jefferson Hwy. Harahan, LA 70123 (504) 733-4138	NEW YORK 4917 Genesee Street Cheektowaga, NY 14225 (716) 685-9503	TENNESSEE 4655 Nolensville Rd. Nashville, TN 37211 (615) 331-9922
ARKANSAS Shackleford Shopping Center 240 South Shackleford Rd., Ste. C Little Rock, AR 72211 (501) 224-5733	FLORIDA 620 Douglas Ave, Suite 1302 Altamonte Springs, FL 32714 (407) 774-6000	MARYLAND 7541 - 45 Ritchie Highway Glen Burnie, MD 21061 (410) 590-0160	131-35 31st Ave. Flushing, NY 11354 (718) 886-0971	TEXAS 12801 Stemmons Fwy Ste. 809 Farmers Branch, TX 75234 (972) 243-1150
CALIFORNIA 41850 Christy St. Fremont, CA 94538-5107 (510) 657-9881	750 East Sample Road Pompano Beach, FL 33064 (954) 781-6333	MASSACHUSETTS 232 Providence Hwy. Westwood, MA 02090 (617) 461-9754	NORTH CAROLINA 3501-G S. Tryon St. Charlotte, NC 28217 (704) 527-0611	12701 Directors Dr. Stafford, TX 77477-3701 (281) 965-8665
1421 N. Clovis Ave., Ste. 112 Fresno, CA 93727 (559) 252-5166	Thompson Center Waters 5501 W. Waters Ave., Ste. 406 Tampa, FL 33634 (813) 886-8292	MICHIGAN 37454 Ann Arbor Trail Livonia, MI 48150 (313) 432-1012	OHIO 6253 E. Main St. Columbus, OH 43213 (614) 860-0222	3453 IH-35 North, Ste. 101 San Antonio, TX 78219 (210) 228-0676
14930 Northam St. La Mirada, CA 90638-5753 (714) 522-9086	GEORGIA 4680 River Green Parkway Duluth, GA 30096-2566 (770) 476-8911	MINNESOTA 6427 Penn Ave. South Richfield, MN 55423 (612) 869-5199	6379 Pearl Road Parma Heights, OH 44130 (440) 843-7555	UTAH 145 E. 1300 S., Ste. 101 Salt Lake City, UT 84115 (801) 359-3410
1970 Fulton Avenue Sacramento, CA 95825 (916) 482-5197	HAWAII 4510 Salt Lake Blvd., Suite A7 Honolulu, HI 96818 (808) 847-0038	MISSOURI 9876 Watson Road St. Louis, MO 63126-2221 (314) 909-9889	1617 E. Kemper Rd. Sharonville, OH 45246 (513) 771-0788	VIRGINIA 5760 Northampton Blvd., Ste. 102 Virginia Beach, VA 23455 (757) 460-0280
1440 South "E" Street San Bernardino, CA 92408 (909) 885-1289	ILLINOIS 1450 Feehanville Dr. Mt. Prospect, IL 60056-6011 (847) 297-3100	NEBRASKA 4129 S. 84th St. Omaha, NE 68127 (402) 597-2925	OKLAHOMA 552 E. Memorial Road Oklahoma City, OK 73114 (405) 752-2655	WASHINGTON 22220 84th Ave. So., Bldg. A Kent, WA 98032 (253) 395-8055
7674 Clairemont Mesa Blvd. San Diego, CA 92111 (858) 278-4471	INDIANA 8403 Michigan Road, Unit 1 Indianapolis, IN 46268 (317) 334-9980	NEVADA 3375 S. Decatur Blvd. Suite 22 - 24 Las Vegas, NV 89102 (702) 368-4277	OREGON 828 18th Avenue., N.W. Portland, OR 97209 (503) 222-1823	WISCONSIN Lincoln Plaza Shopping Ctr. 2245 S. 108th St. West Allis, WI 53227 (414) 541-4776
1565 Winchester B. Campbell, CA 95008-0501 (408) 379-0377	KANSAS 8619 W. 95th St. Overland Park, KS 66212 (913) 642-1111	NEW JERSEY 251 Herrod Blvd. Dayton, NJ 08810-1539 (609) 655-1212	6200 Babcock Blvd Pittsburgh, PA 15237 (412) 366-6363	

CUSTOMER'S RECORD

When you need service: Send complete tool (prepaid) to one of the Makita Factory Service Centers listed, or to an Authorized Makita Service Center. Be sure to attach a letter to the outside of the carton detailing the problem with your tool.	Date Purchased
	Dealer's Name & Address
	Model No.
	Serial No.

WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one-year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others:
- repairs are required because of normal wear and tear:
- the tool has been abused, misused or improperly maintained:
- alterations have been made to the tool.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE-YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation
3-11-8, Sumiyoshi-cho,
Anjo, Aichi 446-8502 Japan