



PRO18
PRO30

HOT DOG ROLLER INSTRUCTION MANUAL



WARNING

Misuse of this machine may results in serious injury or death.
Please read and follow all precautions below.

This machine is not a toy and is intended for adult use only.

Do not use the machine for other than its intended purpose. Do not modify.

Under no circumstances should the machine be used on an ungrounded outlet.

Do not clean with detergent or abrasive chemicals. Do not immerse in water.

Take proper safety precautions when using this machine.

Do not touch moving parts. Keep body, hair, jewelry, clothes, .etc away from machine when in use.

Use only 3-prong grounded extension cords that meet or exceed the electrical rating.


Always switch power off on machine before unplugging from outlet.

SPECIFICATIONS


Model	Temperature	Electric Voltage	Rollers
PRO18	0-250 °	120V	7
PRO30	0-250 °	120V	11

PARTS & WIRING DIAGRAM


Glass Shield Parts List

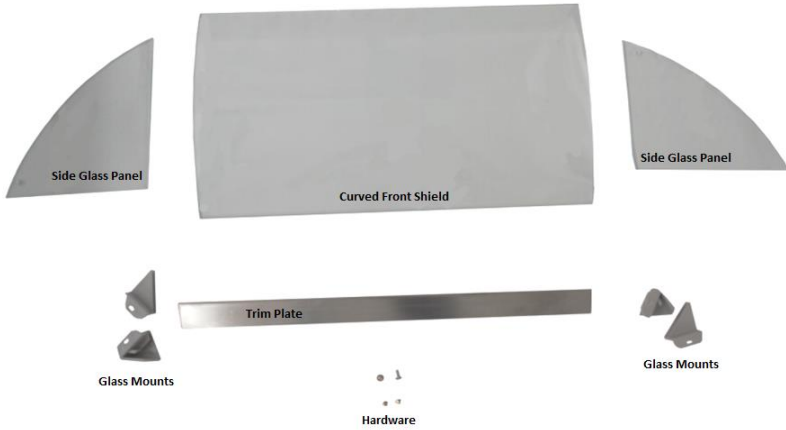

Hotdog Roller Components

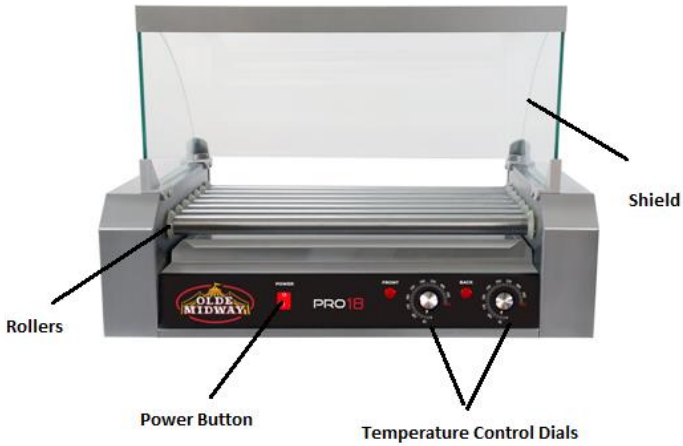

Circuit Diagram

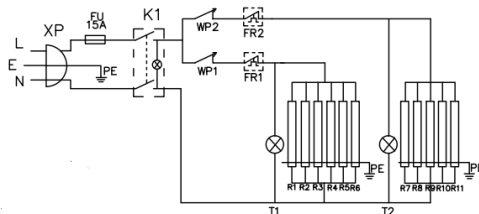

ASSEMBLY INSTRUCTIONS



INSPECT ALL COMPONENTS BEFORE USE.
**DO NOT ATTEMPT TO USE THE HOTDOG ROLLER
MACHINE IF ANY PARTS ARE DAMAGED OR MISSING.**

- 1.** Locate and remove the pair of screws on the inner left and right sides of the roller base and set aside.
- 2.** Position the back glass mount onto the roller base. Reinsert the screws removed in step 1 and hand-tighten as it may need to be adjusted. Repeat for the remaining 3 mounts.
- 3.** Insert one of the small side glass panels into both the front and back mounts on one side of the machine with the curved side of the glass facing the back (away from the controls). If needed, adjust mounts by sliding forward or backward until the glass is snug; tighten screws to secure. Repeat for the other side.
- 4.** Place the large curved glass shield into the back mounts pushing gently all the way down into the channel. Check to make sure the edges of the top and side glass pieces are flush.
- 5.** Place the stainless steel trim plate over the edge of the top glass, aligning the holes with the glass.
- 6.** Insert a bolt through the trim plate and glass, then secure with nut. **DO NOT OVERTIGHTEN** as this may crack the glass.

OPERATION INSTRUCTIONS

1. Before the first use, apply a small amount of vegetable oil onto the surface of the rollers. Press the power switch **ON**. The indicator light will glow when the machine has power and will turn off when the set temperature has been reached. *Note: The machine will become hot very quickly.*

2. Adjust the temperature controllers. We recommend using lower temperatures until you understand the cooking times.



PRO18 (7 rollers) **FRONT** dial controls front 4 rollers - **BACK** dial controls the rear 3.
PRO30 (11 rollers) **FRONT** dial controls front 6 rollers - **BACK** controls the rear 5.

3. ATTENTION: Rollers are hot – **DO NOT TOUCH!**

Place hot dog between the rollers using tongs or other utensil.

PRO18 – Maximum 18 hot dogs.
PRO30 – Maximum 30 hot dogs.

4. After approximately 15 minutes the hot dog should be ready to eat depending on the cooking temperature, diameter of the hot dog and starting temperature (frozen hot dogs may take longer).

5. Remove the hot dogs using tongs or other utensil. **DO NOT USE HANDS.**

6. Press the power switch **OFF**.

7. Unplug from wall outlet and allow cooling completely before touching.

CLEANING & MAINTENANCE

1. Wipe down rollers and removable drip tray with a damp soft cloth. Do not immerse or use excess water. Do not use abrasive cleaners or metal scrubbers on any part of surface.

2. Allow to dry completely before storing.