

Set Dim. 14'-6"W x 15'-8"L x 10'H **Est. Building Time:** 6-8 hr.

SLIDE AND 4" x 4" LUMBER SOLD SEPARATELY



check out http://www.swing-n-slide.com/planupdates.htm for updates to these instructions.

Swing•N•Slide • 1212 Barberry Drive • Janesville, Wisconsin 53545 Visit our web site at: www.swing-n-slide.com or call us at 1-800-888-1232



Safety Checklist for Swing-N-Slide Play Sets and Accessories

Observing the following statesments and warnings reduces the likelihood of serious or fatal injury.

- This playset has a weight capacity of 1200 pounds based on a maximum occupancy of eight (8). Total weight capacity does not include accessories added after purchase.
- □ This playset is intended for use by children from (2) to (10) years of age.
- □ On-site adult supervision for children of all ages is recommended.
- □ Instruct children not to walk close to, in front of, behind, or between moving items.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- □ Instruct children to avoid swinging empty seats.
- □ Teach children to sit in the center of the swings with their full weight on the seats.
- □ Instruct children not to use the equipment in a manner other than intended.
- □ Instruct children not to get off equipment while it is in motion.
- Do not allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- □ Instruct children not to climb when the equipment is wet. Slippery surfaces may cause a hazard.
- □ Verify that suspended climbing ropes, chain, or cable are secured at both ends.
- □ Verify that suspended climbing ropes, chain, or cable cannot be looped back on itself.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- □ Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
- Dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.
- □ Instruct children to not walk or run up slides.
- □ Instruct children to not pick up slides or ramps as this may cause damage or breakage.
- Place the equipment on level ground not less than six (6) feet from any obstructions. Be sure to look overhead for any obstructions above the playset.
- Do not use the equipment until fully erected per this playset instruction manual, bolts tightened and the playset is anchored to the ground.

IMPORTANT!

This product is intended for single family home/residential use only and not intended for use in any public setting. Placement in any public setting constitutes a misuseof this product.

PLAYSET MAINTENANCE

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, splitting, checking, twisting, shrinkage, swelling or any other physical properties of wood that do not present a safety hazard, are not covered by our warranty.

To help minimize these natural defects we recommend applying a sealer or stain every two or three years, or more often as the climate dictates. Power washing, sanding or other preparatory methods should be used prior to sealing or staining.

Periodic maintenance is required to ensure safe enjoyment of your playset and accessories. Read and follow the Playset Checklist below to reduce the likelihood of serious or fatal injury. Use the checklists as a guide for proper playset care and maintenance.

PLAYSET CHECKLIST

At the beginning of each play season:					
Tighten all hardware.					
Lubricate all metallic moving parts per manufacturer's instructions.					
Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.					
Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.					
Check metal parts for rust. If found, sand and repaint using a nonleaded-based paint meeting the requirements of 16 CFR 1303.					
Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.					
Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.					
Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.					
Twice a month during play season:					
Tighten all hardware.					
Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.					
Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.					
Once a month during play season:					
Lubricate all metallic moving parts per manufacturer's instructions.					
Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.					
At the end of each play season or when the temperature drops below 10°F:					
Remove plastic swing seats, tents, sandbox cover, tire swing, slide and other items as specified by the manufacturer and take indoors or do not use.					
Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.					
Owner shall be responsible for maintaing the legibility of warning labels.					
When you are ready to dispose of your playset, make sure that all metal, plastic and wood components are disposed of in accordance with local waste ordinances.					
Buyer and/or owner should disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the swing set is discarded. Do not burn your playset's preserved wood.					

For further information on playground safety, the Consumer Product Safety Commission(CPSC) publishes the Outdoor Home Playground Safety Handbook which can be downloaded for free from www.cpsc.gov. An additional resource is the American Society of Testing and Materials (ASTM) Standard Consumer Safety Performance Specification for Home Playground Equipment (ASTM F1148) which can be purchased and downloaded from www.astm.org.

PLAYGROUND SURFACING MATERIALS

SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK₉

Select Protective Surfacing

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

Maximum fall height for this playset is 85".

Loose-Fill Materials:

Maintain a minimum depth of 9 inches of loose- fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9- inch depth.

Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.

Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles:

You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

Installations of these surfaces generally require a professional and are not "do-it-yourself" projects.

Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.

□ Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Be sure to

- □ Extend surfacing at least 6 feet from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- □ For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet in all directions.



9 This information has been extracted from the CPSC publications "Playground Surfacing—Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772





TOOLS REQUIRED

ELECTRIC DRILL

HAMMER





PB 9210 Board List

SOLD SEPARATELY				
(1) 4" x 4" x 120"				
(8) 4" x 4" x 96"				
(1) 4" x 4" x 32"		(2) 2" x 4" x 35"]
(13) 2" x 4" x 47-1/2"		(3) 2" x 4" x 38"		
(3) 2" x 4" x 32"		(2) 2" x 4" x 38-	1/2"	
(3) 2" x 4" x 23"		(4) 2" x 4" x 11-3 (3) 5/8" x 6" x 4	3/4" 4"	
(7) 5/4" x 6" x 32"		(2) 5/8" x 3-1/4"	× 23-3/4"	
(4) 5/8" x 6" x 28-3/4"		(2) 5/4" x 4" x 24	4-3/4"	
(6) 1" x 6" x 24-3/4"				
(2) 5/4" x 4" x 32"				
(2) 5/8" x 3-1/4" x 24-1/2"	NOMINAL MATERIAL SIZE			
	LISTEI) SIZE	TRUE	SIZE
	English(*)	Metric(Cm)	English(*)	Metric(Cm)
(1) 2" x 4" x 18"	1x4	2.5x7.6	3/4x3-1/2	1.9x9
	1X6 5/4×4	2.5X15.3	$\frac{3/4 \times 5 - 1/2}{1 \times 2 - 1/2}$	1.9X14
	5/4×4	3.2x10.2	1x5-1/2	$2.0 \chi 9$ $2.5 \chi 1/$
(1) 5/4" x 4" x 17" Slide Stake	2x2	5x5	$1-1/2 \times 1-1/2$	3 8x3 8
	2x3	5x7.6	$1-1/2 \times 2 - 1/2$	3.8x6.4
	2x4	5x10	1-1/2x3-1/2	3.8x9
(2) 5/8" x 4" x 16-1/4" Angle Cut	2x6	5x15.3	1-1/2x5-1/2	3.8x14
	3x3	7.6x7.6	3 x 3	7.6x7.6
	4x4	10x10	3-1/2x3-1/2	9x9
	(*) Estin	nated Sizing Du	e to Cutting P	rocess
(4) 5/4" x 4" x 12"				

Playset Safety Area

Min. Use Zone: 28'-4" x 27'-8" Set Dim. 14'-6"W x 15'-8"L x 10'H



How to select the correct fastener

Use these 2 pictorial guides to help select the correct fastener(s) for the lumber attachment you are making. Each diagram will highlight the correct number of fasteners to use and where to attach them.



NOTE: All hardware to be driven until flush with surface of wood or no deeper that 1/16".

Understanding how the Bracket System Works





PB 9210 Assembly Instructions















Swing Beam Drill Locations

1. Use a 3/8" drill bit to drill a 3/8" hole through the beam at each location shown in (Fig. 6)

2. Install Swing Hangers onto swing beam at locations shown.

Note: Swing Hangers must be installed on the same side dimensions were originally measured and marked.





Swing Beam Drill Locations

1. Step 1: Tap t-nut into 3/8" hole as shown in (Fig. 7).

2. Step 2: Place a bottom beam clamp over the swing hanger as shown in (Fig. 7).

3. Step 3: Insert the swing hanger into the beam and thread it into the T-nut until it is flush or near flush with the top of the T-nut. A screwdriver may be used to twist the hanger (Fig. 7). Orient swing hanger as shown in (Fig 7).

4. Step 4: Use (4) 1-1/4" screws to secure beam clamp.

5. Check hanger to ensure it does not spin.

6. Repeat for all swing hangers.





A-Frame Assembly cont.

Attach A-Frame beam to Swing Beam using (2) hex bolts and 4 screws as shown in (Fig. 9).
Tighten hex bolt to flush with top of T-nut. Repeat steps 1 & 2 on second bracket.

A-Frame Assembly cont.

- 1. Position Split-Brackets on 4" x 4" x 47-1/2" (Fig 10).
- 2. With the help of others, lift A-Frame and
- Swing Beam Assembly and center onto unit as shown in **(Fig. 10)**.
- 3. Secure as shown in (Fig 10a).



















Rock Wall Assembly

- 1. Assemble Rock Wall as shown in (Fig. 15).
- 2. Mark locations of Climbing Rocks on the Rock Wall in a pattern that will easily allow your child to climb to the deck. Make sure the bolt hole locations are clear of wall supports before drilling.
- 3. Drill holes through the wall at the desired locations using a 3/8" drill bit. Install Climbing Rocks as shown in

(Fig. 15a).

- 4. Make sure the Rock Wall and Climbing Rock connections are secure before allowing any children to play on the Rock Wall.
- 5. Attach Rock Wall as shown in (Fig. 15b).







2. With the help of others, position the finished assembly to the unit (Fig. 17a). Determine post locations. Remove assembly and dig two 16" deep holes at the previously determined spots as shown in (Fig. 17b). Reposition assembly to unit placing posts in the holes.

3. Level the assembly and attach to the unit using six 1-1/4" Lag screws per bracket. Fill in holes and compact earth around posts.





Climbing Rope

- 1. Secure top of Climbing Rope on the bottom center of the 2" x 4" x 32" as shown in (Fig. 19b)._
- 2. Using two rope staples secure the bottom of the climbing rope. Tap two staples in place approximately 1" apart. Wrap the rope under the 5/4" x 6". Then thread the rope through both staples. Double the rope back on itself and through the first staple. Pull the rope tight and secure in place by pounding staples in place. See (Fig. 19).
- 3. Once you have Secured end of climbing, rope cut off any excess with a sharp knife or scissors.



Swings



Ring/Trapeze Combo



Assembly Instructions

- 1. Attach Quick Link to chain oriented as shown.
- 2. Attach Quick Link to gym ring as shown. Attach second set of Quick Links (3) links up. Attach Trapeze Bar as shown.
- 3. Tighten all Quick Links closed with wrench.



Hanging Instructions

- 1. When hanging accessories next to other components, a minimum clearance of at least 8" from adjacent swinging elements or any play equipment support structure is required.
- 2. Hang the chains from the Swing Hangers. Crimp the hook opening closed with pliers to secure the chains to the swing hangers (Fig. 23). Make sure all connections are closed tightly and secure before using.

Anchor-It



Anchor-It Installation.

Instructions for Anchoring Swing•N•Slide Activity Centers

- **1.** Determine the final location of your activity center.
- Place the Anchor-It stakes adjacent to the base and near the corners of your activity center (at the bottom of the legs on swing sets) and twist the auger-style stakes into the ground until only the loop is exposed.
- 3. Place the metal strap through the loop of the Anchor-It stake and secure it to the unit with a lag screw and washer as illustrated to the right. Note: Attach the strap to the unit with as little play as possible using whatever holes in the strap that work best.

Swing-N-Slide[®] MANUFACTURERS LIMITED WARRANTY

Swing-N-Slide[®] takes great pride in the quality and durability of our products. Our Manufacturer's Limited Warranty provides confidence and demonstrates our commitment to providing quality residential playground products.

MANUFACTURER'S LIFETIME LIMITED WARRANTY

Swing-N-Slide[®] warrants its thermoformed slides and climbing mountains to be free from defects in workmanship and materials, under normal use and conditions, for the lifetime of the product.

MANUFACTURER'S 5 YEAR LIMITED WARRANTY

Swing-N-Slide[®] warrants its Custom Ready-to-Build Play Set kits and accessories to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years.

MANUFACTURER'S 5 YEAR LIMITED WARRANTY

Swing-N-Slide[®] warrants its No-Cut and Wood Complete Ready-to-Assemble Play Set kits against wood rot and termite damage, and to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years for structural wood components.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, splitting, checking, twisting, shrinkage, swelling or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

MANUFACTURER'S ONE YEAR WARRANTY

Swing-N-Slide[®] warrants its canopy roofs and/or tarps, and Timber GLOVE lumber wrap to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year.

Swing-N-Slide[®] will repair, or at its discretion, replace any part within the stated warranty period which is defective in workmanship or materials. This decision is subject to verification of the defect upon delivery of the defective part to Swing-N-Slide[®] at 1212 Barberry Drive, Janesville, Wisconsin, 53545. Any part(s) returned to Swing-N-Slide[®] must have prior approved Return Authorization Number and proof of purchase, including the date of purchase. This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single family dwelling. This warranty is void if the product is put to commercial or institutional use. This warranty does not cover (a) products which have been damaged by acts of Nature, negligence, misuse, or accident, or which have been modified or repaired by unauthorized persons; (b) the cost of labor; or the cost of shipping the product, any part, or any replacement product or part.

Swing-N-Slide® DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE. Swing-N-Slide® WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is non-transferable and does not extend to the owners of the product subsequent to the original purchaser. Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

This warranty also does not apply to:

- Structures not erected, maintained or inspected in conformance with Swing-N-Slide® installation plans
- Structures that have had parts added or substituted not in conformance with Swing-N-Slide® installation plans
- Parts that have been modified, altered or misused
- Parts that have not been used as designed or intended
- Damage due to acts of Nature, vandalism, abnormal use or abuse as determined by Swing-N-Slide®



Got Questions? We've got answers! Call our Customer Service Representatives

1-800-888-1232

or email us at service@swing-n-slide.com

Available Monday - Friday, 7 am - 5 pm (CST)

Weekend support available April through July

Technical support from experienced Swing-N-Slide customer service representatives who have actually built a swing set themselves.