



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2012 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 06/15/12)



HCM700
SERIES

Hot Chocolate Maker

Instructions and Recipes



Make everyday a party!
Visit www.nostalgiaelectrics.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	6
HELPFUL TIPS	7
CLEANING & MAINTENANCE	7
RECIPES	8
RETURNS & WARRANTY	10

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz
600 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER immerse the Base or cord in water.
2. NEVER use near water.
3. NEVER leave unit unattended if used near children.
4. NEVER use a scouring pad on the appliance.
5. NEVER use an abrasive sponge or harsh cleaning products on or inside of the appliance.
6. NEVER use for anything other than what this item was originally intended.
7. Avoid contact with moving parts.
8. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
9. DO NOT place parts in dishwasher.
10. Keep out of reach of children.
11. Unplug appliance from electrical outlet when not in use and before cleaning. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
12. This appliance is NOT A TOY.
13. This appliance is not intended for use by young children or cognitively challenged individuals without supervision.

IMPORTANT SAFEGUARDS



When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. NEVER put fingers or utensils into feed or discharge areas.
3. Keep hands and utensils out of container while unit is in operation to reduce the risk of severe personal injury or damage to the appliance.
4. To protect against electrical shock do not immerse cord, plug or main unit in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before removing parts for cleaning. Allow appliance to cool before cleaning.
7. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. The manufacturer does not recommend the use of accessory attachments. Use of attachments may result in fire, electrical shock or injuries.
9. DO NOT remove Lid when in use.
10. DO NOT add anything to the container while the appliance is operating.

11. DO NOT let the cord touch hot surfaces.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving this appliance with liquids inside.
14. This unit must be on a level surface to operate properly.
15. DO NOT use this appliance for other than its intended use.
16. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
17. DO NOT leave unit unattended while in use or when plugged into an outlet.
18. Check inside of the container for foreign objects prior to use.
19. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
20. Extension cord can be used if care is exercised in use.
21. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
22. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. **If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**
23. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
24. Beverages will be HOT. Avoid contact with hot liquids.
25. Always operate the appliance with cover in place.
26. Make sure the container is properly attached to the base before turning on unit.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the HOT CHOCOLATE MAKER from Nostalgia Electrics™! Making perfectly blended cups of hot cocoa at home has never been easier. The HOT CHOCOLATE MAKER heats and whips hot beverages into steamy, delicious drinks in no time. And, it's sleek, retro design will complement any kitchen. The HOT CHOCOLATE MAKER makes great:

- Gourmet Hot Cocoa
 - Café Lattes
 - Tea Lattes
 - Café Mochas
- and more!

The variety of hot drinks you can create in your HOT CHOCOLATE MAKER are virtually endless. Use your imagination and have fun!


PARTS & ASSEMBLY

Parts



Switch Positions

Left: **Heat/Froth** (heat and stir) | Center: **Off** | Right: **Froth** (stir)

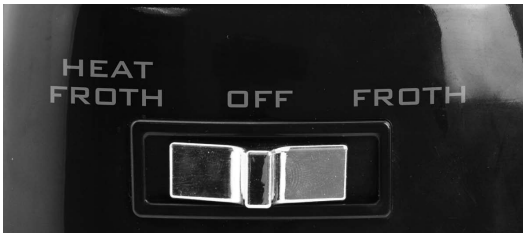

Cord Location

Cord can be wrapped and stored inside of the bottom of Base when not in use.
Please see **Important Safeguards** section for instructions about the cord & plug.



HOW TO OPERATE

1. Before first use, wipe down the HOT CHOCOLATE MAKER exterior with a clean, non-abrasive cloth or sponge. Thoroughly wash the interior of the Mixing Container with warm, sudsy water and a non-abrasive cloth or sponge. DO NOT immerse Mixing Container in water. Wash Dispensing Valve and Lid in warm, sudsy water and thoroughly dry. DO NOT put the Base in water.
2. Find a stable, waterproof surface near an electrical outlet before starting. Make sure the cord is away from any water source.
3. DO NOT place the HOT CHOCOLATE MAKER near the edge of a table or countertop.
4. Remove the Lid from the Mixing Container.
5. Pour 32 ounces of water or milk into the Mixing Container.
NOTE: Do not fill the Mixing Container past the "Max" fill line.
6. Add 8 to 14 tablespoons of your favorite instant drink mix, depending on whether using milk or water. (See SERVING GUIDE table below.)
7. Replace the Lid on the Mixing Container. Make sure the lid covers the pour spout. DO NOT operate without lid securely in place.
8. Plug the HOT CHOCOLATE MAKER into an outlet.
9. Turn the switch to the "HEAT/FROTH" position. The HOT CHOCOLATE MAKER will begin to mix and heat.

NOTE: You may move the switch to the "OFF" position to turn the appliance off at any time. A full 32 ounces takes approximately 6-8 minutes to heat. DO NOT run on "HEAT/FROTH" for more than 15 minutes. This will cause milk to scald.

10. Once the beverage reaches your ideal temperature, turn the switch to the "FROTH" position. Place a cup under the Dispensing Valve press down on the valve. The beverage will mix while it dispenses so that a rich layer of froth is released into your cup along with the hot drink.
11. When the container has less than 1 cup of liquid remaining or is empty, press the "OFF" switch. Dispense any remaining liquid into a cup by pressing down on the Dispensing Valve. You may also pour the beverage out of the top of the Mixing Container by turning the lid clockwise so the "POUR" indicator is aligned with the spout.

The appliance will remain on until you switch it off.

SERVING GUIDE				
CUPS	1	2	3	4
LIQUID Milk/Water	8-oz.	16-oz.	24-oz.	32-oz.
POWDER MIX with Milk	2 Tbsp.	4 Tbsp.	6 Tbsp.	8 Tbsp.
POWDER MIX with Water	4 Tbsp.	7 Tbsp.	11 Tbsp.	14 Tbsp.

NOTE: Pre-packaged instant cocoa, coffee and tea mixes may vary from the quantities indicated in this guide. Use the quantities specified on the packaging for exact measurements.

HELPFUL TIPS



NEVER leave the unit unattended while operating.

SMOKING

A small amount of smoke and/or odor may occur upon heating due to the release of manufacturing oils. This is normal.

NOISE

Some minor expansion/contraction sounds may occur during heating and cooling. This is normal.

HEATING BEVERAGES

DO NOT run the HOT CHOCOLATE MAKER on the "HEAT/FROTH" setting for more than 15 minutes. This will cause milk to scald.

CLEANING & MAINTENANCE

1. After using your HOT CHOCOLATE MAKER, disconnect from electrical outlet. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit. Allow the appliance to cool completely before cleaning.
2. Remove the Mixing Container from the Base. Pour out any unused beverage.
3. Wash the interior of the Mixing Container with a combination of mild detergent and water. DO NOT submerge the Mixing Container in water. Rinse and dry thoroughly.
4. Unscrew the Dispensing Valve from the Mixing Container by turning counterclockwise. Open the Dispensing Valve and flush with clean water.
5. Wash the lid in warm, soapy water. Rinse and dry thoroughly.
6. Wipe the exterior of the Base and Mixing container with a soft, damp cloth.
7. NEVER immerse Base in water or put any parts in the dishwasher.

RECIPES

You can create a variety of frothy, hot beverages with your HOT CHOCOLATE MAKER. Feel free to adjust the ingredients in the following recipes to your particular taste, or create your own delicious cafe-style drinks. The HOT CHOCOLATE MAKER has the capacity for four 8-oz. drinks. If your drink recipe is made for one, remember to adjust your recipes accordingly for multiple servings.

Refer to the serving guide in the How to Operate section for suggested serving sizes. When using pre-packaged cocoa, coffee or tea mixes, use the quantities specified on the packaging for exact measurements.

CAFÉ AU LAIT

- 1 Cup Water
Add water, instant coffee, milk and sugar to the HOT CHOCOLATE MAKER. Turn switch to "HEAT/FROTH".
- 1 Heaping Tsp. Instant Coffee
Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting.
- 1 Cup Milk
- 2 Tsp. Sugar, optional
Dispense the drink into a mug. Sprinkle nutmeg or ground cinnamon on top.
- Pinch of Ground Cinnamon or Nutmeg, optional
Serves 2.

CAFÉ MOCHA

- 1 Cup Water
Add ingredients to the HOT CHOCOLATE MAKER and turn switch to "HEAT/FROTH".
- 1 Heaping Tsp. Instant Coffee
Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting.
- 1 Cup Milk
- 3 Tbsp. Chocolate Syrup (or 1 Tbsp. unsweetened cocoa powder and 2 tbsp. sugar)
Dispense the drink into a mug. Sprinkle chocolate shavings on top if desired.
Serves 2.

VANILLA & CREAM COFFEE

- 1½ Cups Water
Add ingredients to the HOT CHOCOLATE MAKER and turn switch to "HEAT/FROTH".
- 1¾ Heaping Tsp. Instant Coffee
Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting.
- ½ Cup Milk
- ½ Cup Heavy Cream
Dispense the drink into a mug.
- 1½ Tbsp. Vanilla
For Cinnamon-Vanilla and Cream Coffee, add ½ tsp. of ground cinnamon.
- 2 Tsp. Sugar
Serves 2.

MOCHACCINO

- 1½ Cups Milk
- 2½ Tbsp. Chocolate Syrup (or 1 tbsp. unsweetened cocoa powder and 2 tbsp. sugar)
- ⅓ Cup Water
- 1 Heaping Tsp. Instant Coffee

Add ingredients to the HOT CHOCOLATE MAKER and turn switch to "HEAT/FROTH".

Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting.

Dispense the drink into a mug. Top with whipped cream and sweetened chocolate powder or chocolate shavings, if desired.

Serves 2.

MINTY HOT COCOA

- 2 Heaping Tbsp. Unsweetened Cocoa Powder
- 4 Tsp. Sugar
- 2 Cups Milk
- 3 Tbsp. Mint Syrup or Crème de Menthe

Add ingredients to the HOT CHOCOLATE MAKER and turn switch to "HEAT/FROTH".

Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting.

Dispense the drink into a mug. Top with whipping cream.

Serves 2.

SPICY MEXICAN HOT CHOCOLATE

- 3 Tbsp. Instant Hot Chocolate Mix
- 1 Tbsp. Chocolate Syrup
- ½ Tsp. Ground Cinnamon
- 1 Pinch Chili Powder
- ¼ Cup Milk
- ¾ Cup Water

Add ingredients to the HOT CHOCOLATE MAKER and turn switch to "HEAT/FROTH".

Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting.

Dispense the drink into a mug. Top with whipped cream, if desired.

Serves 1.

CREAMY CARAMEL APPLE CIDER

- 2 Cups Apple Cider or Apple Juice
- ¼ Tsp. Cinnamon
- 4 Tbsp. Caramel Syrup
- Whipping Cream

Add apple cider or juice and cinnamon to the HOT CHOCOLATE MAKER and turn switch to "HEAT/FROTH".

Run for 4 to 8 minutes, or until beverage reaches ideal temperature. Switch to "FROTH" setting. Dispense the drink into the mug.

Top with whipping cream and drizzle 2 tbsp. of caramel syrup over the top of each mug.

Serves 2.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

HOT CHOCOLATE MAKER / HCM700 SERIES

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

**For more information, visit us online at www.nostalgielectrics.com.
Like us on Facebook at www.facebook.com/NostalgiaElectrics.**