
HAMPTON BAY.

USE AND CARE GUIDE

Briar Ridge Brown Wicker Outdoor Patio Coffee Table

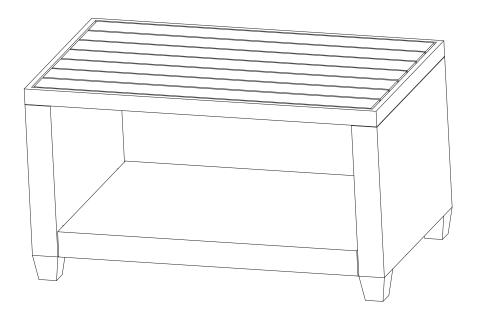

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confdence you have placed in Hampton Bay through the purchase of this Coffee Table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2
THD - TOC2	2
Safety Information	2
What is covered	3
What is not covered	3
Warranty	3

re-Installation	3
Hardware Included	3
Package Contents	ł
Installation	j
Care & Cleaning	3
Service Parts	7

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

SET UP YOUR FURNITURE PROPERLY

- 1. Ensure that all parts are assembled properly and fully tightened as per the instructions.
- 2. When placing in the desired location, ensure that all legs are resting on the same surface.

EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.

OBERVE WEIGHT LIMITS

The weight limits for the following products are listed below:

Chair: 300 lbs

- Swivel Chair: 300 lbs
- Loveseat: 500 lbs
- □ Ottoman: 150 lbs
- Table: 50 lbs

Sofa: 700 lbs
Rocking Chair: 300 lbs
Chaise Lounge: 300 lbs
Dining Table: 100 lbs
Dining Chair: 200 lbs



CAUTION: If you overload your furniture,injuries can occur.

Warranty

TWO YEAR FRAME, WEAVE AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame, weave and fabric to be free of manufacturing defects to the original purchaser for two years. For glass table top we warrant 30 days from the date of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Installation

PLANNING INSTALLATION

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly.


HARDWARE INCLUDED



Part	Description		Quantity
А	Bolt	M6x20mm	4
В	Bolt	M6x40mm	8
C	Washer	Φ 6mm	12
D	Hex wrench	4mm	1

Pre-Installation

PACKAGE CONTENTS

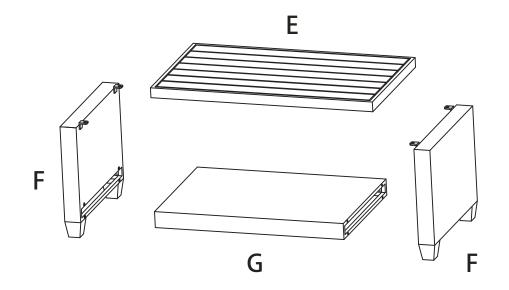


Part	Description	Quantity
E	Table top	1
F	Legs	2
G	Lower shelf	1

Installation

Attaching the legs to the top


- □ Place the top (E) on a soft surface.
- Insert each leg (F) with shelf supports facing the center into the four holes on the table top (E) as shown.
- Attach legs (F) to the table top (E) using the washers (C) and bolts (A), and hand tighten.Do not tighten completely.

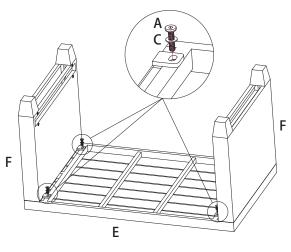

3


- Place the table right side up.
- This table is now ready for your enjoyment.

Completing the assembly

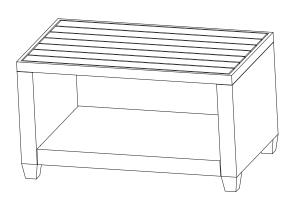

2 Attaching the shelf to the legs

- Attach the shelf (G) to the legs (F) by aligning holes on the shelf (G) with the holes on the legs (F). The shelf must be attached as shown in the image. Insert bolts (B) with washers (C) and hand tighten.
- □ Tighten all bolts (A) and (B) with washers (C) completely.

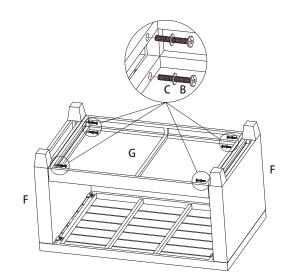

Care and Cleaning


- Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water.
- Rinse cushion thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink.
- Do not use bleach or solvents on fabrics. When cleaning the table top make sure to use a soft, clean cloth that does not bleed color as well.

Care and Maintenance

- □ Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Cushions may also be cleaned by hand with a mild solution of soap andwater. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

Service Parts

MODEL TYPE

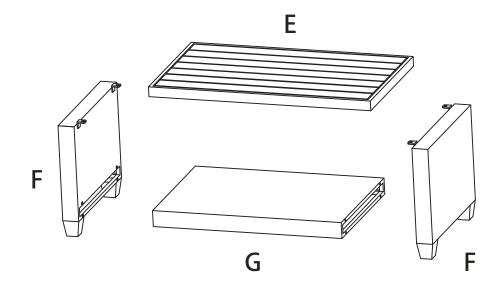

Part	Description	Quantity
E	Table top	1
F	Leg	2
G	Lower shelf	1

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.