

Use and Care Manual

Regular Cleaning: Regularly wipe outdoor furniture with a clean soft cloth to keep its surface clean and avoid the accumulation of dust and dirt.

Avoid Direct Sunlight: prolonged exposure to sunlight can cause outdoor furniture to fade or even deform, so try to avoid placing furniture in direct sunlight or use sunscreen measures such as umbrellas and awnings.

Regular Lubrication: Apply lubricating oil to the joints and moving parts of outdoor furniture on a regular basis to maintain their flexibility and prevent corrosion.

Avoid Heavy Pressure: Avoid placing heavy objects on the surface of outdoor furniture to avoid damaging the furniture.

Moisture and Sun Protection: When used outdoors, care should be taken to protect against sun and moisture, and avoid prolonged exposure to rain or sunlight. Waterproofing agents and sunscreen can be used appropriately to protect furniture.

Pay Attention to Moving: When moving outdoor furniture, avoid scratching the furniture to ensure its safe movement.

Regular Inspection: Regularly inspect the structure and components of outdoor furniture, and repair or replace them in a timely manner if they are found to be damaged or loose.

Maintenance of Rattan Furniture: Rattan furniture requires regular maintenance. It can be cleaned with a soft brush or cloth, and kept away from heat sources to prevent deformation and distortion.

Metal Material Maintenance: For outdoor furniture made of metal, it is recommended to apply a rust-resistant primer and then a surface anti-rust paint. Avoid cleaning agents containing chemicals such as ammonia and trisodium phosphate that can react with the metal furniture.