


Item #1004 379 432

Model #118023

HAMPTON BAY®

USE AND CARE GUIDE

OUTDOOR FIRE PIT

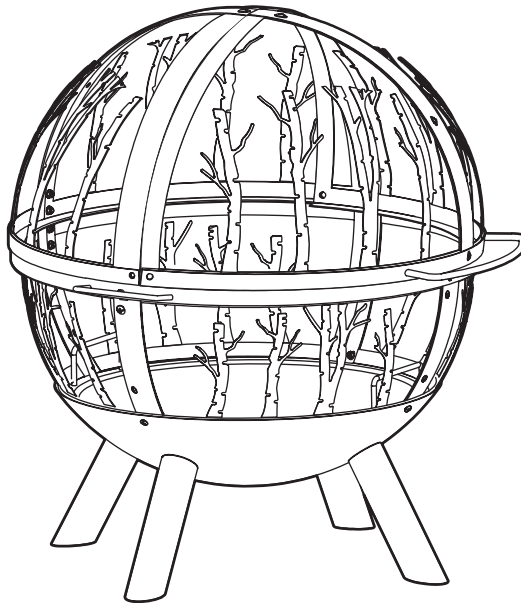

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this fire pit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Safety Information	2
Warranty	3
Pre-Installation	3

Assembly	5
Operation	6
Care and Cleaning	6

Safety Information

PRECAUTION

Use caution and common sense when using your outdoor fire pit. Failure to adhere to the safety warnings and guidelines in this manual could result in bodily injury or property damage. Save this manual for future reference.



WARNING: This outdoor fire pit is for outdoor use only.



WARNING: Use only on brick, concrete, stone, or other masonry surfaces.



WARNING: Do not use on lawns, wooden decks, artificial wood decking, or asphalt.



WARNING: Keep the outdoor fire pit a minimum of 10 ft. away from buildings, structures, any flammable items, and vehicles.



WARNING: Never use under low hanging tree branches, trellises, or overhangs of any kind including covered porches.



WARNING: For longer product life, keep fires to a respectable size, do not overload.



WARNING: The outdoor fire pit is for adult use only.



WARNING: Do not leave unattended at any time during use.



WARNING: Do not move the fire pit during use.



WARNING: Do not use in windy conditions.



WARNING: Use caution when tending the fire, as surfaces will become very hot while in use.



WARNING: Keep the spark guard in place while using as a fire pit.



WARNING: Use mittens or gloves with the poker to remove the spark guard. The spark guard will become very hot.



WARNING: Before each use make sure the outdoor fire pit is in good working condition.



WARNING: Use caution after the fire has been extinguished. Surfaces will remain hot for some time.



WARNING: The outdoor fire pit must be completely cooled off and all embers must be extinguished before any cover can be used.



WARNING: CARBON MONOXIDE HAZARD!
Burning wood or charcoal produces carbon monoxide, which has no odor and can cause death if burned in enclosed areas. Never burn wood or charcoal inside homes, vehicles, tents or any other enclosed areas.



WARNING: FUELS USED IN WOOD OR CHARCOAL BURNING APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING CARBON BLACK, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND CARBON MONOXIDE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.


For more information go to: www.P65Warnings.ca.gov

Warranty

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HAMPTONBAY.com.


Pre-Installation

TOOLS REQUIRED

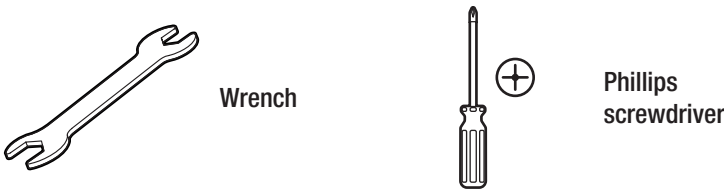

HARDWARE INCLUDED


NOTE: Hardware not shown to actual size.

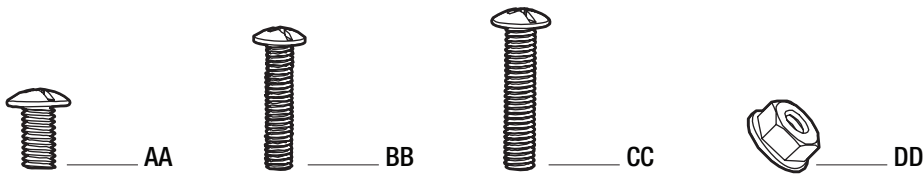

Part	Description	Quantity
AA	12 MM Bolt	27
BB	16 MM Bolt	4
CC	35 MM Bolt	2
DD	Hexnut	45

Pre-Installation (continued)

PACKAGE CONTENTS

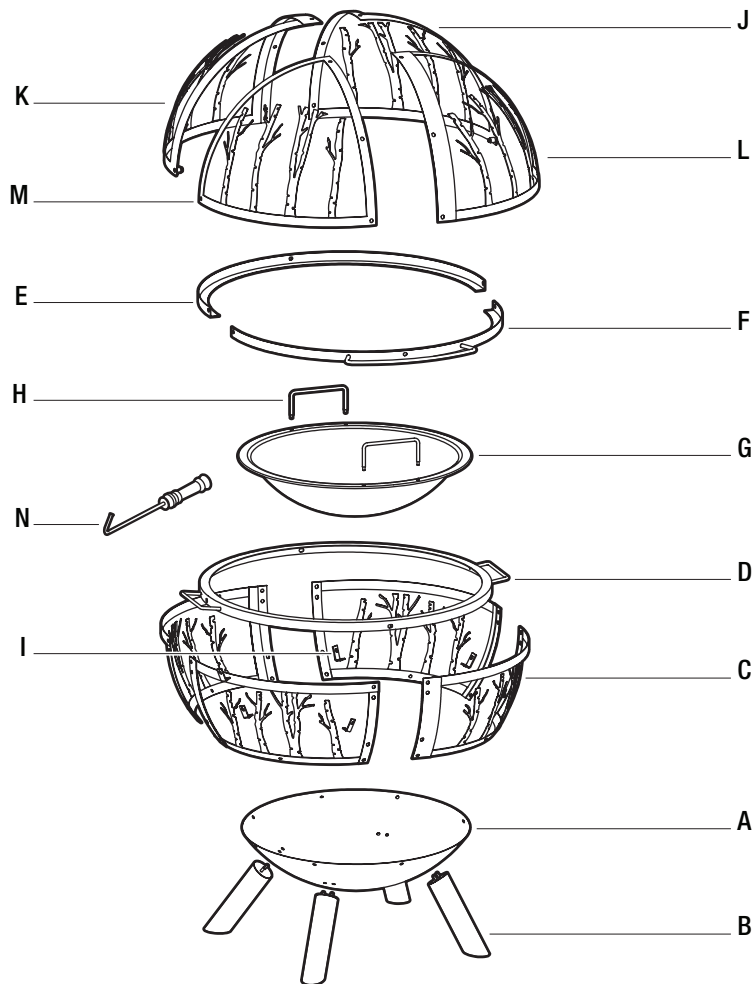


Part	Description	Quantity
A	Metal base	1
B	Legs	4
C	Bottom screen section	4
D	Center ring	1
E	Connecting ring	1
F	Connecting ring with handle	1
G	Fire bowl	1
H	Fire bowl handle	2
I	Fire bowl pins	4
J	Right top section	1
K	Left top section	1
L	Right door section	1
M	Left door section	1
N	Poker	1

Assembly


1 Attaching the legs

- Attach the legs (B) to the metal base (A) using the hexnuts (DD).

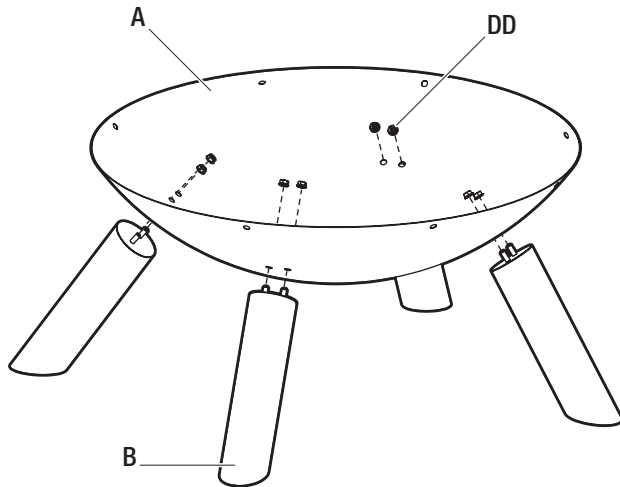


2 Assembling the bottom screen sections

- Assemble the bottom screen sections (C) and fire bowl pins (I) using four 12 MM bolts (AA) through the upper holes and four 16 MM bolts (BB) through the lower holes and fire bowl pins (I). Secure using eight hexnuts (DD).
- Attach the assembled bottom screen sections (C) to the metal base (A) using 12 MM bolts (AA) and hexnuts (DD).

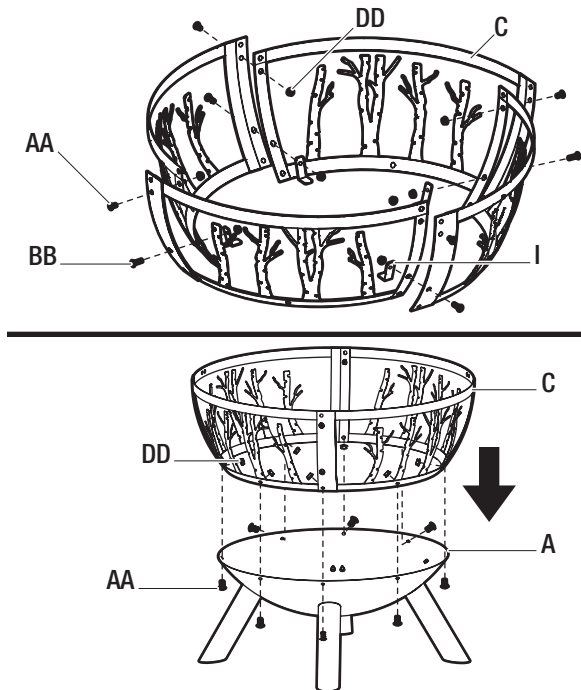


3 Installing the fire bowl

- Attach the fire bowl handles (H) to the fire bowl (G) using the hexnuts (DD).
- Place the fire bowl (G) on the fire bowl pins (I).

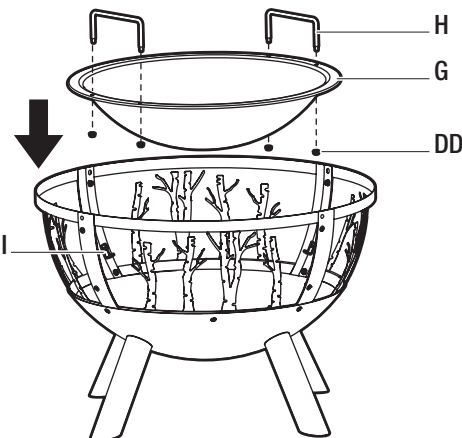

4 Attaching the center ring



- Attach the center ring (D) to the bottom screen sections (C) using the 12 MM bolts (AA) and hexnuts (DD).

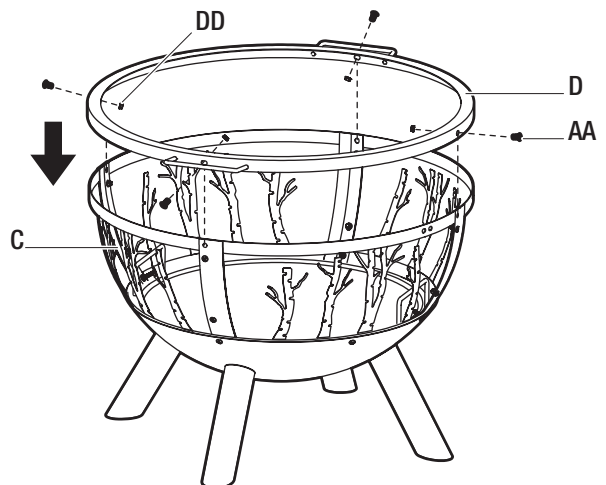

Assembly (continued)


5 Assembling the top screen

- Attach the right top section (J) to the left top section (K) using the 12 MM bolts (AA) and hexnuts (DD).
- Attach the top sections (J, K) to the connecting ring (E) using the 12 MM bolts (AA) and hexnuts (DD).
- Attach the top screen to the center ring (D).
- Attach the top section to the bottom, using the 12 MM bolts (AA) and hexnuts (DD).

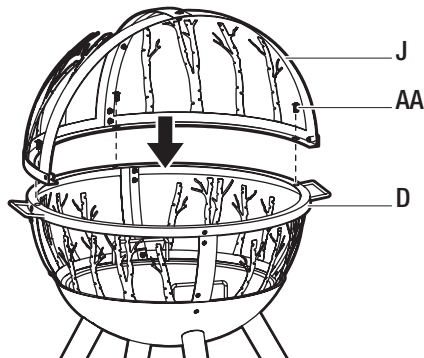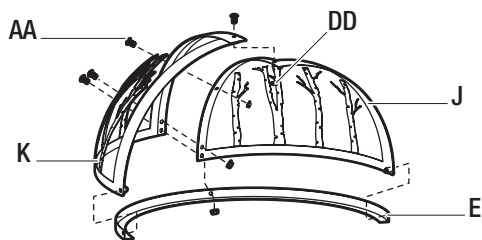

6 Assembling the door screen

- Attach the right door section (L) to the left door section (M) using the 12 MM bolts (AA) and hexnuts (DD).
- Attach the door sections to the connecting ring with handle (F) using the 12 MM bolts (AA) and hexnuts (DD).
- Attach the door screen to the top screen using the 35 MM bolts (CC) and hexnuts (DD).

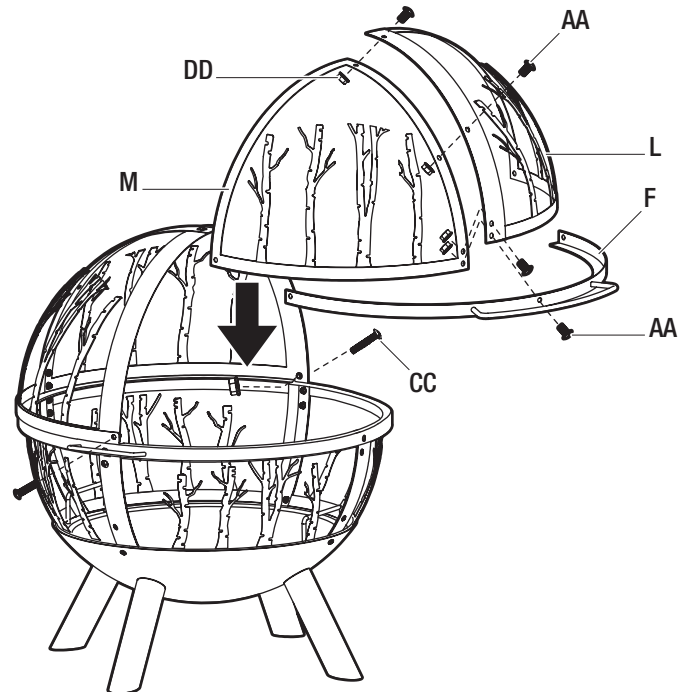

Operation

- Add up to 5 lbs. of kindling and firewood to the firebowl. Use paper or firestarter under the kindling and light with a match. Add more firewood as needed. The capacity of the fire pit is 5 lbs. of fuel.
- Close the door screen. Always keep the door screen closed during use.

Care and Cleaning

- Clean out ashes after each use only after the fire pit is completely cooled.
- Do not attempt to clean while hot.
- Store the fire pit in a dry place out of the weather.
- Clean cooking grate with soap and water. Dry with a clean rag.

HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.