
1004 250 549/1004 250 144 Model# A201001500/A214000100/A214000101 HANPTON BAY

Item# 1004 415 335

USE AND CARE GUIDE

WINDSOR PK2 OTTOMAN

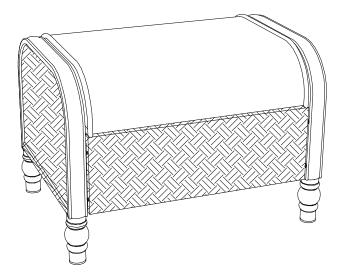

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this Ottoman. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2
Important Safety Instructions	2
Warranty	
What is Covered	
What is Not Covered	2

Pre-Assembly	4
Planning assembly	
Hardware Included	
Package Contents	4
Assembly	5
Care and Cleaning	

Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by, or near children, or disabled persons.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.
- 6. Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.

Warranty

2 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 2 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit HAMPTONBAY.COM.

DANGER: Keep children and parts away from the assembly area.

WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Production Number: 2020200026

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED

 NOTE: Hardware not shown to actual size. To avoid destroying the finish, do not put the parts on the ground directly.

 NOTE: Hardware not shown to actual size. To avoid destroying the finish, do not put the parts on the ground directly.


 AA
 BB
 CC
 DD

 Part
 Description
 Quantity
 Additional Hardware

 AA
 Bolt M6*40
 12
 1

AA	Bolt M6"40	12	1
BB	Spring washer M6	12	1
CC	Flat washer M6	12	1
DD	Wrench M6	1	0

 PACKAGE CONTENTS



Part	Description	Quantity
Α	Handrail	2
В	Seat	1
С	Side panel	2
D	Cushion	1


Assembly

Attaching the Handrails and Side panel

Connect the Handrails (A) and the Side panels (C) using Bolts (AA), Spring washers (BB) and Flat washers (CC). Do not tighten the bolts. Wrench (DD) is used in this step.

P


NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

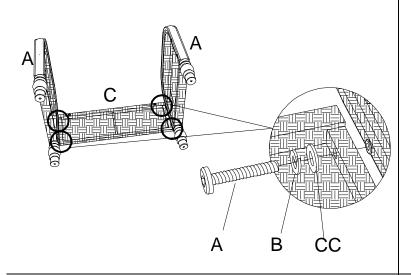

Attaching the Handrails and Side panel


Connect the Handrails (A) and the Side panels (C) using Bolts (AA), Spring washers (BB) and Flat washers (CC). Do not tighten the bolts. Wrench (DD) is used in this step.

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

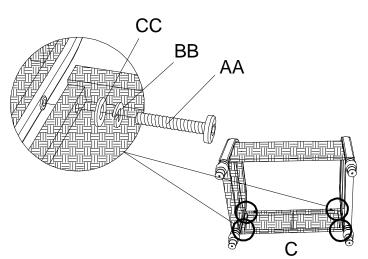

Attaching the Seat

Attach the Seat (B) to the assembly Side panels (C) using Bolts (AA), Spring washers (BB) and Flat washers (CC). Fully tighten the all bolts. Wrench (DD) is used in this step.

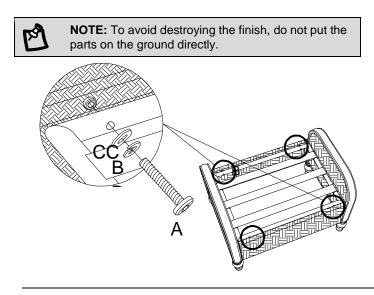


Attaching the Cushion

Place the Cushion (D) on the Seat (B).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

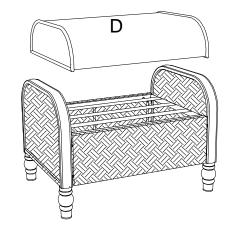

Care and Cleaning

.

- Before using, clean the ottoman completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.
- $\hfill\square$ When not in use, store in a cool, dry area.

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A214000100