


Parts

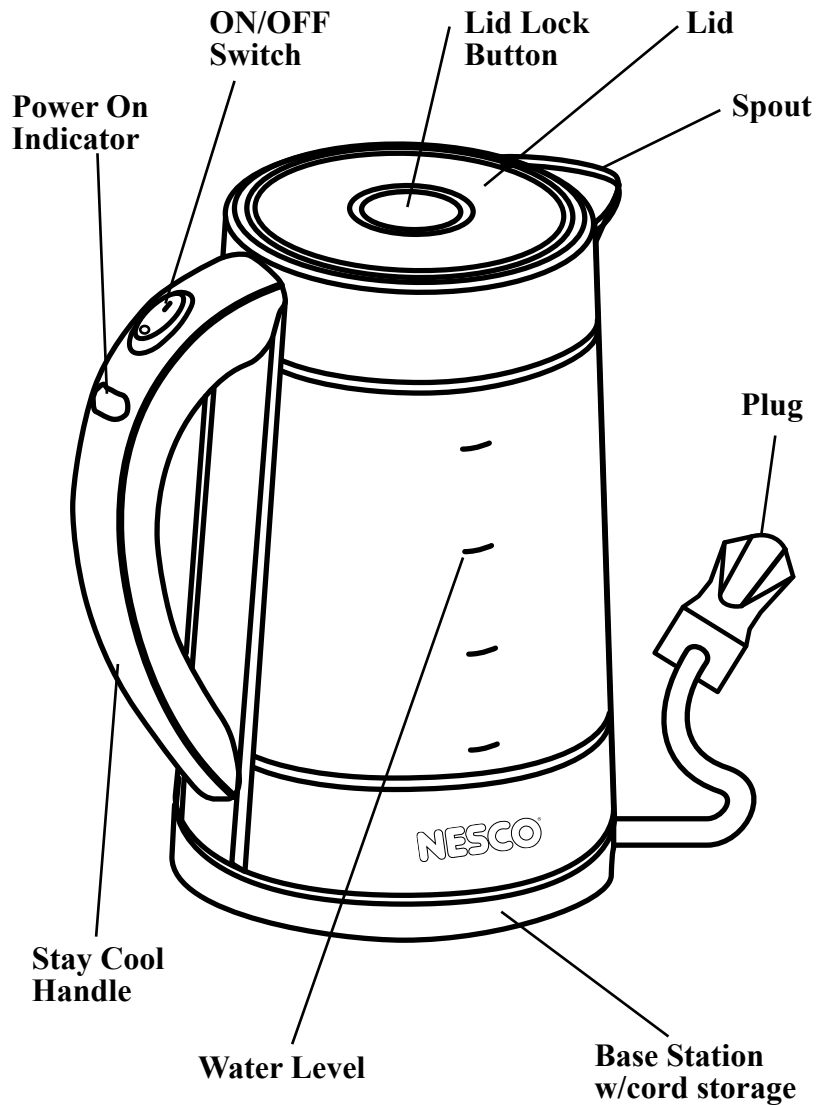

Parts

LID: For easy filling, cleaning and storage, the lid can be opened with a push of a button.

LID LOCK BUTTON: Locks the lid with the gentle press of the button for secured operation. Always lock the lid when using the kettle for any use. To remove lid, press button to unlock, the button will rise and can be used as a knob to lift and remove lid.

SPOUT: Large opening for easy pouring.

WATER LEVEL: Always fill kettle with water between the minimum and maximum levels.

POWER ON INDICATOR: The lamp will turn on indicating the kettle is heating and will turn off when heating cycle is complete.

ON/OFF SWITCH: Simply press the lever to begin heating cycle, kettle will automatically turn off when heating cycle is complete. Switch can be manually turned off at any time during the heating cycle by pressing switch to "O" position.

BASE STATION w/ CORD STORAGE: Allows the kettle to be placed on the base in 360° rotation, giving you the flexibility to position the base anywhere on the counter. Underneath the base station you can wrap the cord for easy storage and adjust the length to meet your needs.

Before using your Water Kettle the first time!

Read all Important Safeguards and Operating Instructions before using the first time.

Remove all packing materials from the Kettle and Base Station. Keep packaging until you are fully satisfied that product is working correctly.

Fill kettle with cold water to the maximum level and boil, discard water and repeat.

Wipe all surfaces with clean soft towel or sponge.