

Instructions / Assembly

Thank you for purchasing this Collapsible Folding Heavy Duty Utility Wagon. Please follow the instructions below for safe use, setup, and care. Assembly & Setup: 1. This wagon comes fully assembled and ready to use; no additional tools are required. 2. To unfold, remove the wagon from the storage bag and release the securing straps. 3. Pull outward on opposite sides of the wagon until the frame is fully extended and the base locks into place. 4. Extend the handle and ensure it is securely fastened before use. Usage: 1. The utility wagon is designed for outdoor use including camping, gardening, shopping, family outings, and transporting pets with mobility issues. 2. Maximum weight capacity: 265 pounds. Do not exceed this limit to prevent damage or injury. 3. Utilize the exterior storage compartments for smaller items and accessories. 4. Always push or pull the wagon on flat, stable ground. Avoid steep slopes or rough terrain that could cause tipping. 5. Do not allow children to play inside the wagon without supervision. Care & Maintenance: 1. After use, empty the wagon and wipe the fabric and frame with a damp cloth. Allow to air dry completely before storage. 2. To collapse, lift the central handle inside the base and fold inward until compact. Place back in the included storage bag. 3. Store in a cool, dry place when not in use to prolong product life. Warranty: This product is covered by a 30-Day Limited Warranty against defects in materials and workmanship under normal use and care.