

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Tines will not rotate	Tines are clogged by dirt and debris.	Remove the battery pack, then remove any obstruction from the tines.
	Vines, grass or other debris wrapped around tine shaft.	Remove the battery pack, then clean the tine shaft.
Motor fails to start when switch trigger is depressed	Battery is not secure.	To secure the battery pack, make sure the latches on each side of the battery pack snap into place.
	Battery is not charged.	Charge the battery pack according to the instructions included with your model.
The tines stop rotating	The unit is overloaded.	Release the switch trigger and raise the tines. Restart the cultivator and slowly lower the tines back to their original depth.

This product has a Three-year Limited Warranty for personal, family, or household use (30 days for business or commercial use). For warranty details, visit www.ryobitools.com or call (toll free) 1-800-525-2579.