




SKU #1001-381-374
Model # HOLC5210B1OD

USE AND CARE GUIDE

HUSKY 52 IN. 10-DRAWER MOBILE WORKBENCH WITH ADJUSTABLE-HEIGHT TOP

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m.- 7 p.m., EST, Monday-Friday
9 a.m.- 6 p.m., EST, Saturday
1-888-43-HUSKY

HUSKYTOOLS.COM

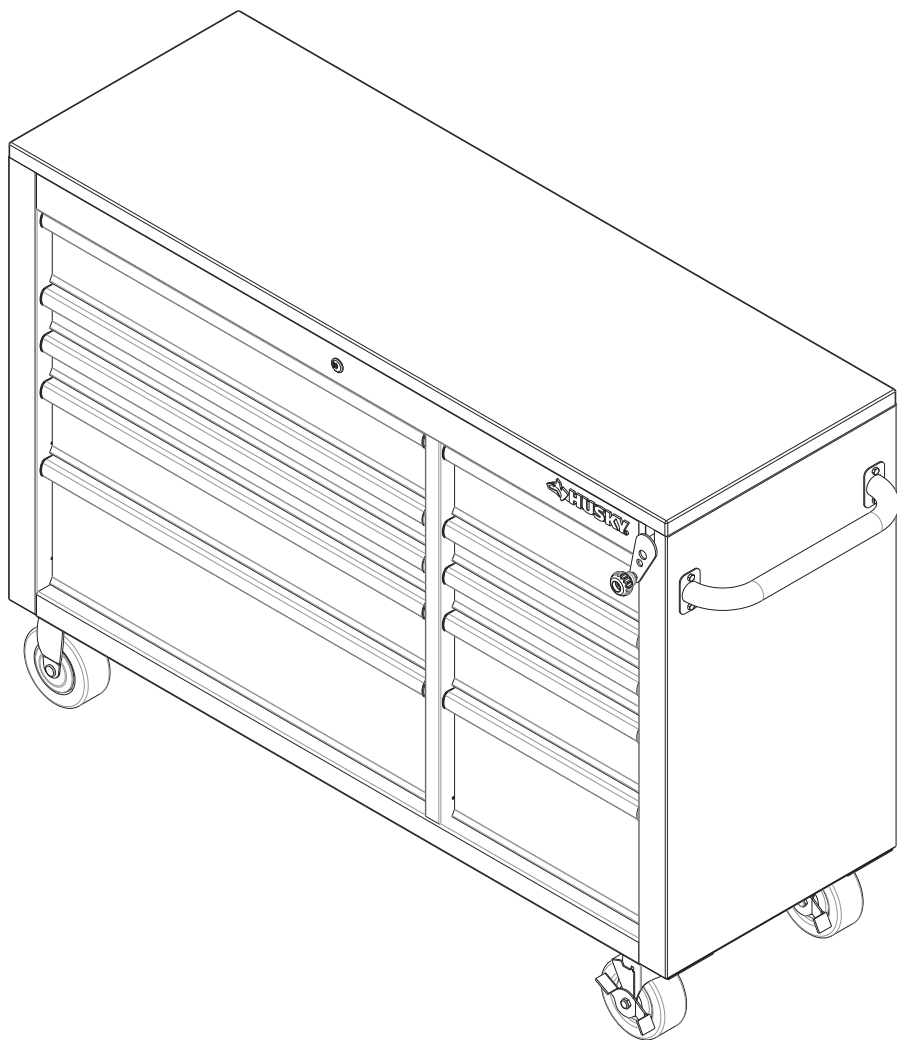

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this mobile workbench. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents	2	Assembly	6
Safety Information	2	Operation	7
Warranty	3	Maintenance	8
Pre-Assembly	4	Care and Cleaning	8
Tools Required	4	Service Parts	9
Hardware Included	4		
Specifications	4		
Package Contents	5		

Safety Information

1. Do not open more than one drawer at a time.
2. Do not let children approach the product.
3. To help prevent the product from tipping, load the product starting with the bottom drawers.
4. Keep the locking casters' brake set unless you are moving the cabinet. This will help to prevent the product from rolling.
5. Lock all drawers before moving the product.
6. Make sure all drawers close tightly before locking/unlocking.
7. Do not step in any drawer/drawers.
8. When moving this product, push it rather than pull it.
9. Do not alter this product in any manner.



DANGER: Do not stand on this product. You may fall or cause the product to tip.



DANGER: Do not move the product prior to closing and locking all the drawers. The drawers could come open and make the product unstable and tip.



DANGER: Do not mount this product on a truck bed or any other moving object.



WARNING: Keep the product on a level surface. The product may become unstable and tip if stored or moved on an uneven surface.



CAUTION: Do not lift this product directly with a forklift or tow with any mechanical devices.



CAUTION: Do not exceed the maximum weight loading capacity of elevating wood top or drawers. See Specifications on page 4.



CAUTION: Only transport this product when empty. Properly secure when transporting.



CAUTION: Remove hands and objects when lowering the wood top to avoid pinching or crushing.



CAUTION: Clear all obstructions in top tray areas before lowering the wood top to avoid damage to your items or this product.

Warranty

The manufacturer warrants the product to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the products such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-888-43-HUSKY or visit www.huskytools.com.


Pre-assembly

TOOLS REQUIRED

 


Safety goggles

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.




AA



 BB



CC

 


DD

Part	Description	Quantity
AA	Bolt M6 x 15L	4
BB	Washer	16
CC	Bolt M8 x 20L	16
DD	10MM/13MM Wrench	1


SPECIFICATIONS

Maximum capacity (drawer)	75 lbs
Maximum capacity (bottom deep drawers)	100 lbs
Maximum capacity (elevating wood top)	300 lbs
Maximum capacity (total unit)	1,000 lbs



NOTE: Begin product assembly close to the final intended location of your mobile workbench. This product is heavy and may be difficult to move after assembly.

PACKAGE CONTENTS

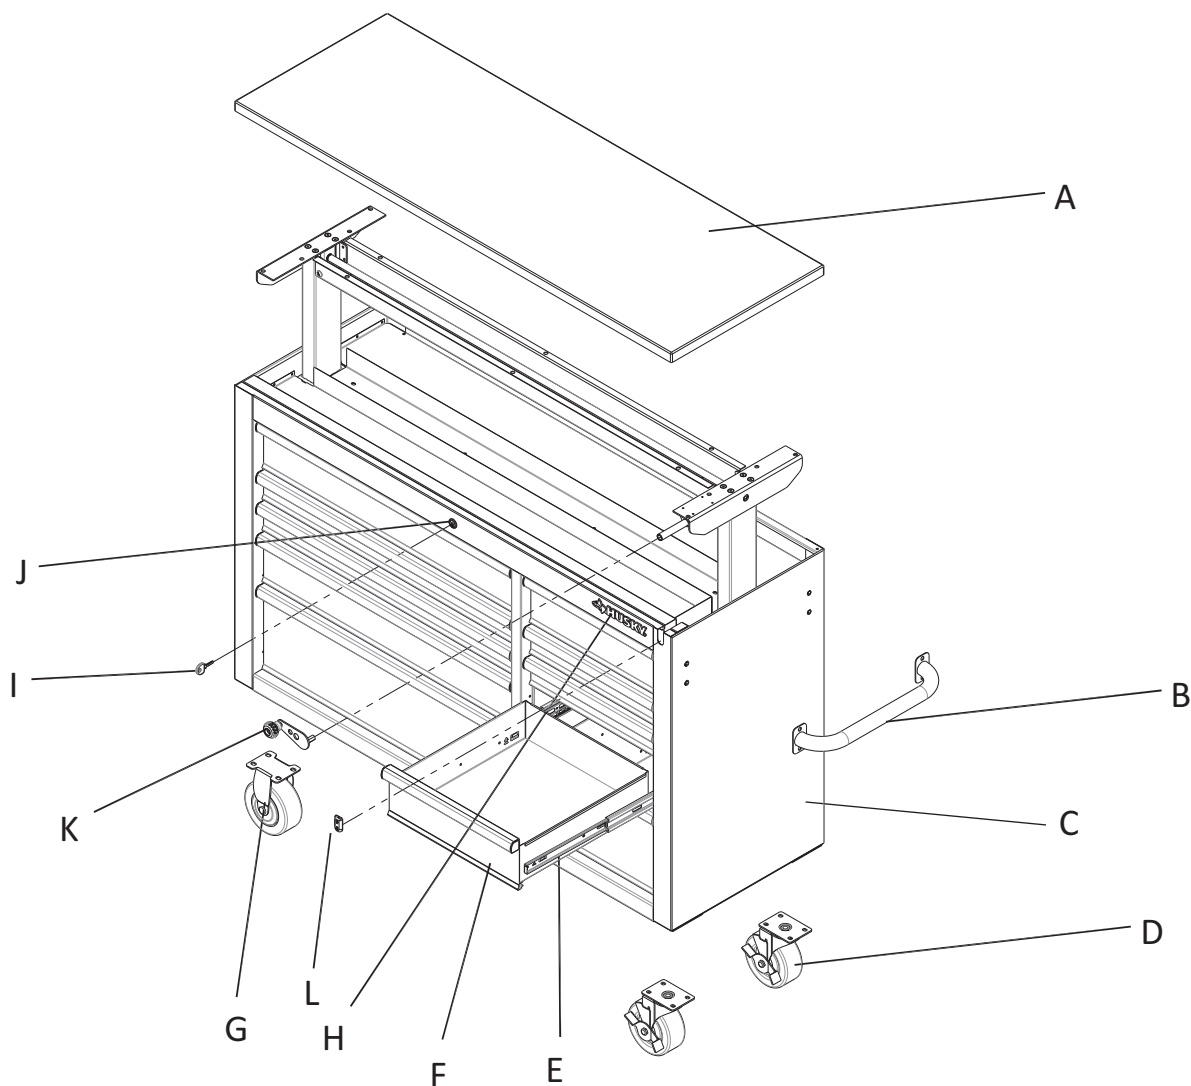

Part	Description	Quantity
A	Wood top	1
B	Side handle	1
C	Rolling cabinet	1
D	Swivel caster with brake	2
E	Drawer slide 75 lbs (pair)	12
F	Drawer	10
G	Rigid caster	2
H	Husky badge	1
I	Key (set)	1
J	Lock	1
K	Crank handle	1
L	Crank cap	1


Assembly

1 Attaching the side handle

- ☐ Attach the side handle (B) to the cabinet using four bolts (AA).
 - ☐ Tighten all bolts with the 10 mm wrench (DD).
- Do not over tighten the bolts to avoid damage to the finish.



NOTE: The holes in the cabinet are tapped and do not require nuts.

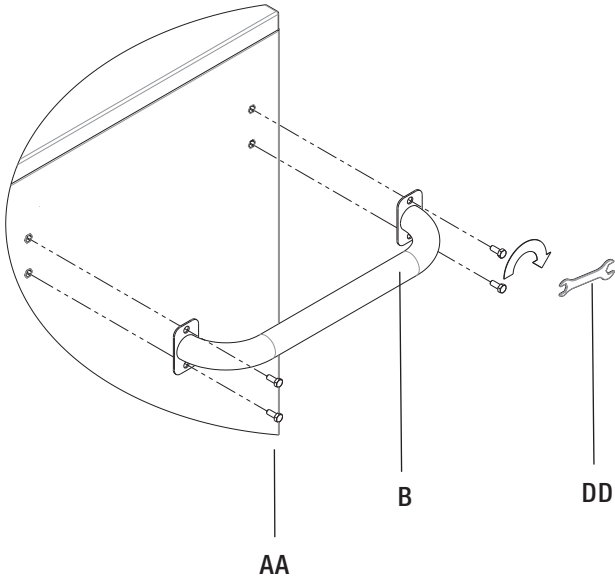

2 Installing the casters




Warning: Two or more people may be required for this step due to the weight of the workbench.




CAUTION: Do not over tighten the screws.

- ☐ Ensure all cabinet drawers are securely locked into place using the key (I) and lock (J) on the rolling cabinet (C).
- ☐ Lay the rolling cabinet (C) on its back on top of the packaging material to protect the finish.
- ☐ Mount the two swivel casters with brake (D) to the rolling cabinet (C) using four bolts (CC) and washers (BB) per caster. The swivel casters with brake (D) should be installed on the same side as the side handle (B).
- ☐ Mount the two rigid casters (G) to the rolling cabinet (C) using four bolts (CC) and washers (BB) per caster.
- ☐ Tighten all bolts with a 13 mm wrench (DD).
- ☐ Return the rolling cabinet (C) to its upright position.

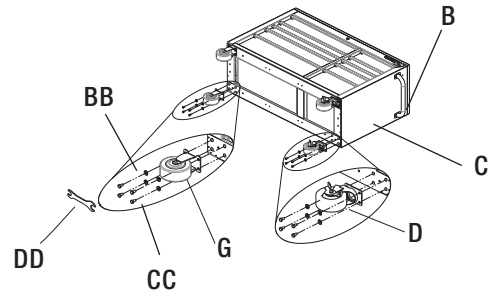

3 Installing the crank handle or crank cap

- ☐ Install the crank handle (K) or crank cap (L) into the shaft next to the Husky badge.

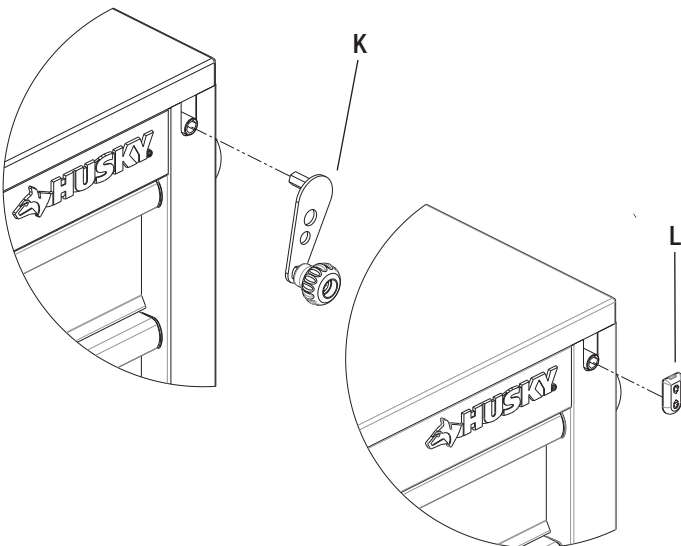

NOTE: Store the crank handle (K) or crank cap (L) in one of the drawers when not in use.


Operation

1 Adjusting the height of the wood top work surface

- ☐ Insert the crank handle (K) into the shaft near the Husky badge and align it in the hole until it is engaged.
- ☐ To raise the work surface, turn the crank handle counterclockwise to the desired height (38 in.-48 in.)
- ☐ To lower the work surface, turn the crank handle clockwise until it reaches the desired height or rests back on top of the rolling cabinet.
- ☐ When fully lowered, remove the crank handle and place the crank cap back over the shaft.
- ☐ To avoid damage, do not keep turning the crank handle once it has rested on top of the cabinet.



NOTE: Some minor squeaking is normal when operating the crank.

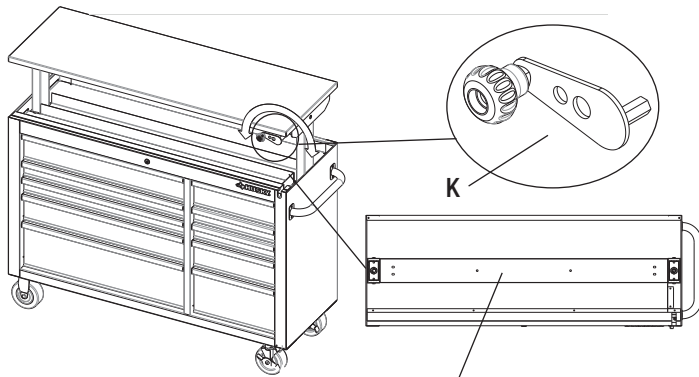


WARNING: There is no storage in the center tray. Use front and back trays only for storage.

2 Locking and unlocking the unit




IMPORTANT: The drawers must be fully closed before locking / unlocking the unit.

- ☐ To lock the unit, insert the key (I) into the lock (J) and turn it one quarter turn counterclockwise. Then remove the key.
- ☐ To unlock the unit, insert the key (I) into the lock (J) and turn it one quarter turn clockwise. Then remove the key.

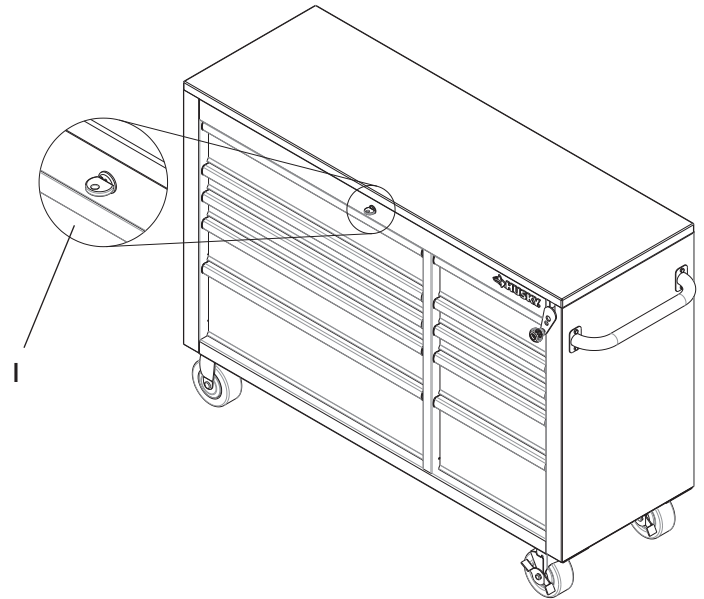


3 Removing the drawers

- ☐ Fully extend and empty the drawer.
- ☐ On the slide, lift up the plastic release lever on one slide and push down the plastic release lever on the other slide. Gently pull the drawer out so the slides can ride over the stops.

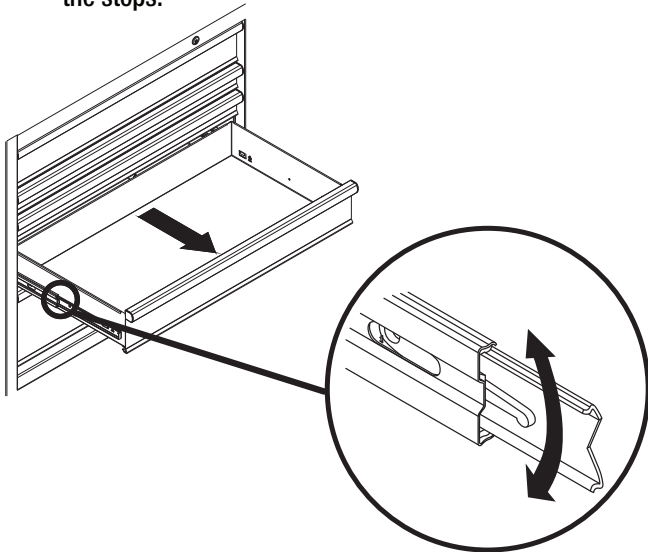

4 Installing the drawers


- ☐ Pull the slides and slide carrier out until fully extended.
- ☐ Hold the slide on the cabinet while aligning it with the slide on the drawer.
- ☐ Slightly insert one side and repeat for the other side.
- ☐ Slowly push the drawer until it is fully closed to engage the slide.
- ☐ Open the drawer and close it to verify proper operation.

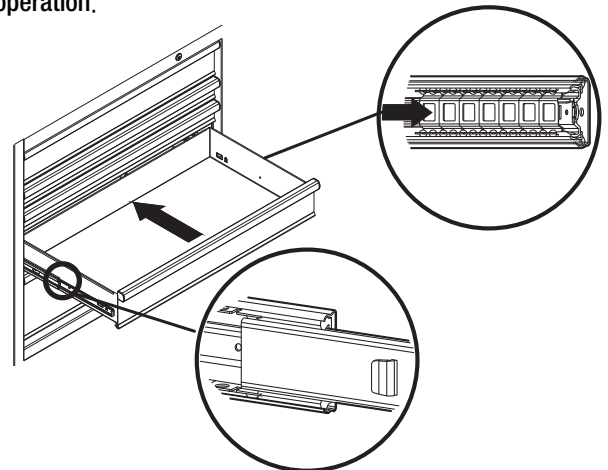

Maintenance


1 Maintaining the casters

- ☐ Grease the casters annually using high quality bearing grease.

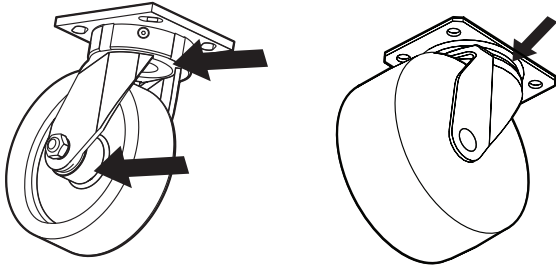


2 Maintaining the drawers

- ☐ Periodically clean the drawer trim and inside the drawers with a mild detergent and water.
- ☐ Remove grease and oil with a standard, nonflammable cleaning fluid.
- ☐ The use of drawer liners is recommended to protect the finish inside the drawers and make the drawers easier to clean. Drawer liners can be purchased at The Home Depot.
- ☐ Lubricate the slides semi-annually with grease or equivalent.

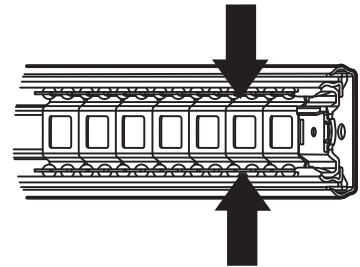

Care and Cleaning

- ☐ This steel product has been coated with industrial powder coating for a durable finish. To help protect this finish, do not allow harsh chemicals such as oil or grease to remain on the powder coating surface. Use a glass cleaner (Windex® or equivalent product) to clean and maintain all powder coated surfaces.
- ☐ The wood top is made of Parawood (also called Rubberwood) which has a polyurethane coating to help protect it from moisture. It can be cleaned with most household cleaners, such as Windex® .
- ☐ The crank gears and shafts are lubricated at the factory and sealed inside the unit. They do not require normal lubrication maintenance. Some squeaking is normal when operating the crank.

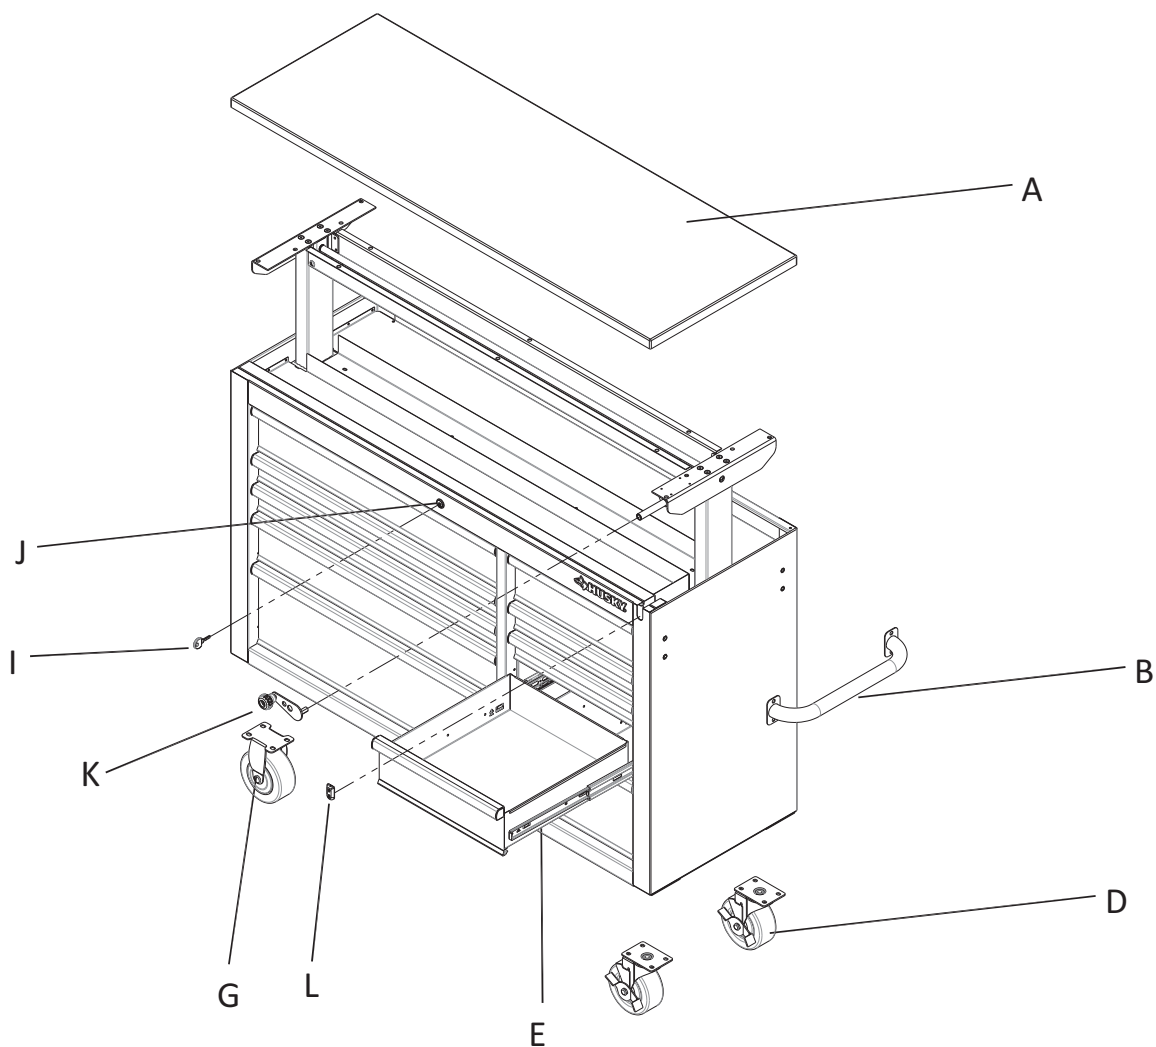

Part	Part#	Description	Quantity
A	K2532030	Wood top	1
B	D6TC04001	Side handle	1
D	K03220265	Swivel caster w/brakes	2
E	K0204022	Drawer slide 75 lbs (pair)	12
G	K03220263	Rigid caster	2
I	K06120021	Key (set)	1
J	K06120022	Lock	1
K	DLC370011	Crank handle	1
L	L2015029	Crank cap	1



Questions, problems, missing parts? Before returning to the store, call
Husky Customer Service
8 a.m.-7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m. EST Saturday

1-888-43-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.