

HOME-FLEX®

CSST Tube Cutter Blade Replacement


1. Expose cutter blade

Twist knob until blade is full exposed.



2. Remove retainer clip

Remove retainer clip. Protective eye wear suggested.

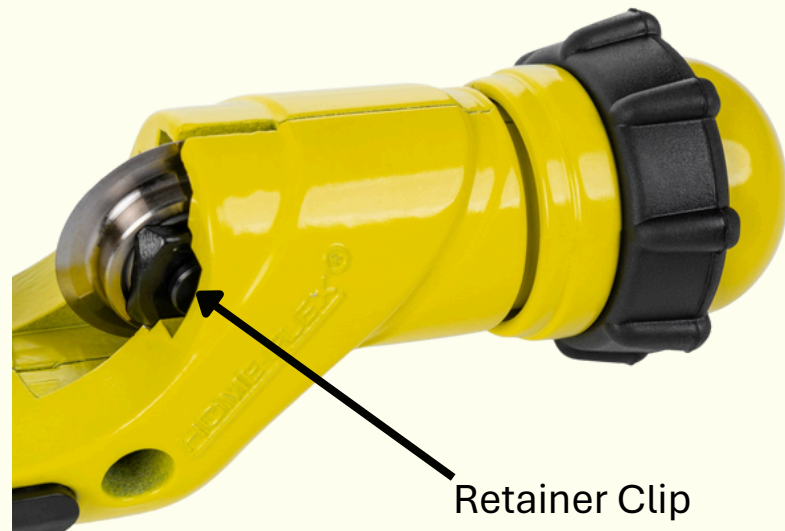

3. Remove the blade

Remove the pin and wheel/bearing assembly



4. Replace the blade

Add new blade to wheel assembly, and reassemble - reverse order or removal.

