

Replacing or Adjusting One-Piece Garage Door Hardware

1. Nomenclature for Jamb Type **One-Piece Garage Door Hardware**

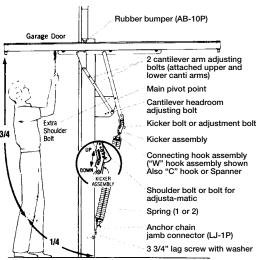

2. Hardware Adjustment or **Replacement Preparation**

Do not use for any applications other than one-piece garage doors

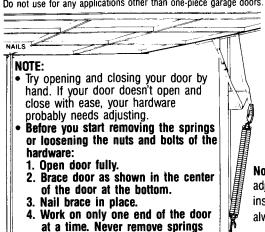

from both ends at the same time.

Note: For safe adjustment, factory instructions must always be followed.

5. Properly Adjusted Hardware Will Make Your Operator Last Longer!

The easier your door opens and closes (and you can test it by hand) the longer your operator will last.

Your door should not race to its full open position or fall freely to its closedposition.

Your door should start down with minimal resistance with an electric operator. Your door hardware can be adjusted to achieve this.

 
THE WARRANTY FOR YOUR OPERATOR IS A SLIP OF PAPER. PROPERLY WORKING SPRINGS AND HARDWARE, HOWEVER, IS ITS BEST PROTECTION.

- Worn hardware will decrease the life of your operator and may cause costly repairs.
- · Worn springs, too, may cause your operator to overwork.

With Holmes Adjusta-Matic Hardware, You Can Adjust Your Door Without Removing the Springs!

- Holmes makes it EASY to stretch the springs the proper one to two inches and adjust the hardware without ever removing the springs.
- You can replace the Kicker Assembly (AK-1P) and Lower Jamb Connector (LJ-1P) or replace the entire hardware assembly with our One-Piece Hardware Kit (E900)*.
- -These parts are engineered and tested for convenience and reliability and fit any Holmes hardware set.
- *Recommended if current hardware is worn or dated.


Adjusta-Matic works with "C" hooks for single spring or "W" hooks for double spring applications. Also works with single or double Safety Lock spring configurations.



PROBLEM REMEDY DO THIS **IF YOUR DOOR** Prop door as explained, then, Is hard to pull down or 1A Regular Kicker: Move entire Kicker Assembly "Up" one adjustment hole at a time. Move lower hook "Up" one link or goes up too fast in its the chain each time kicker is moved "Up" to maintain same upper 3/4 of travel. 1B Adjusta-matic Kicker: Remove extra shoulder bolt from master plate and insert in the first empty hole above the bolt already in kicker. Remove original shoulder bolt before operating door. 2A Regular Kicker: Move entire Kicker Assembly "Down" one 2 Comes down too easily adjustment hole at a time. Move lower hook "Down" one link or or is hard to lift up in its the chain each time kicker is moved "Down" to maintain sam upper 3/4 of travel. 2B Adjusta-matic Kicker: Remove extra shoulder bolt from master plate and insert in the first empty hole below the bolt already in kicker. Remove original shoulder bolt before 3 Move bolt "Down" the slot of Kicker Assembly. 3 Is difficult to close or opens too fast in its lower 1/4 of travel. (Or if your door won't stay entirely closed.) Closes too rapidly or 4 Move bolt "Up" the slot of Kicker Assembly. is hard to open in its lower 1/4 of travel.

After you have solved your adjustment problem, check and tighten all bolts and nuts. DO THIS BEFORE REMOVING THE PROP. Stand clear of door when prop is being removed.

6. It's Easy to Adjust Your Hardware for **Electric Operators**

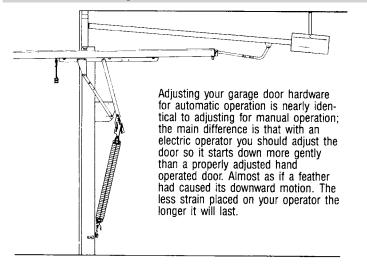

Replacing Broken or Worn Out Springs

3. Replacement Spring Selection

You have three choices when replacing springs:

- 1. Identify the spring number on your existing springs (e.g., P728, SL528, etc.).
- 2. Weigh the door and refer to the Spring Selection chart to the right.
- 3. If 1 or 2 are not feasible, hire a professional installer.

Holmes Springs are marked with the following: PLUG Holmes logo, Spring Number (e.g., P728), Patent Number, Maximum Stretch and Manufacture Date



END (A)

DISCARD SPANNER

PLATES FOR THIS

2 P928 up to 75 2 90 to 150 P728 or SL728 105 to 175 2 P528 P328 125 to 250 P728 or SL728 150 to 300 4 200 to 350 P528

Important:

Before selecting your spring, you must know the weight of your door.

One-Piece Garage Door Spring Selection

Springs for your garage door hardware are sold separately. Refer to the

chart below to determine the appropriate springs for your garage door.

Quantity Needed

 
Spring Type

4. Spring Installation Instructions for Safety Lock, Plug End and Clip End Springs.

Important: With the door open and braced, remove springs from one side only (throw springs away). NEVER remove springs from both sides of the door at the same

Single Safety Lock Installation Install spring hook into chain. Stretch spring up and hook over lower bushing on kicker as shown. If hooks are not in line twist spring in the direction it turns easiest. Attach Spanner Plate with bolt and nut on each end. (see drawing)

Note: Your door may utilize a Lower Jamb Connector (LJ-1P versus a chain mount.



Double Safety Lock Installation SPANNER Install two springs by their hooks into chain. Stretch springs up and hook over lower bushing on kicker as shown. If required, twist springs in the direction they turn the easiest. to line up hooks. Insert 1/4" x 5/8" bolt and nut for safety lock as shown.

WARNING:

Do not close door until nuts & bolts are tightened!

Single Plug End or Clip End Installation Install hook into chain. Instal

PAT. NO. 4,057,235

other hook over the lower bushing in kicker as shown. Attach spring to lower hook Apply the plate and keeper according to sketch & instructions, then stretch to connect to upper hook. Apply plate and keeper.

Door Weight

shown. Attach two springs to lower "W" hook and add Hook plate and keeper as shown Stretch springs to connect to upper "W" hook, Add plate and keeper. EXCEPTION: WARNING:

Springs

No. 1 & No. 3 Do not close door until keeper rings are in place!

Double Plug End or Clip

Install "W" hook into chain.

Install other "W" hook over

lower bushing in kicker, as

End Installation

NOTE: If a spring produces excessive noise when door closes, (a) brace door open (see step 2) (b) unhook spring at kicker and (c) twist the end of the springs 180 degrees IN THE DIRECTION IT TURNS MOST EASILY.

Springs should not have more than 2" stretch at any time when door is in an open position.

Make Sure Your Springs Meet Safety Regulations



It's The Law!

"Every (residential extension) garage door spring sold...or installed...shall be equipped with an approved device capable of restraining the spring or any part thereof in the event it breaks." Excepts from revised California Administrative Code, Title 24, Part 2.

- All Holmes springs sold today in California satisfy the current state safety code yours may not.
- The complete line of Holmes garage door springs has containment and complies with the current code.
- Holmes safety containment will prevent springs or parts for hardware from flying loose and damaging your operator or your automobile.
- Holmes safety containment will prevent springs from whipping free and causing possible injury
- If you have old style (uncontained) springs, they should be replaced.
- If one spring breaks replace them all, the others can't be far behind.

We highly recommend that you replace your old (uncontained) springs with new





Answers to Common Garage Door Hardware Questions

Q What do the numbers on the spring mean?

The numbers on the spring label identify the spring with a Holmes part number. The letters P, SL or C before the numbers signify the type of spring end, either Plug, Safety Lock or Clip. The first number indicates the wire size and the next two numbers the length of spring. The letter "C" at the end of the number tells you the spring is equipped with safety connectors. For example, a P728C spring has plug ends, is made from #7 wire, is 28" long and has safety connectors. Remember when measuring a spring, measure from end of coil to end of coil, do not include the ends. Measure the springs only when they have been removed from the hardware set. The following identification marks are stamped on the top of the spring (except clipped end springs): part number (such as P728), patent number, maximum stretch, the date of manufacture (for example 06-2006) and the Holmes logo.

Q Which spring should I use for my garage door?

A If your door is working properly, just replace your broken spring with the same type of spring. There is a measuring decal on the side of the Holmes spring racks to help you determine the correct spring. If there is no number on the plug or clip end of the spring, then determining the correct spring to purchase is obtained by calculating the spring's outside diameter and the spring's wire size. The wire size can be determined simply by measuring ten spring coils and then dividing this measurment by ten. Remember the best way to locate the proper spring is find a comparable one on the spring rack.

Q My springs break too often. Are there springs available that last longer?

A If the springs are breaking too frequently you can buy springs made of heavier wire. For example, if you are currently using four P728 springs, you could upgrade your purchase to four P528 springs.

Q Why do I have to buy connectors when I replace a spring?

A For your safety the California Administration Code requires that every spring be manufactured with a containment wire and sold with safety connectors.

Q Is there a tool available to stretch springs?

A The lower Jamb Connector (LJ-1P) lets you stretch the springs with a wrench. The Jamb Connector along with the Adjusta-Matic Kicker (AK-1P), allows you to adjust the leverage and tension of the hardware set without having to remove the springs.

Q What is the best way to lock the garage door?

A Holmes manufactures a complete line of slide bolts that will help protect valuables in your garage or mini-warehouse. You can add to your security with a Holmes Heavy Duty Security Slide Bolt (SSL-1P) that prevents the shackle of a padlock from being cut, while at the same time allows a second padlock to be added.

Q How can I seal out dust, drafts, rain and snow from the gaps at the sides and bottom of a one-piece garage door?

A Holmes Weatherstripping (WS-4P) provides 21/2" of protection for both the sides and bottom of the door, (two packages are required for sides and bottom).

Q How can I straighten my sagging door?

A Use Holmes Truss Rod Kit (TRK-14-6P)

Q When should you replace your garage door or its hardware?

- A Once the door deteriorates to the point that it is unsafe or detracts from the appearance of your home, it's a good time to invest in a new door. Don't overlook the condition of the door jamb if it's rotting it should be replaced. There are common signs of hardware deterioration that you can detect.
 - Every time the door is opened or closed, listen for sounds of wearing metal or door rubbing the frame. Also look at the cantilever arms (see step 1) to make sure they aren't bent.
 - Are the main bearings or any of the other pivot points worn? They should be oiled monthly (see Lubricate illustration on back cover).
 - Do you have contained springs and safety connectors? Remember if one spring breaks, replace them all. It probably won't be long until the others wear and break.

Q How can I adjust the door to hang perpendicular?

- A 1. Loosen cantilever arm adjusting bolts (see step 1).
 - 2. Place a wood shim (3/8" thick) under the door about 12" from each side jamb.
 - 3. Slide the door into place with the bottom of the door resting on the shims and the top of the door against the header. Position door so it is perfectly vertical and centered, horizontal in the opening. The gap between door and jamb should be equal (about 3/8" on each side).
 - 4. TIGHTEN NUTS ON THE BOLTS.

Q What should be done if I cannot pre-stretch the springs enough while installing them?

A The safety containment wire inside the spring may be tangled that prevents the spring from stretching. To untangle, twist the spring 1/2 of a turn when the spring is off the hardware...or you might consider purchasing a set of Holmes adjustable jamb connectors (LJ-1P) that allows you to pre-stretch the springs easily with a wrench.


Q If the garage door is difficult to open by hand, should I install a new electric garage door operator?

A Not until you adjust the garage door hardware (hinges) and springs. The garage door operator only replaces your hand... the easier it is for the operator to open and close the door, the longer the operator will last.


Q What should I do if after reading the instruction sheet I'm still having problems installing or adjusting the hardware set?


A First relax and then think and reason the problem out. If you still have questions, no matter how unimportant they may seem, call a qualified garage door professional.


For Best Performance, Lubricate Your Garage Door Hardware Monthly

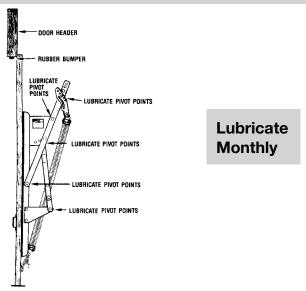

 Take the Sag Out of Your Wood One-Piece Garage Door with a



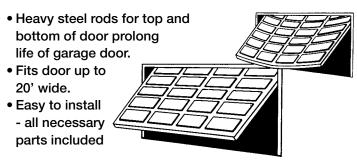

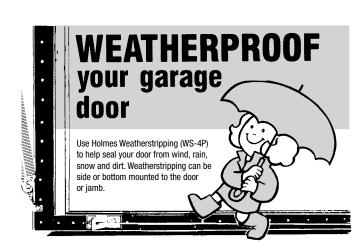

Holmes Operated by Clopay Building Products Santa Fe Springs, CA 1-800-475-1937

