



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

General Use & Care Manual: Wood-Burning Fire Pit

Information provided within this Use & Care Manual is not meant to cover every possible condition and situation that may occur. Please practice sound judgment and caution when using any product.

Always refer to the original product manual for specific information. When in doubt, we'll help you out. See contact information above.

CARING FOR YOUR FIRE PIT:

Clean Regularly: All types of fire pits must be cleaned and inspected periodically. The ash produced in wood-burning fire pits must be cleaned out regularly. Never allow ash to accumulate.

Clean Safely: Make sure the fire has completely died down before you remove the ashes.

Avoid Accelerants: Never use accelerants or combustible materials to start a fire; this is dangerous and can be damaging to your fire pit as well.

Avoid Plastic: Never use any plastic materials in or nearby a fire pit. It is very difficult to remove the residue later, and the burning of this residue can cause the emission of toxic fumes.

Use on a Safe Surface: Always place a portable fire pit on a solid, stable surface. Do not use portable fire pits on a wood deck or other combustible surfaces like dry grass, leaves, mulch, etc. Do not use portable fire pits near combustible structures such as vinyl or wood siding. Take care never to drop your fire pit, as any breakage could cause serious damage and costly repairs.

Cover and Store: If you do not plan to use your fire pit for an extended period of time, cover and store it in a safe place; this will protect it from the elements and dust buildup. When your outdoor fire pit is not in use, cover it with a fire pit cover until you are ready to use it again.

Clean after Cooking: If you use your outdoor fire pit for barbecuing or grilling, make sure you clean up properly afterward to prevent build-up that may damage your fire pit or attract unwanted pests.

Keep Iron Dry: Iron fire pits must be kept dry as much as possible. Cover your iron fire pit when not in use to prevent rust build-up.

Extinguish: Let fires die down gradually, do not use water to put out a fire as this may cause the metal to crack with the sudden drop in temperature.

! SAFETY STATEMENTS & WARNINGS !

- For outdoor use only. Never use fire pits in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits.
- It is necessary to have a fire extinguisher nearby. A spark could easily fly from the pit onto a piece of flammable material. Without something next to you that will extinguish the fire, you may end up with fire too large to put out yourself.
- Equip your fire pit with fire tools that you will use when adjusting your fire. A fire poker and a set of tongs are essential in fire maintenance and control. Spark screens are recommended while the fire is in use to prevent sparks from flying. Fire pit pokers can also be used to place and remove your spark screen safely.
- Do not allow children to get too close to the flames. Hot embers can fly out of the fire pit, especially during windy conditions.
- Do not use a fire pit on or near combustible surfaces, structures or materials.
- Do not use chemical-based cleaners as they may damage the product and/or ignite a flame during the next use.

Any modification to the product or failure to follow recommended care will void the product warranty.