


# PARTS

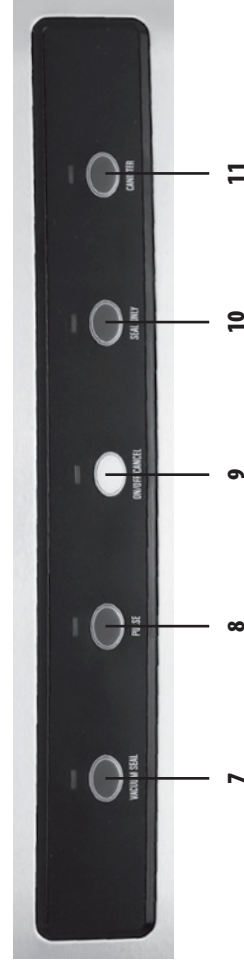

# SETTING FUNCTION

**Vacuum Seal:**

Press to begin the automatic vacuum and seal process. Vacuum time is controlled by an internal pressure gauge. Once the air inside the bag is removed, the bag will automatically seal.

**On/Off/Cancel:**

Press to turn the machine on or off. Pressing during a function will stop the process and not complete the function.

**Pulse:**

Use for vacuum sealing delicate items. Press button and unit will vacuum as long as button is held.

**Canister:**

Use to vacuum seal canisters. (Hose & canisters sold separately). Hose must be attached to vacuum port located inside of the vacuum chamber on the right. Press button, machine will vacuum. Sensor will stop vacuuming automatically when air is removed.

**Seal Only:**

Use to make bags from vacuum seal material. This button will stop the vacuum process and engage the sealing process.

## MAXVAC 250 VACUUM SEALER MODEL #1393

#	DESCRIPTION	#	DESCRIPTION
1	Control Panel	7	Vacuum Seal Button
2	Vacuum Lid	8	Pulse Button
3	Vacuum Port	9	On/Off Cancel Button
4	Heat Seal Bar	10	Seal Only Button
5	Vacuum Chamber	11	Canister Button
6	Locking Mechanism	12	Roll Holder & Cutter

ITEM	PART DESCRIPTION
A	Oval Foam
B	Sealing Bar Silicone
C	Heat Seal Bar *
<i>not pictured</i>	Power Cord

\*Extra heat seal bar included