

## Adjustable Window Screens

### How to change orientation

The window screen is made up of 2 sliding panels that have plastic keys that slide in slots along each panel edge.

Look at the slots that face the opposite panel. In two slots you will find set-screws.

These keep the panels together.

Using the Allen Wrench (L shaped thingy with six sided ends) to remove the set-screw.

Carefully slide the window panels apart.

Now switch the panels so that the opposite slots face each other.

Line up the plastic key with the slot end on the other panel and gently slide the two panels together.


Insert the second set of keys and the window is fully assembled. Screw the set-screws into the channel. This will keep the window from coming apart.

### Additional Tips

When assembling, keep the two panels as straight as possible. If the window twists the plastic key may break.


Before reassembly check the slots for dirt or excess material. Remove this with a small stick or knife point.

If the weather stripping gets in the way, cut and remove the last 1/2 inch or remove the entire weather stripping and reattach to the shorter ends.

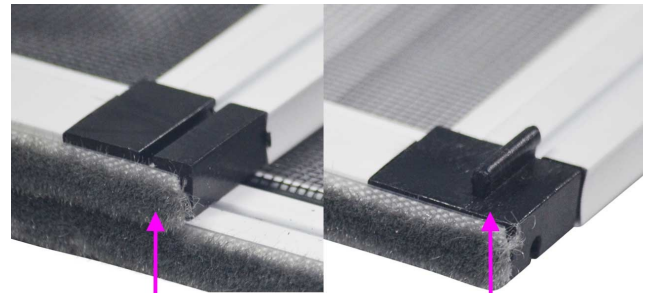


Guide Slot

Plastic Key

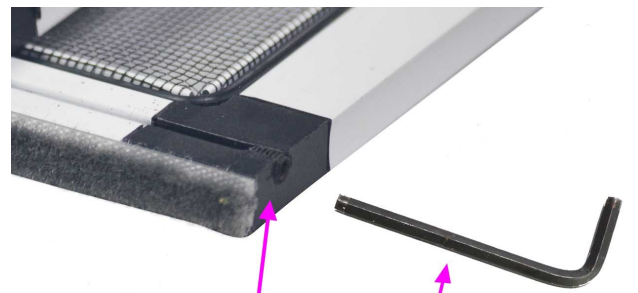

Set Screw

Allen Wrench

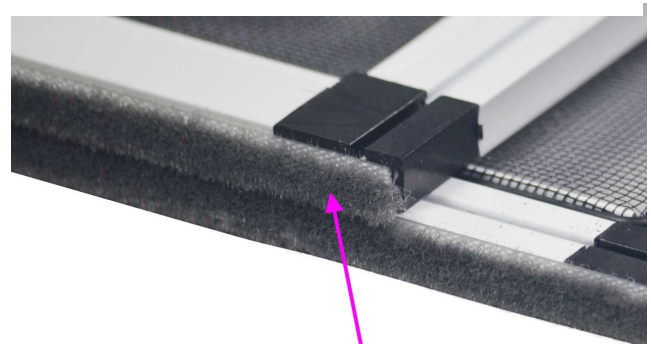

Cut Back or Remove Weather Stripping