

# HOW TO CLEAN YOUR EGG COOKER

1. Always unplug your Egg Cooker appliance from the electrical outlet and allow to cool completely before cleaning.
  2. Clean heating plate and main body with a wet cloth.
  3. Wash the attachments and lid in the sink with hot, soapy water.
  4. Remove any mineral deposits left behind from water by wiping the plate with a paper towel moistened with one tablespoon of white vinegar.
  5. White vinegar also works as an antibacterial agent.
- **CAUTION: Base is extremely hot after use. Allow unit to cool before handling or cleaning.**
- **NOTE: If unit is not cleaned with white vinegar on a regular basis, minerals naturally occurring in water will build up causing discoloration of eggshells. However, this does not affect the taste of the eggs.**
6. Wipe main body housing with a damp cloth. DO NOT immerse in water.
  7. Place clean egg tray, omelet and poaching trays, and cup inside the Egg Cooker body to store.
  8. Any other servicing should be performed by an authorized service representative.

**YOUR EGG COOKER IS NOT DISHWASHER SAFE.**

## TROUBLESHOOTING

PROBLEM	CAUSE	POSSIBLE SOLUTION
Power Indicator Light is already ON after plugging into power outlet.	The Power Button was unintentionally pushed to ON prior to plugging into power outlet.	You <i>cannot</i> push the Power button again to turn the egg cooker OFF. Fill Measuring Cup to "Soft" line, pour into heating plate and plug the cooker into power outlet. The egg cooker will cycle through and power OFF automatically once all water has evaporated. The Power Indicator Light will turn off. Allow the unit to rest/cool for 5 minutes and proceed to follow the instructions in this manual to use as normal.
There are brown stains on the heating plate.	Residue from usage.	Use a paper towel or a dish rag and white vinegar to clean the heating plate.