PAPER SIZE: 210x100mm







front

CAUTION



1. Do not use or store in the humid place 2. Do not drop or give a strong impact as this may cause damage to the fan. 3. Never try to repair or disassemble the product by yourself. 4. Avoid exposing it to heat sources, fire or direct sunlight. 5. When it abnormally becomes hot or is deformed while the battery is charging, immediately stop charging it. 6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. 7. When the fair is ressed it ran make some onised use to friction between safety. 7. When the fan is pressed, it can make some noise due to friction between the fan parts. Do not apply force to the fan area. 8. When thin and long objects such as hair or string are put or caught in the air outlet, it can cause the failure

1-YEAR LIMITED WARRANTY

- 1. We warrant our products to be free from manufacturing defects under normal use and service for limited (1) year from the date you purchase.

 2. This product is manufactured based on thorough quality control standards and has passed related tests. 3. When there are defects or flaws occurring under normal usage, the product can be repaired or exchanged based on the warranty at the store you have purchased or our Customer Service Center. 4. When the product is damaged by consumer's negligence or failure of cautions and instructions provided with this appliance, it should not be exchanged.


 3. Damaged by consumer's negligence or mistakes.
- a) Damaged by consumer's negligence or mistakes
 b) Damaged by strong force or impact such as dropping
 5. Please contact the below Customer Service Center if you file a warranty claim.

Imported & Distributed by: Mungsube Enterprise Inc. 19 Spielman Rd, Fairfield, NJ 07004 https://www.hulife-home.com/ Customer Service Number: 1-888-702-0009 Customer Service Email: cs@hulife-home.com

DANSOON



back

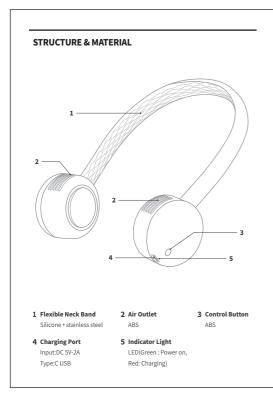

INSTRUCTIONS FOR USE Adjust the air outlet of the Neckband Fan to the direction you want to use and hang it around your neck before use silicone, so its width can move freely and the angles on both the left and right sides can also be controlled easily, which means it can be folded for storage Adjust the width 360 degree rotation Fold for storage

Press the button one time - mode 1	Low wind speed - 2.5m/s
Press the button two times - mode 2	Medium wind speed - 3.5m/s
Press the button three times – mode 3	High wind speed -4.5m/s
Press the button four times	Power OFF
SPECIFICATION	
SPECIFICATION Model No. 07068	Charging Type USBC type
Model No. 07068	Charging Type USB C type Charging Time approx. 2-3 hours
Model No. 07068 Material ABS, Silicone, Stainless steel	Charging Time approx. 2~3 hours
Model No. 07068 Material ABS, Silicone, Stainless steel Input 5V, 2A	
Model No. 07068 Material ABS, Silicone, Stainless steel Input 5V, 2A Motor BLDC (Brushless Direct Current) Motor	Charging Time approx. 2~3 hours Working time Mode 1: approx. 5 hour
	Charging Time approx. 2-3 hours Working time Mode 1: approx. 5 hours Mode 2: approx. 2.5 hours

Each press of the Control button will increase the wind speed of the fan as follows:

SPEED CONTROL