

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|---|---|
| Tines will not rotate | Tines are clogged by dirt and debris. | Remove the battery pack, then remove any obstruction from the tines. |
| | Vines, grass or other debris wrapped around tine shaft. | Remove the battery pack, then clean the tine shaft. |
| Motor fails to start when switch trigger is depressed | Battery is not secure. | To secure the battery pack, make sure the latches on each side of the battery pack snap into place. |
| | Battery is not charged. | Charge the battery pack according to the instructions included with your model. |
| The tines stop rotating | The unit is overloaded. | Release the switch trigger and raise the tines. Restart the cultivator and slowly lower the tines back to their original depth. |

This product has a Three-year Limited Warranty for personal, family, or household use (30 days for business or commercial use). For warranty details, visit www.ryobitools.com or call (toll free) 1-800-525-2579.