


HAMPTON BAY®

Item #1011954815
Model #SW23094 BN

Basic Model # AI-SW23094 BN-Rev1-07152024

USE AND CARE GUIDE

SARPER LED 52 INCH CEILING FAN FOR INDOOR/COVERED OUTDOOR USE

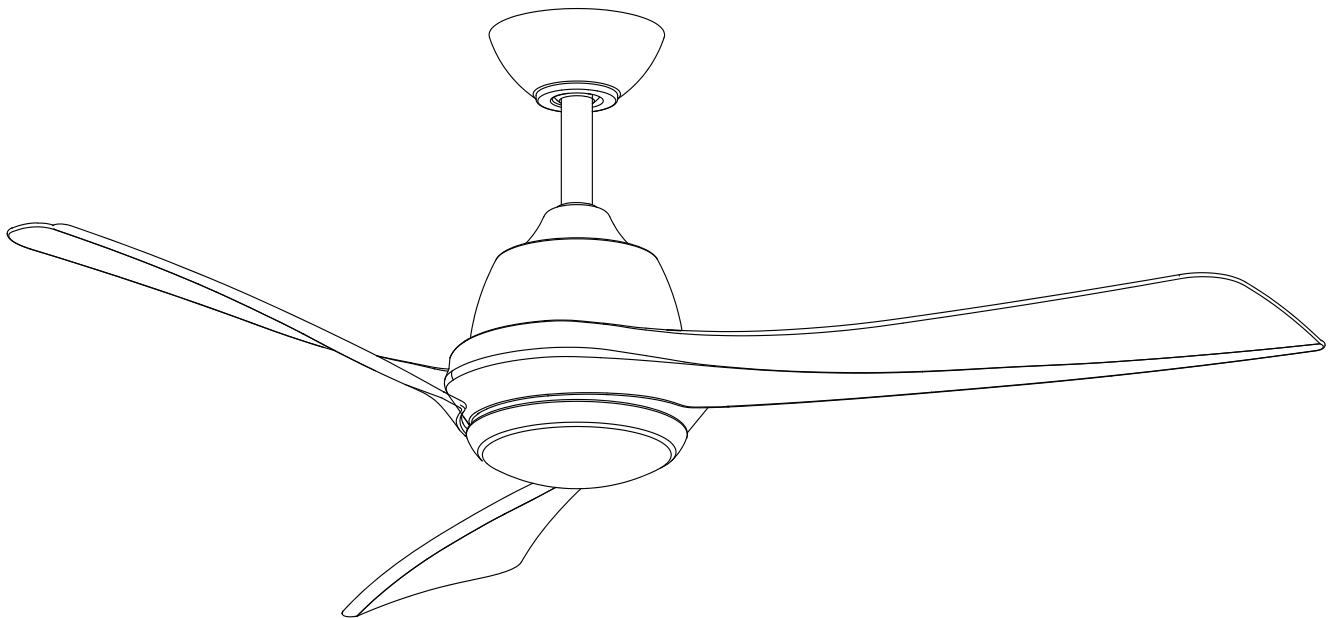

Questions, problems, missing parts?

Before returning to the store, call Hubspace Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-592-5233

HOMEDEPOT.COM/HUBSPACE

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this ceiling fan. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2
Safety Information	3
Warranty	4
Pre-installation	4
Specifications	4
Tools Required	4
Hardware Included	5
Package Contents	6
Installation	7
Assembly	8
Hanging the Fan	8
Attaching the Fan Blades	13
Installing the light kit	14
Operation	15
Application Set-Up	19
Voice Commands	20
Care and Cleaning	20
Troubleshooting	21
Service Parts	23

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

- ❑ To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before beginning.
- ❑ All wiring must be in accordance with the National Electrical Code “ANSI/NFPA 70-1999” and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
- ❑ The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lb. Use only UL Listed outlet boxes marked “FOR FAN SUPPORT.”
- ❑ The fan must be mounted with a minimum of 7 ft. clearance from the trailing edge of the blades to the floor.
- ❑ To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
- ❑ Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.
- ❑ After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
- ❑ All set screws must be checked and retightened where necessary before installation.
- ❑ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



NOTE: Outlet box must be checked that is securely installed in place such that it is able to support at least the fan weight.



WARNING: To reduce the risk of electrical shock or fire, do not use this fan with any solid-state fan speed control device.



WARNING: To reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch.



WARNING: To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. Parts made at home using a 3D printer).



WARNING: Use only with light kits marked 'Suitable for use in damp locations'.



WARNING: To reduce the risk of personal injury, do not bend the blade arms (also referred to as flanges), when installing the brackets, balancing the blades, or cleaning the fan.



WARNING: Do not insert foreign objects between rotating fan blades.



WARNING: To reduce the risk of fire, electric shock, or personal injury, mount the fan to the outlet box marked acceptable for fan support with the screws provided with the outlet box.



CAUTION: To reduce the risk of personal injury, use only the screws provided with the outlet box.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Warranty

We warrant the fan motor to be free from defects in workmanship and material present at time of shipment from the factory for a period of lifetime after the date of purchase by the original purchaser. And we warrant the LED light kit to be free from defects in workmanship and material present at time of shipment from the factory for a period of 3 years after the date of purchase by the original purchaser. We also warrant that all other fan parts, excluding any glass or acrylic blades, to be free from defects in workmanship and material at the time of shipment from the factory for a period of one year after the date of purchase by the original purchaser. We agree to correct such defects without charge or, at our option, replace with a comparable or superior model if the product is returned. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part such as by accident, misuse, improper installation or by affixing any accessories, is not covered by this warranty. Because of varying climatic conditions this warranty does not cover any changes in brass finish, including rusting, pitting, corroding, tarnishing or peeling. Brass finishes of this type give their longest useful life when protected from varying weather conditions. A certain amount of "wobble" is normal and should not be considered a defect. Servicing performed by unauthorized persons shall render the warranty invalid. There is no other express warranty. We hereby disclaim any and all warranties, including but not limited to those of merchantability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty which cannot be disclaimed is limited to the time period as specified in the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives specific legal rights, and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties. Shipping costs for any return of product as part of a claim on the warranty must be paid by the customer.

Contact the Customer Service Team at 1-877-592-5233 or visit www.HomeDepot.com/hubspace.

Pre-Installation

SPECIFICATIONS

Fan size	Speed	Volts	Amps	Watts	RPM	CFM	N.W.	G.W.	C.F.
52 in. (1.32 m)	Low	120	0.24	12.37	72	2106	6.32 kg (13.90 lb)	10.3 kg (22.66 lb)	2.885'
	Medium		0.35	30	120	3622			
	High		0.45	53.29	153	4880			



NOTE: These are approximate measures. They do not include amps and wattage used by the light kit.




Intertek

TOOLS REQUIRED



Phillips
screwdriver

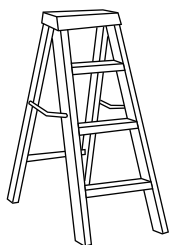

Ladder



Wire
stripper




Electrical
tape

Pre-Installation (continued)

HARDWARE INCLUDED




NOTE: Hardware shown to actual size unless noted otherwise in the table below.

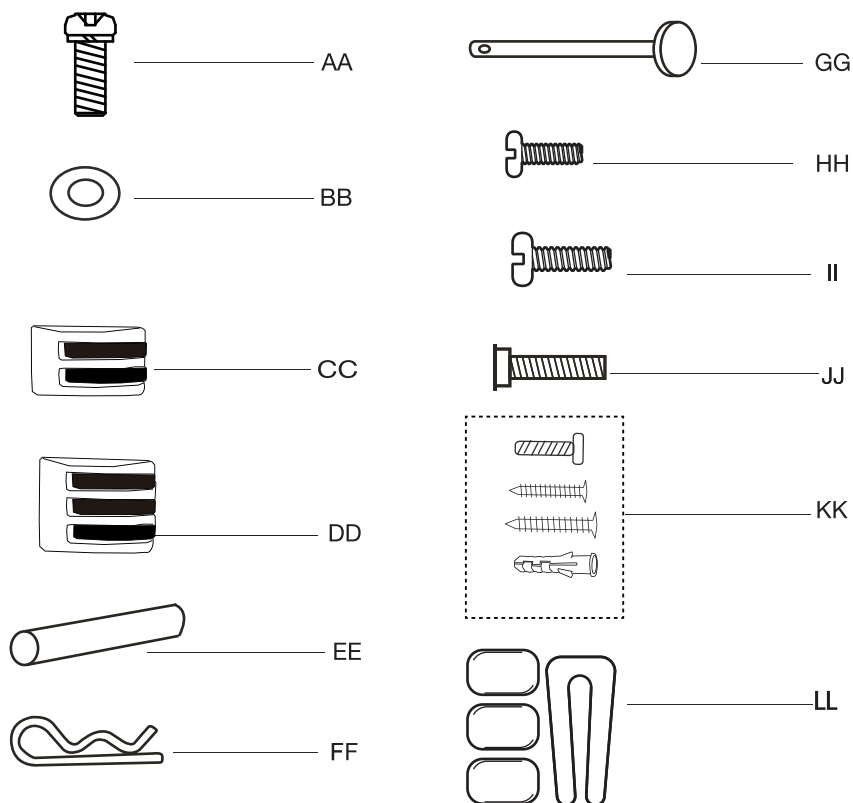

Part	Description	Quantity
AA	Blade screw	9 + 1 spare
BB	Metal washer	9 + 1 spare
CC	lever style quick connector (2P)	2
DD	lever style quick connector (3P)	2
EE	Cross pin (not to scale) (preassembled)	1
FF	Hitch pin (preassembled)	1
GG	Lock pin (not to scale) (preassembled)	1
HH	Hanger ball set screw (preassembled)	1
II	Fan motor assembly coupling set screw (preassembled)	2
JJ	Mounting bracket screw (preassembled)	2
KK	Remote control cradle hardware pack (ST3.5*13mm screw -2pcs, ST3.0*18mm screw-2pcs, #6/32*13mm screw-2pcs, anchor -2pcs)	1 set
LL	Balance kit (not to scale)	1 set

Pre-Installation (continued)

PACKAGE CONTENTS

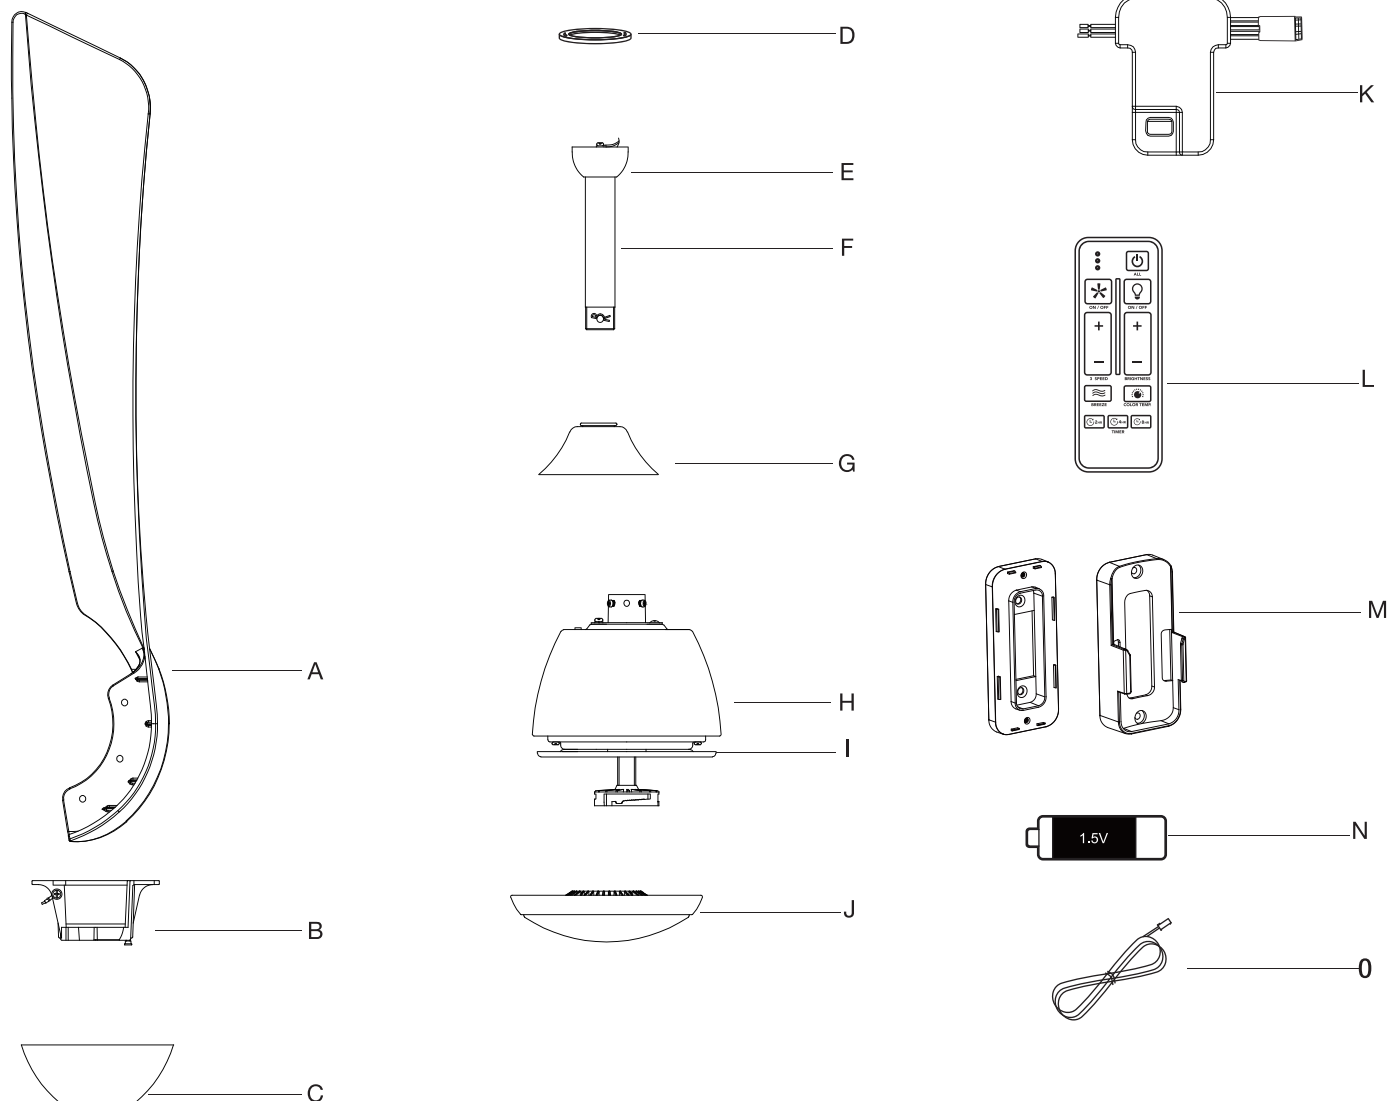

Part	Description	Quantity
A	Blade	3
B	Mounting bracket	1
C	Canopy	1
D	Canopy cover	1
E	Hanger ball (preassembled)	1
F	Downrod (preassembled)	1
G	Coupling cover	1
H	Fan motor assembly	1

Part	Description	Quantity
I	Flywheel (preassembled)	1
J	18W LED assembly	1
K	Receiver	1
L	Remote control	1
M	Remote control cradle	1
N	1.5V Battery	2
O	Extension power cord used for longer downrod (longer downrod not included)	1

Installation

MOUNTING OPTIONS







WARNING: To reduce the risk of fire, electric shock, or personal injury, mount the fan to an outlet box marked acceptable for fan support using the screws provided with the outlet box. An outlet box commonly used for the support of lighting fixtures may not be acceptable for fan support and may need to be replaced. If in doubt, consult a qualified electrician.

If your ceiling fan does not have an existing UL Listed mounting box, then install one using the following instructions:

- Disconnect power by removing the fuse or turning OFF the breaker depending on the type of electrical panel in your home.
- Secure the outlet box (1) (not included) directly to the ceiling joist. Use appropriate fasteners and materials (not included). The outlet box and its bracing must be able to fully support the weight of the moving fan (at least 35 lb. Do not use a plastic outlet box).
- The illustrations to the right show three different ways to mount the outlet box (not included).
- To hang your fan where there is an existing fixture but no ceiling joist, you may need an installation hanger bar (3) (not included), as shown.



NOTE: You may need a longer downrod to maintain proper blade clearance when installing on a steep, sloped ceiling. The maximum angle allowable is 18°. If the canopy touches the downrod, remove the decorative canopy bottom cover and turn the canopy 180° before attaching the canopy to the mounting plate (2).

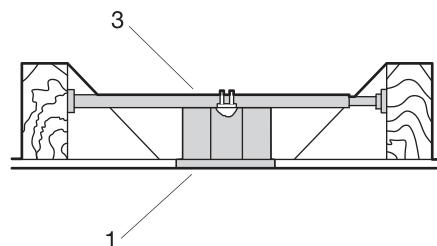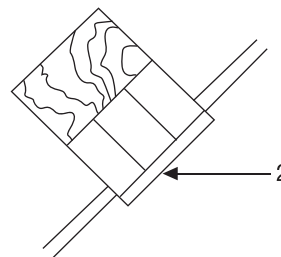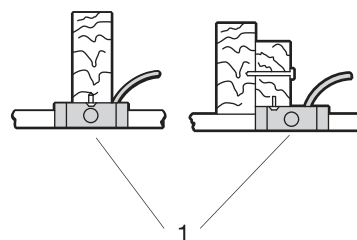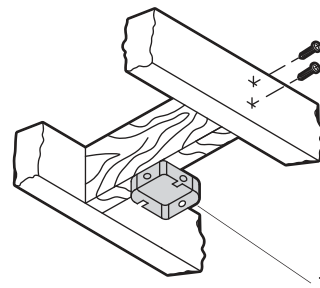


Assembly — Hanging the Fan

1 Attaching the mounting bracket to the electrical box




WARNING: To reduce the risk of fire, electric shock, or other personal injury, mount the fan only to an outlet box or supporting system marked acceptable for fan support and use the mounting screws provided with the outlet box.

- Place the slots from the mounting bracket (B) over the two mounting screws provided with the outlet box.
- Slide the mounting bracket (B) until it locks in place at the narrow section of the slots.
- Securely tighten the two mounting screws provided with the outlet box.

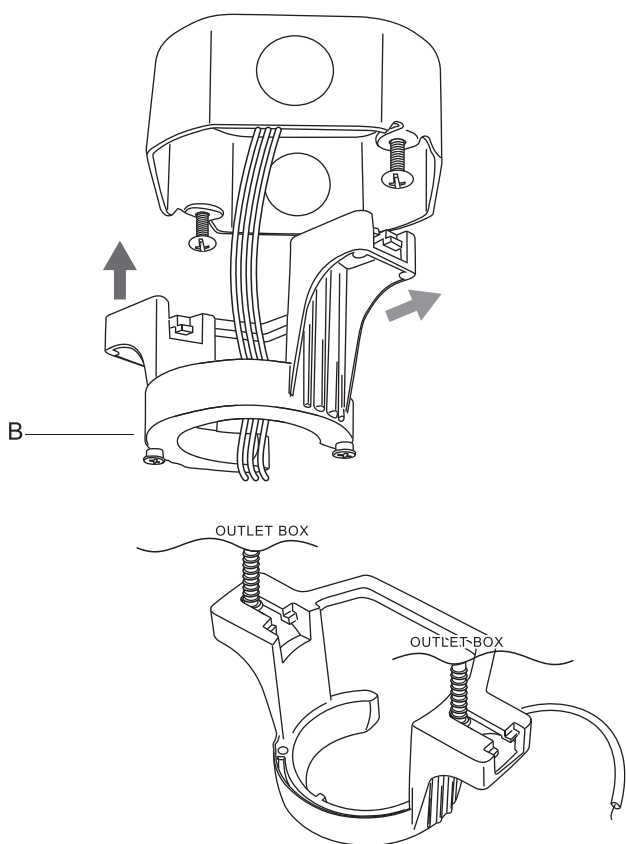

2 Attaching the downrod to the fan motor assembly

- Remove the hitch pin (FF) and lock pin (GG) from the downrod (F). Then, remove the hanger ball (E) from the downrod (F) by loosening the hanger ball set screw (HH), and removing the cross pin (EE), then sliding the hanger ball (E) off of the downrod (F).
- Loosen the two set screws (II) from the fan motor assembly (H) coupling.
- Carefully feed the fan wires up through the downrod (F). Thread the downrod (F) into the fan motor assembly (H) coupling. Line up the holes and replace the lock pin (GG) and the hitch pin (FF). Retighten the fan motor assembly coupling set screws (II).

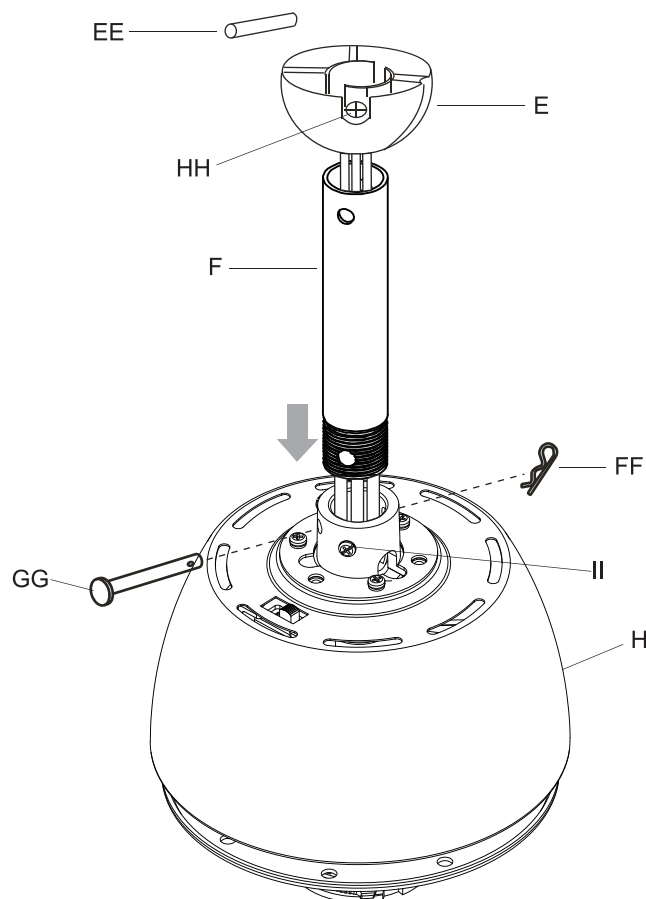


Assembly — Hanging the Fan (continued)

3 Attaching the coupling cover, canopy cover, and canopy to the downrod

- Slip the coupling cover (G), canopy cover (D), and canopy (C) onto the downrod (F). Carefully reinstall the hanger ball (E) onto the downrod (F), and ensure that the cross pin (EE) is in the correct position, all the way down into the slot, the set screws (HH) are tight, and the wires are not twisted.




NOTE: Manual reverse switch (PP) is located around the coupling cover (G). Please refer to page 17 for the details of reverse function.

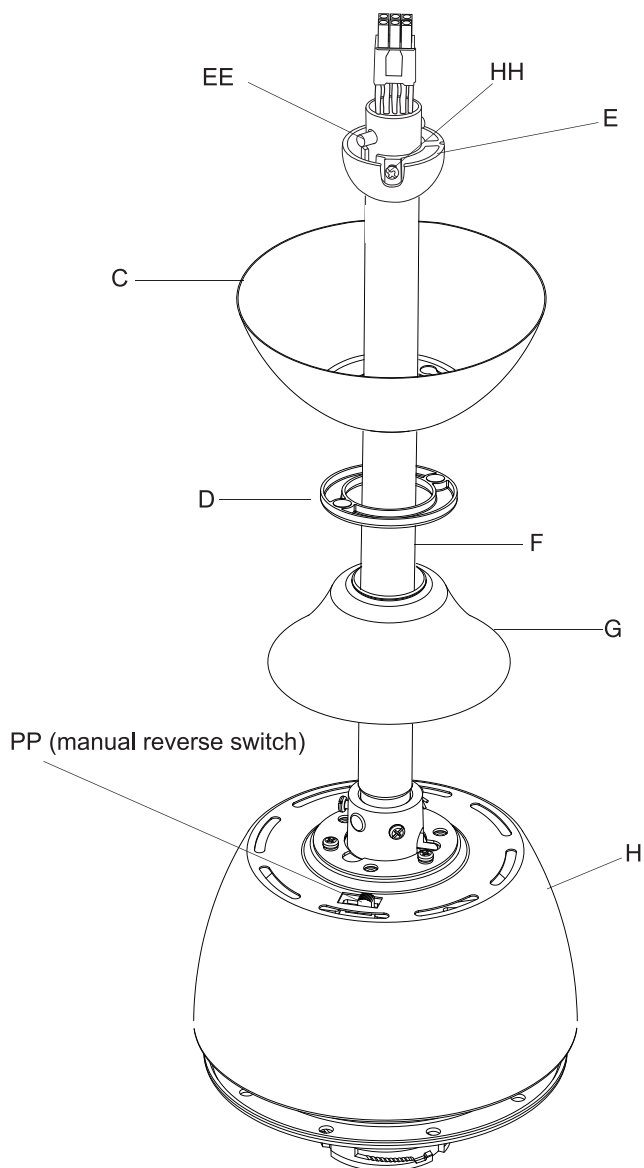

4 Hanging the fan motor assembly to the mounting bracket

- Lift the fan motor assembly (H) into position, and place the hanger ball (E) into the mounting bracket (B). Rotate the downrod (F) until the check groove drops into the registration slot (MM) and seats firmly. The downrod (F) should not rotate if this is done correctly.

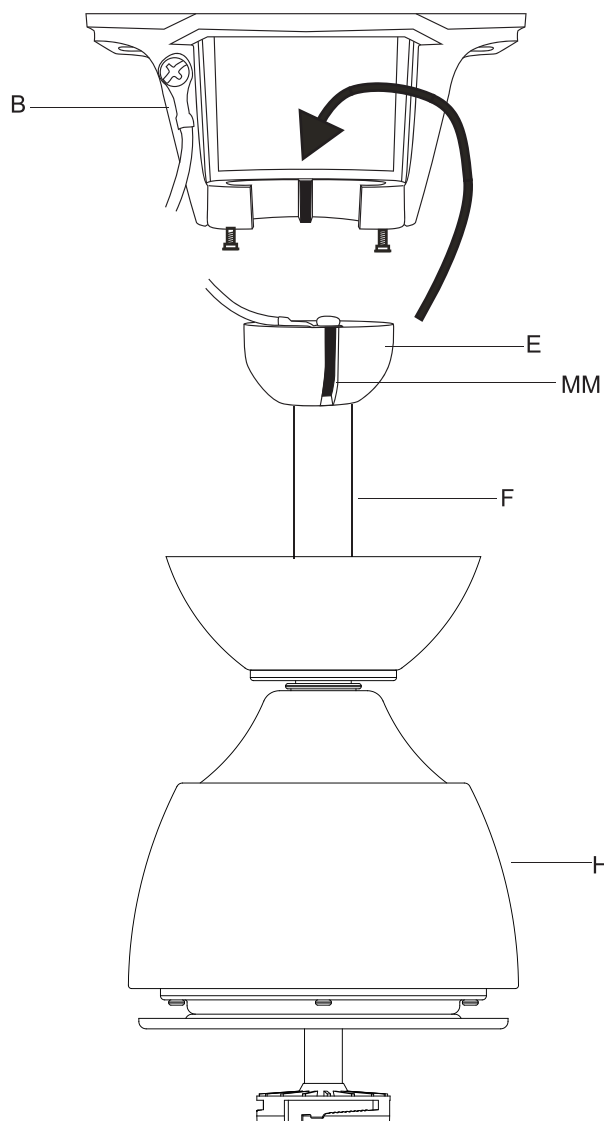

Assembly — Hanging the Fan (continued)

5 Installing the receiver



WARNING: To avoid possible electrical shock, ensure the electricity is turned off at the main fuse box before wiring.



CAUTION: Do not use with a wall light dimmer switch.






NOTE: If you feel you do not have enough electrical wiring knowledge or experience, have your fan installed by a licensed electrician.

- Insert the receiver (K) into the mounting bracket(B) with the side showed QR code facing down.



NOTE: Wires coming from the downrod and the wires coming from the power source need to be positioned on the same side when inserting the receiver through the mounting bracket.

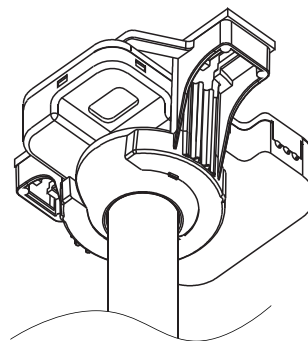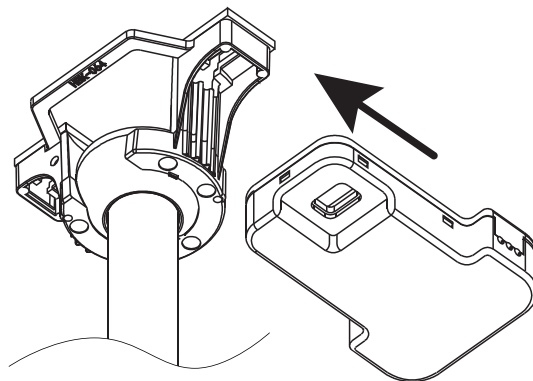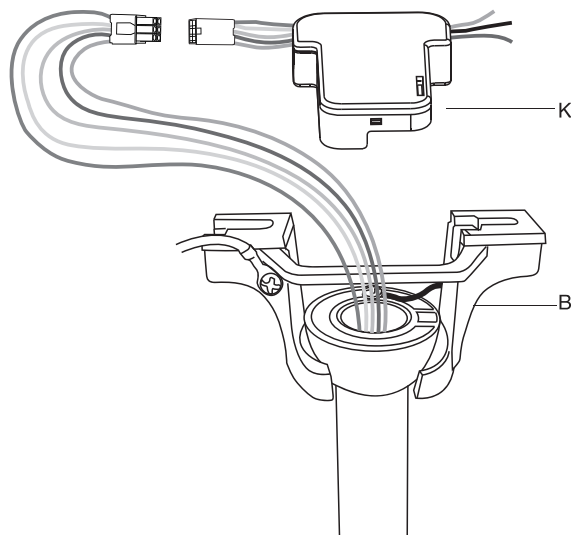

Assembly — Hanging the Fan (continued)

6 Making the electrical connections



WARNING: To avoid possible electrical shock, ensure the electricity is turned off at the circuit breaker or main fuse box before wiring.



WARNING: Check to see that all connections are tight, including the ground, and that no bare wire is visible at the wire nuts, except for the ground wire.



NOTE: The 3-Wire Receiver will enable independent control of fan and light at the wall switch if house wiring has separate household red and black power wires.

Follow the steps below to connect the fan to your house supply wires.



Motor to receiver electrical connections:

- Connect the male connector from the motor to the female connector from the receiver (K).

Receiver to house supply wires electrical connections:

- Connect the white (neutral) wire from the ceiling to the white wire marked "AC IN N" from the receiver (K).
- Connect the black (hot) wire from the ceiling to the black wire marked "AC IN L FOR MOTOR SWITCH" from the receiver (K).
- Connect the red wire from ceiling to the red wire marked "AC IN L FOR LIGHT SWITCH" from the receiver (K). **NOTE:** If supply wires coming out of the ceiling only has one red or black (hot) wire, please connect both black and red wires from the receiver (K) to the one hot wire from the outlet box (1). Red wire may be a different color depending on your location. Always consult a qualified electrician if you are unsure.
- Connect the ground wire (green or bare copper) from the outlet box (1) to the ground wire of the hanging ball (E) and the ground wire of mounting bracket (B).
- Secure the wire connections with the lever style quick connectors (CC & DD) provided with the hardware bag. And wrap the connections with electrical tape.
- After connecting the wires, spread them apart so that the green and white wires are on one side of the outlet box (1) and the black wires are on the other side. Carefully tuck the wire connections up into the outlet box (1).



Instruction on how to use lever style quick connector

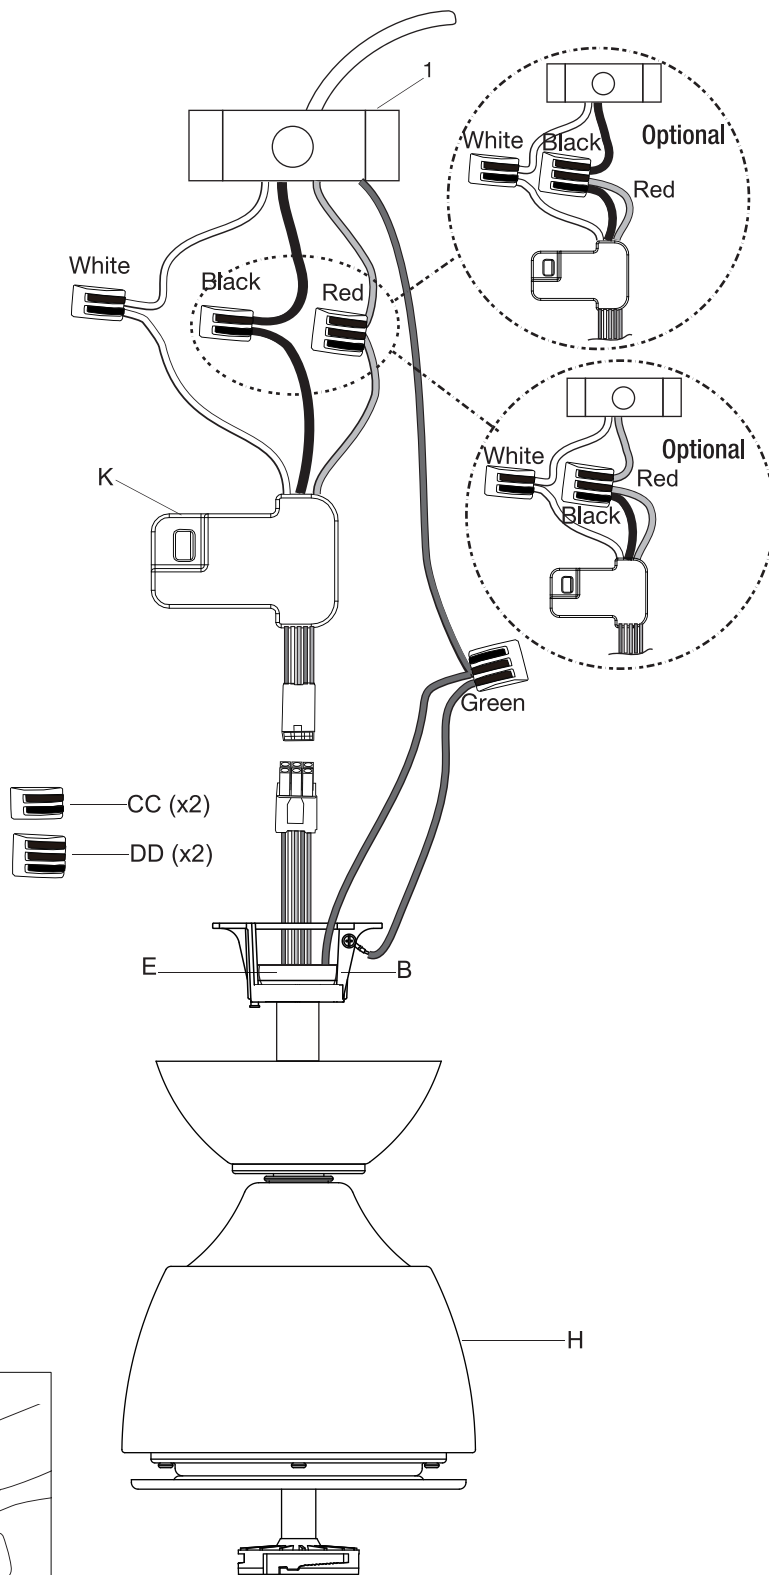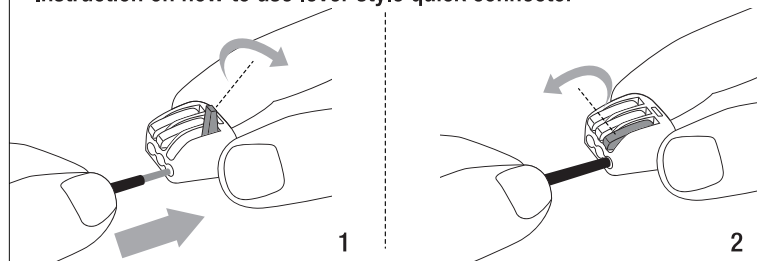

Assembly — Hanging the Fan (continued)

7 Securing the fan motor assembly to the mounting bracket


- Loosen two screws (JJ) approximately 1/4 turn.
- Carefully raise the canopy (C) up to the mounting bracket (B), and ensure the loosened screws (JJ) are inserted into the key hole in the canopy (C). Rotate the canopy (C) clockwise.
- Secure the canopy (C) by tightening the two screws (JJ) previously loosened.
- The canopy cover (D) is magnetic, just attach it to the canopy (C).

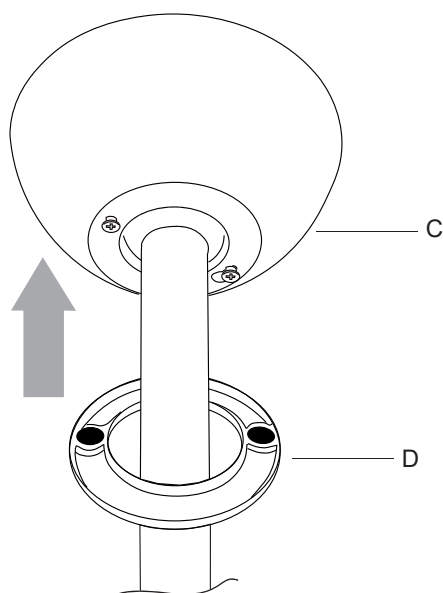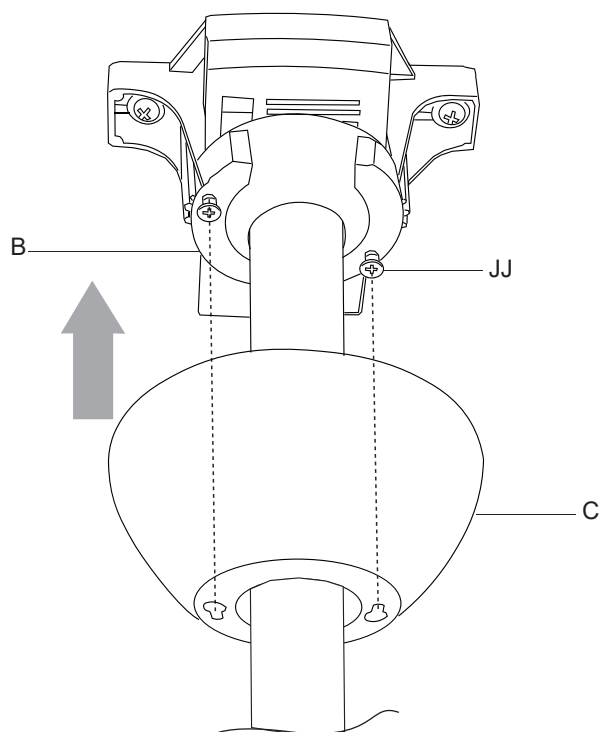

Assembly — Attaching the Fan Blades

8 Fastening the blades to the fan motor assembly

- Align the 3 holes from the blade(A) to the flywheel (I). Secure the blade with three blade washer (AA) and three metal washer (BB) provided.
- Follow the same process for the remaining two blades (A).

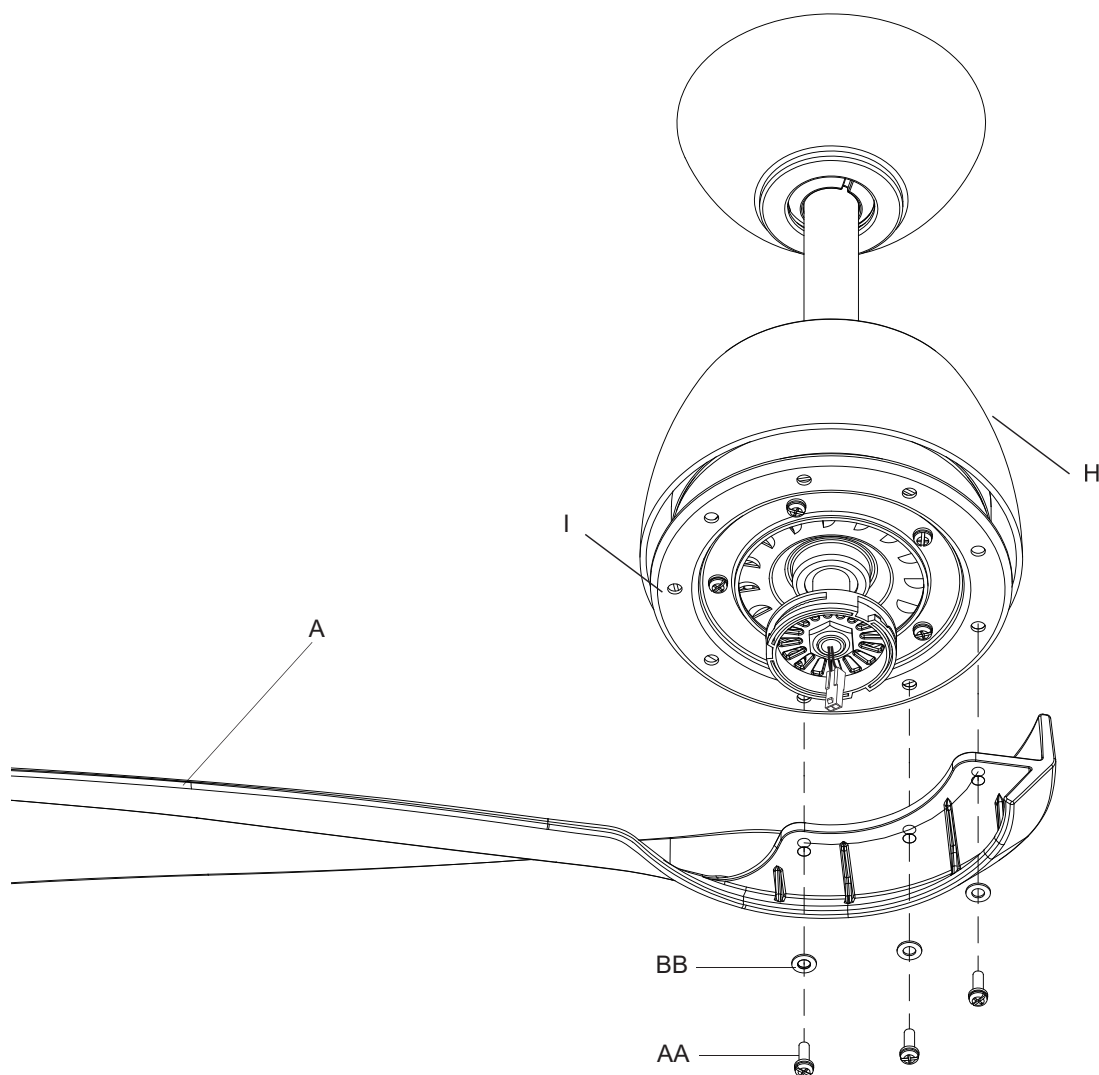


Assembly — Installing the Light Kit

9 Attaching the LED assembly to the fan motor assembly



CAUTION: To reduce the risk of electric shock, disconnect the electrical supply circuit to the fan before installing the light kit.

- While holding the LED assembly (J) under your fan, firmly snap the wire connection plugs (NN) together.
- Attach the LED assembly (J) to the switch box (OO) by twisting tightly.

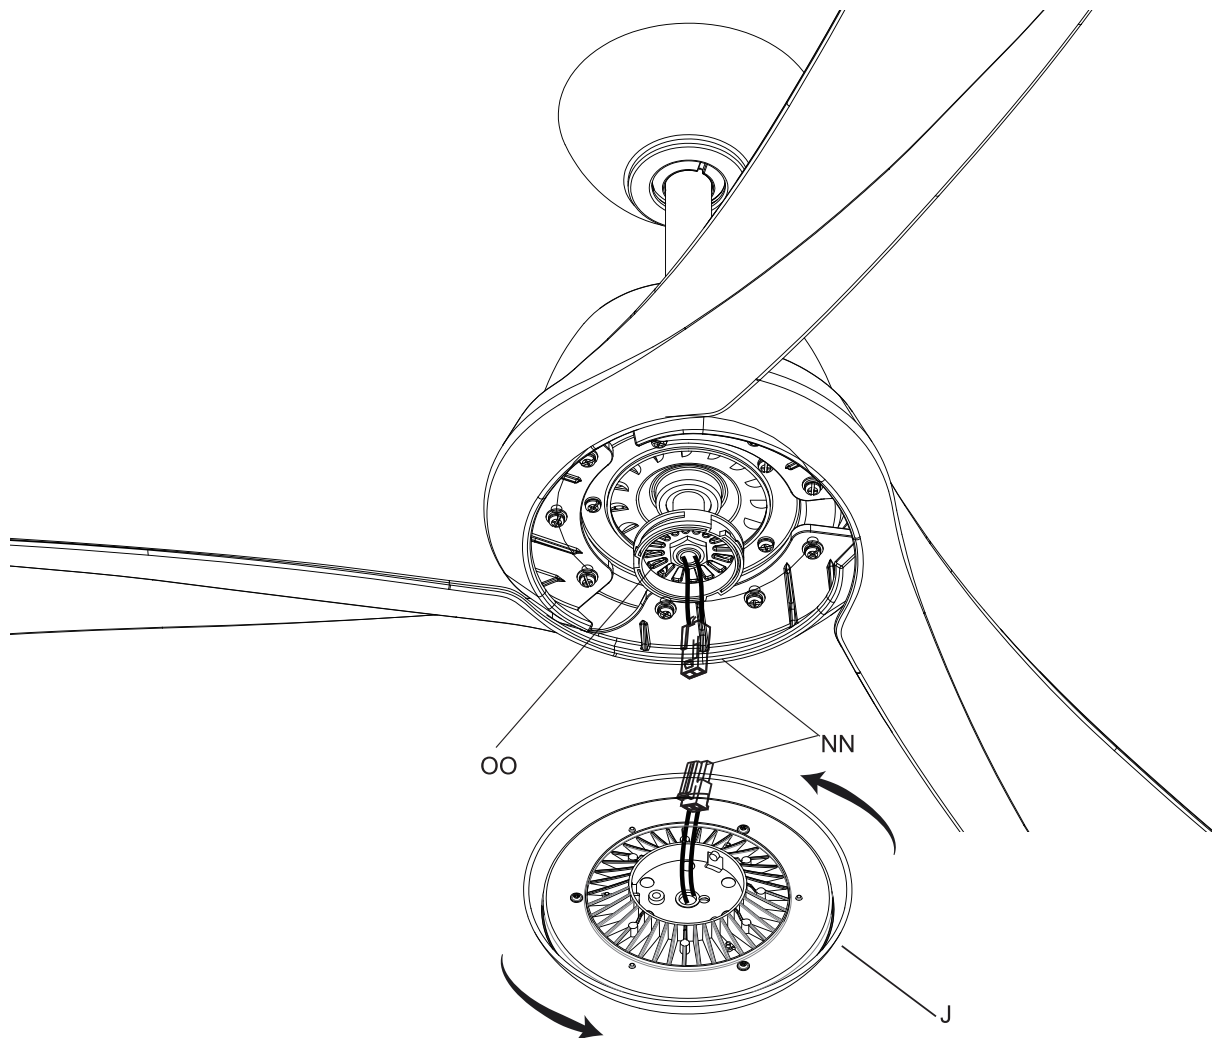

Operation

SYNCING THE RECEIVER AND THE REMOTE CONTROL

Install two 1.5V batteries (N) into the remote control. To prevent damage to the remote control, remove the batteries if not used for long periods of time. Restore power to the ceiling fan and test for proper operation.



WARNING: Do not short-circuit, disassemble, heat up, connect improperly, or dispose of used batteries in fire. Do not recharge or mix batteries with used or other battery types. Immediately remove used batteries.



NOTE: The control system is equipped with a learning frequency function which has 64 code combinations to prevent potential interference from other remote units. The frequency on your receiver and transmitter units have been preset at the factory. No frequency change is necessary. If the fan is non-functional or if you desire to install another fan within the same home or area with a separate frequency code, please see this "learning process" section of this instruction manual to re-pair the receiver and transmitter.

- Turn the power to the fan and light off. After 10 seconds, turn the power back on to both the fan and light.
- Within 60 seconds of turning the fan's AC power ON, press and hold the syncing button (Ⓢ) for 5 seconds to enter the learning function.



NOTE: After the AC power is on, do not press any other button on the remote control before pressing the syncing button (Ⓢ). Doing so will cause the procedure to fail.


- Once the receiver has detected the set frequency, the fan will rotate for a while and the down light of your fan if applicable will blink twice. The receiver has now learned the frequency which has been selected on the transmitter. After completing the steps above, you should be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the power off to the receiver, and repeat the process.



NOTE: If you want to add an extra remote control to operate the same fan, please follow the same steps as above but instead of holding the sync button (Ⓢ) for 5 seconds, hold it for 10 seconds on the additional remote controls you would like to pair. During this 10 seconds, the light will blink twice and the fan will run for a moment. The behavior will happen twice. This is an indication that the new remote is paired, and both remotes will work with the same fan.



NOTE: A maximum of 3 remote controls can be paired with one fan.

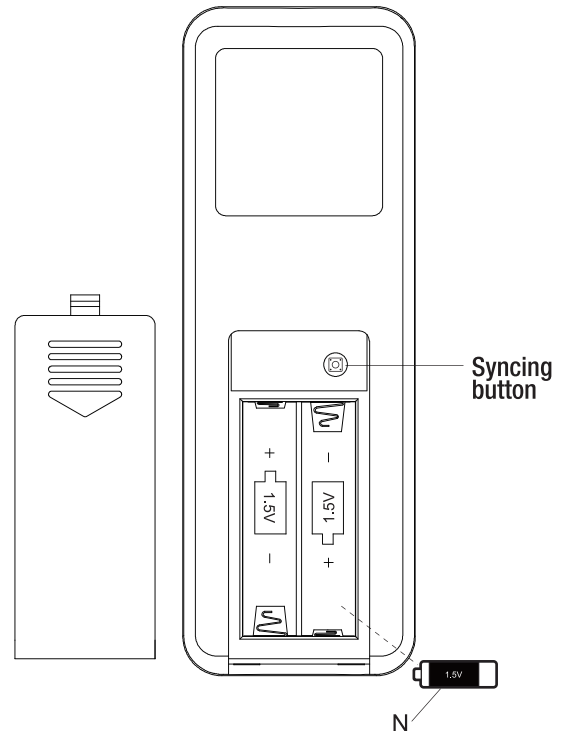

Operation (continued)

REMOTE CONTROL OPERATING INSTRUCTIONS

-  : Press and release this button to turn the fan and light on/off.



NOTE: The fan has memory function. It will resume the speed and light setting on the ceiling fan prior to the power being turned off.




NOTE: If the light is off and your fan is under Breeze mode or fan is running at any speed, pressing the  button in first time, it will turn on the light only. When press the  button again, the fan Breeze mode will be cancelled and the fan& light will be turn off together. When press the  button again, the fan and light will be turn on together.


-  : Press and release this button to turn the fan on/off.




NOTE: If Breeze mode is on, pressing the FAN ON/OFF button  will cancel Breeze mode and turn fan off. Pressing the FAN ON/OFF button  again will turn fan on at the speed last engaged by Breeze mode.

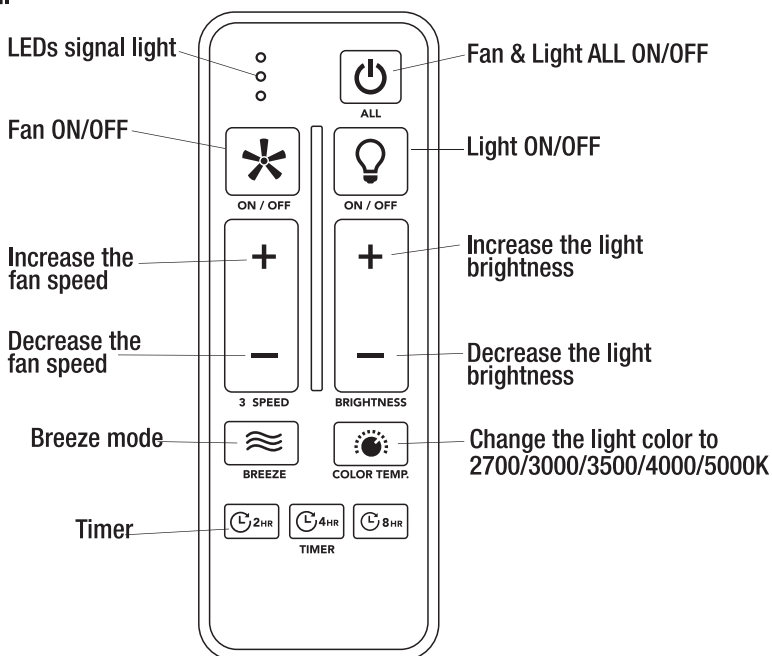

 -  : Press and release this button to turn the light on/off.

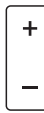 -  : Press and release the button to increase / decrease the fan speed. If fan is in Breeze mode, press and release this button to cancel the Breeze mode and resume normal fan operation.

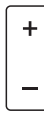-  : Press and release this button to dim the light.

-  : Press and release this button to activate the Breeze mode. Press and hold this button for 3 seconds to cancel the breeze mode and resume normal fan operation. LED signal light will flash, indicating cancellation of breeze mode.

-  : Press and release this button to change the light color temperature to 2700/3000/3500/4000/5000K.

-    : Press and release the timer button to activate the timer function. It will automatically turn the fan off after 2, 4 or 8 hours. Press and hold this button for 3 seconds to cancel the timer. LED signal light will flash, indicating cancellation of timer.



NOTE: You must turn the fan on prior to using the timer function.

Operation (continued)


REVERSE FUNCTION

- The reverse switch (PP) is located on the surface of the fan motor assembly (H).
- This switch controls directions: forward (switch left) or reverse (switch right).




NOTE: Wait for the fan to stop before reversing the direction of the blade rotation.


- Summer weather - (Counterclockwise Direction) A downward air flow creates a cooling effect. This allows you to set your air conditioner on a higher setting without affecting your comfort.
- Winter weather - (Clockwise Direction) An upward air flow moves warm air off the ceiling. This allows you to set your heating unit on a lower setting without affecting your comfort.

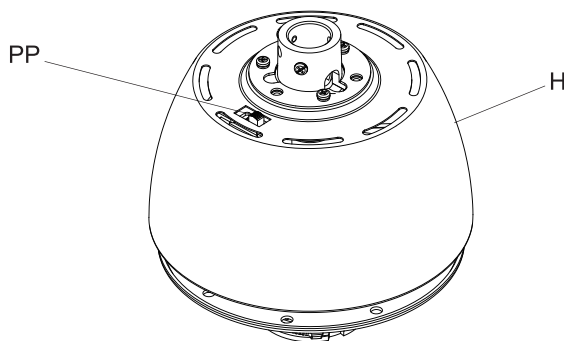

SUMMER
MODE

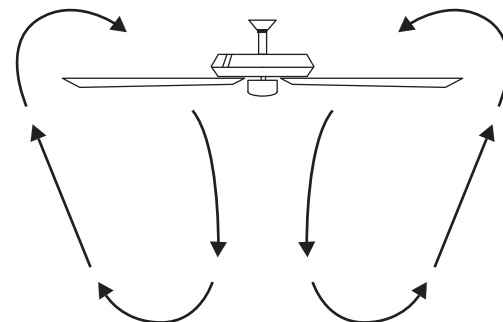

WINTER
MODE

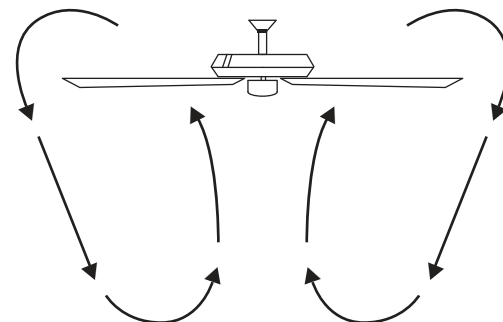


Operation — Mounting the remote wall cradle



NOTE: The remote wall cradle is designed to allow you to access an existing switch. The remote wall cradle can be mounted on the wall or to the face plate of a standard toggle switch or a paddle switch. Follow the instructions below for the option that best suits your needs.


a. Attaching over a standard toggle switch

- Remove the two screws from the toggle switch face plate.
- Place the toggle switch spacer over the toggle switch face plate and align the two large holes of the toggle switch spacer with the holes in the face plate. Secure the toggle switch spacer to the face plate using the two screws (ST3.5 x 13mm) provided.
- Attach the remote wall cradle to the toggle switch spacer using the two screws (#6/32*13mm) provided. Screw them into the top hole and bottom hole of the remote control holder and into the toggle switch spacer until tight.

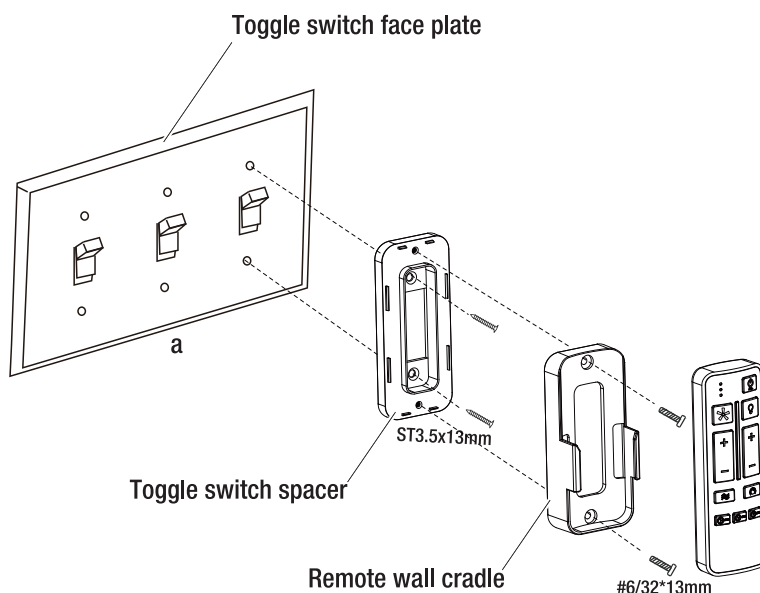

b. Attaching over a paddle switch

- Remove the two screws from the paddle switch face plate.
- Place the remote wall cradle over the paddle switch and align the two holes of the remote wall cradle with the holes in the face plate. Secure the remote wall cradle to the face plate using the two screws (#6/32*13mm) provided.

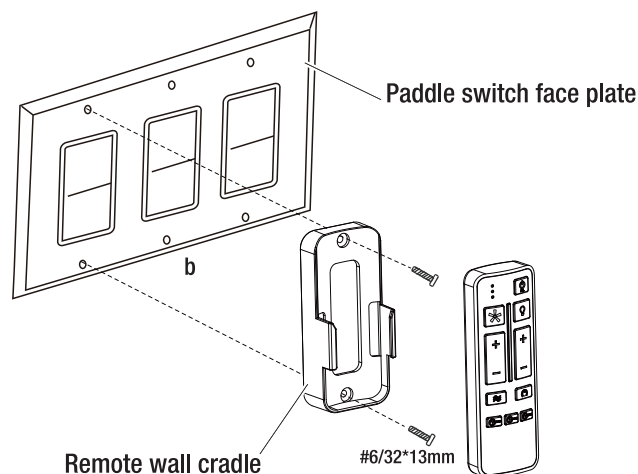


c. Attaching to the wall



NOTE: Screw wall anchors are included for extra support. The included screws are designed to screw easily into the wall. If you would like a more permanent or secure hold, install the wall anchors prior to attaching the wall cradle to the wall.

- Position the remote wall cradle in the desired position and attach to the wall using the two anchors and the two screws (ST3.0 x 18mm) provided.

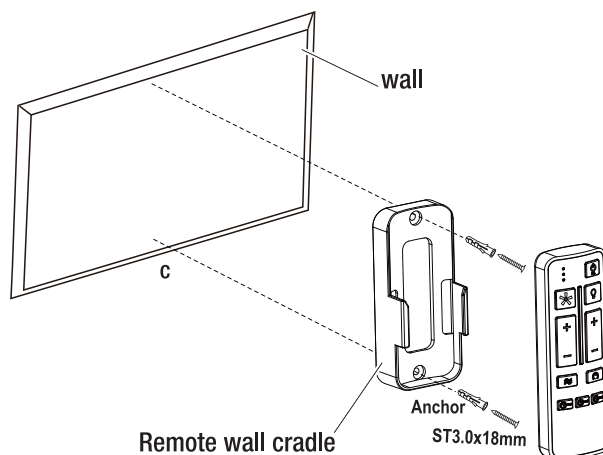

Application Set-Up



NOTE: For more information on smart remote set up, please refer to the quick start guide located in the remote pack.



NOTE: To use Alexa to change the color temperature of the light, please make sure the light is turned on first.



Questions, problems missing parts?
Please call Hubspace Customer service
8 a.m. - 7 p.m. EST, Monday - Friday;
9 a.m. - 6 p.m., EST, Saturday
(877) 592-5233

1 Getting started


- ☐ Download the Hubspace™ app from the App Store or the Google Play Store to your mobile device.
- ☐ Launch the app.
- ☐ To register, enter your email address and a password. Or, login if you already have an account.
- ☐ Bluetooth access is required for device setup.

2 Verify your network

- ☐ Hubspace only shows Wi-Fi networks that your device can use. Check your network only if an option does not appear during set up.
- ☐ This Hubspace device requires a 2.4GHz Wi-Fi channel.
- ☐ Most routers provide a 2.4 GHz Wi-Fi channel.
- ☐ If you do not see your Wi-Fi network name when you attempt to connect your device, please check your router settings.

3 Add a device

- ☐ In the Hubspace app, tap the plus sign in the upper right corner.
- ☐ Scan your product's QR code. You can find the QR code on the remote receiver, inside the battery compartment cover of the remote, and on the Quick Start Guide paper included with the fan.

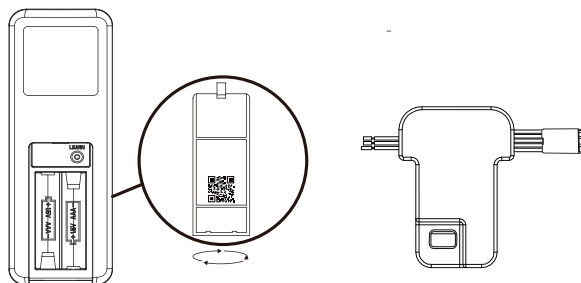

Scan problem?

If the QR code cannot be scanned for some reason, you can enter the code manually. Tap Enter Code and follow the instructions.

- ☐ Connect your device to power and follow the instructions on screen.

(For lighting and fan products only)

If you are unable to access the QR code for your light, you can put it into discovery mode with the following sequence:

- ☐ Switch the device off and on 5 times. The light will pulse to show that it can now be discovered.
- ☐ In the Hubspace app, tap the plus sign in the upper right corner and follow the instructions to discover devices. More than one device can be added at a time using this method.

4 Set up your voice assistant

- ☐ In the Hubspace app, tap the Hubspace button. 
- ☐ Select the Integrations tab, choose your voice assistant and follow the instructions.

Problems connecting to Hubspace device, see “troubleshooting” on page 22.

Voice Commands

The Sarper 52 in. LED Ceiling Fan works with Alexa and Google Assistant.

This section lists some of the voice commands you can use. To view these and other commands, go to <http://hubspaceconnect.com>.

Alexa

When you want to...	Ask Alexa to...
Turn on the fan only.	... turn on <device name> fan power.
Turn off the fan only.	... turn off <device name> fan power.
Turn on the light only.	... turn on <device name> light power.
Turn off the light only.	... turn off <device name> light power.
Change the brightness.	... Set <device name> brightness to 75%. ... Set <device name> light to 25%. ... Make <device name> dimmer. ... Make <device name> brighter. ... Dim <device name>. ... Brighten <device name>. ... Dim <group name>. ... Brighten <group name>.
Change the color temperature.	... Change <device name> to Cool White. ... Change <device name> to Warm White. ... Change <device name> to Daylight White. ... Change <device name> to White.
Change the fan speed.	... Set <device name> speed to fastest. ... Set <device name> speed to fast. ... Set <device name> speed to medium. ... Set <device name> speed to slow. ... Increase <device name> speed. ... Decrease <device name> speed.
Turn on Comfort Breeze.	... Turn on Comfort Breeze on <device name>.

Google

When you want to...	Ask Google to...
Turn on the fan only.	... turn on <device name> fan power.
Turn off the fan only.	... turn off <device name> fan power.
Turn on the light only.	... turn on <device name> light power.
Turn off the light only.	... turn off <device name> light power.
Change the brightness.	... Set <device name> brightness to 75%. ... Set <device name> light to 25%. ... Brighten <device name>. ... Dim <device name>. ... Brighten <room name>. ... Dim <room name>.
Change the color temperature.	... Change <device name> to Ivory. ... Change <device name> to Daylight. ... Change <device name> to Cool White. ... Change <device name> to Warm White. ... Change <device name> to Incandescent.
Change the fan speed.	... Set <device name> speed to fastest. ... Set <device name> speed to fast. ... Set <device name> speed to medium. ... Set <device name> speed to slow. ... Increase <device name> speed. ... Decrease <device name> speed.
Turn on Comfort Breeze.	... Turn on Comfort Breeze on <device name>.

Care and Cleaning

Do
❑ Check the support connections, brackets, and blade attachments twice a year. Ensure they are secure. Because of the fan's natural movement, some connections may become loose over time. It is not necessary to remove the fan from the ceiling. ❑ Clean your fan periodically. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer to minimize discoloration or tarnishing. ❑ (Optional) Apply a light coat of furniture polish to the wood blades. ❑ (Optional) Cover small scratches with a light application of shoe polish.

Do not
❑ Do not use water when cleaning. Water could damage the motor, or the wood, or possibly cause an electrical shock. ❑ Do not apply oil to your fan or motor. The motor has permanently-lubricated sealed ball bearings.

Troubleshooting




WARNING: Ensure the power is off at the electrical panel box before you attempt any repairs. Refer to the section "Making the Electrical Connections" on page 11.

Problem	Solution
The fan will not start.	☐ Check main and branch circuit fuses or breakers.
	☐ Check line wire connections to the fan and switch wire connections in the switch housing.
	☐ Check the wires with the moxex plugs to ensure proper connection.
The fan sounds noisy.	☐ Make sure all motor housing screws are snug.
	☐ Make sure the screws that attach the fan blade arm to the motor hub are tight.
	☐ Make sure wire nut connections are not rattling against each other or the interior wall of the switch housing.
	☐ Allow a 24-hour "breaking-in" period. Most noises associated with a new fan disappear during this time.
	☐ If using the ceiling light kit, make sure the screws securing the glassware are tight. Check that the light bulb is also secure.
	☐ Make sure there is a short distance from the ceiling to the canopy. It should not touch the ceiling.
The remote control is not working.	☐ Make sure your ceiling box is secure and rubber isolator pads are used between the mounting bracket and outlet box.
	☐ Do not connect the fan with wall mounted variable speed control(s).
The fan wobbles.	☐ Check that all blade and blade arm screws are secure.
	☐ Most fan wobble problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades. Measure from a point on the center of each blade to the point on the ceiling. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. Measurements deviation should be within 1/8 in. Run the fan for 10 minutes.
	☐ Use the enclosed blade balancing kit if the blade wobble is still noticeable. Balancing kit includes an additional instruction manual within the packet.

Troubleshooting (continued)

Hubspace™ Troubleshooting	
My hubspace device is not connecting to Wi-Fi.	□ Make sure your device is connected to a power source. □ Your Internet connection or Wi-Fi network may be down.
My device cannot find any Wi-Fi networks.	□ Make sure you have a 2.4GHz capable Wi-Fi network within range of the device you are trying to add.
My device is in a location that does not have Wi-Fi. Can I still use it with the Hubspace app?	Yes: □ Use the app on a phone with an Internet connection like LTE. □ The phone must be within Bluetooth range of your Hubspace device.
I cannot find the QR code.	□ Look for it where other stickers are on the product. A copy of the QR code is also included in your device's documentation.
The QR code has become damaged. How do I add the device?	□ Under the QR code are numbers. You can enter those in manually instead of scanning the code.
How do I reset the device?	□ Remove the device from your account, then add it back. Devices also reset when they transfer to a new account.
A device is on another account. How do I transfer it?	□ Scan the QR code and it will transfer to your account.
My device is offline for long periods of time.	□ Make sure your Wi-Fi signal strength is sufficient. You may need to move your router, use mesh Wi-Fi, or Wi-Fi extenders.
The device is on and I scanned the QR code, but the app cannot connect to it.	□ Turn off Bluetooth on your phone and turn it back on. Then, scan the QR code.
Can I scan the same QR code to add multiple products?	□ No. Each product has a unique QR code.

Service Parts

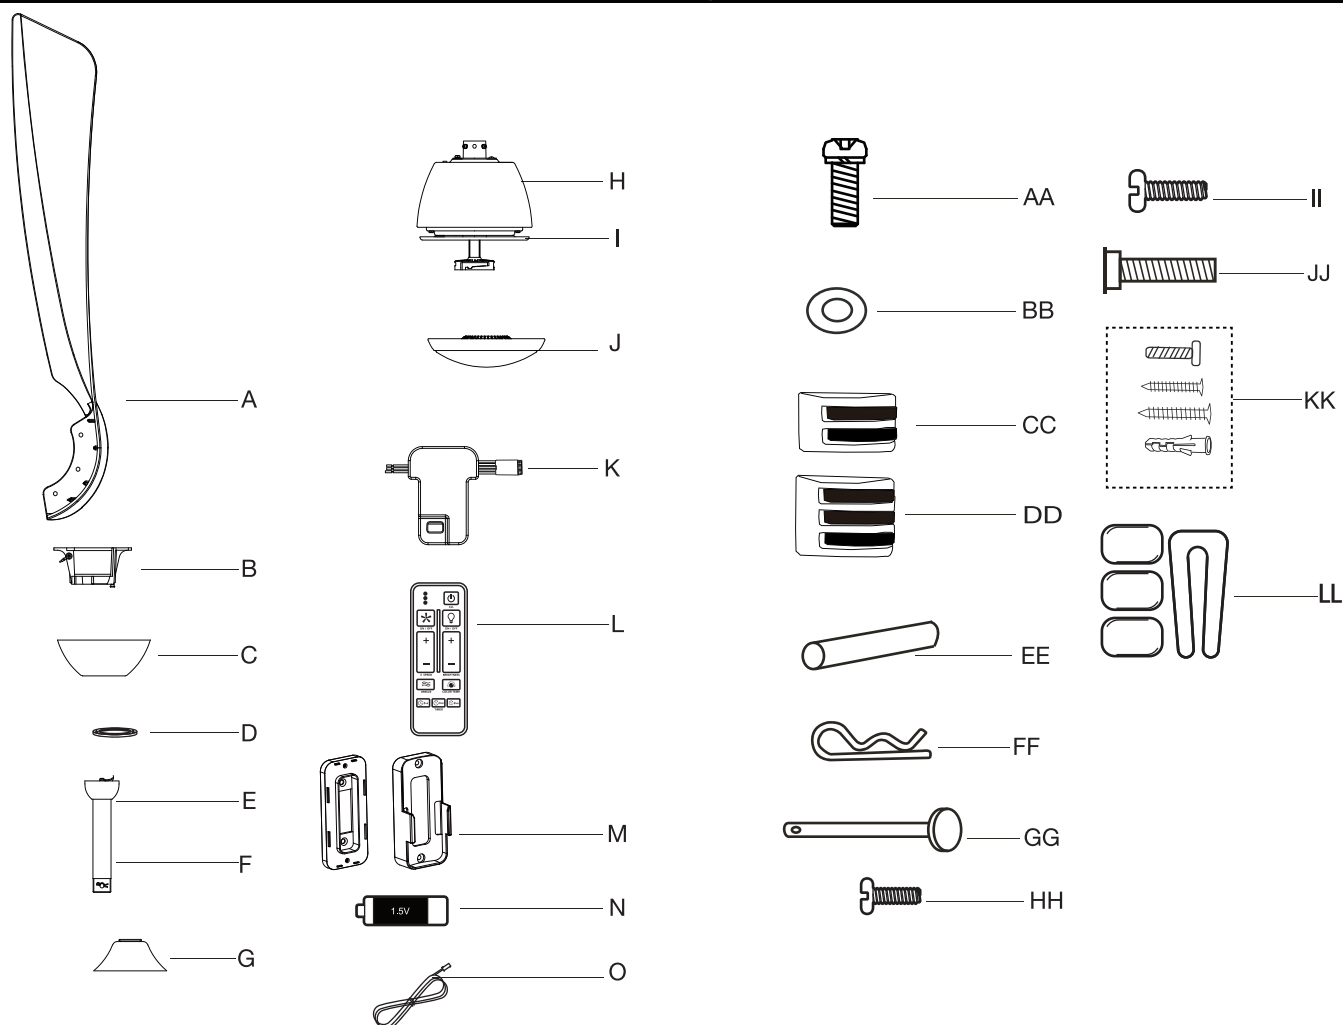

Part	Description
A	Blade
B	Mounting bracket
C	Canopy
D	Canopy cover
E	Hanger ball
F	Downrod
G	Coupling cover
H	Fan motor assembly
I	Flywheel
J	18W LED assembly
K	Receiver
L	Remote control
M	Remote control cradle
N	1.5V Battery
O	Extension power cord used for longer downrod (longer downrod not included)

Part	Description
AA	Blade screw
BB	Metal washer
CC	lever style quick connector (2P)
DD	lever style quick connector (3P)
EE	Cross pin
FF	Hitch pin
GG	Lock pin
HH	Hanger ball set screw
II	Fan motor assembly coupling set screw
JJ	Mounting bracket screw
KK	Remote control cradle hardware pack (ST3.5*13mm screw -2pcs, ST3.0*18mm screw-2pcs, #6/32*13mm screw-2pcs, anchor -2pcs)
LL	Balance kit (not to scale)

HAMPTON BAY®

Questions, problems, missing parts?
Before returning to the store, call Hubspace Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-592-5233

HOMEDEPOT.COM/HUBSPACE

Retain this manual for future use.

Supplier's Declaration of Conformity 47 CFR§2.1077 compliance Information

Unique Identifier

Trade name: HAMPTON BAY

Model Number: CF346KRD-01

Responsible Party-U.S Contact Information

Summer Wind International, LLC

1500 N. Western Boulevard,

Suite 260 Denton, TX 76207

Tel: 877-262-7511

FCC Compliance Statement: products subject to Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.