

SIZE:140X210mm



***6-SLICE(28L)
TOASTER OVEN***

***OWNER'S MANUAL
ER101004***

Visit our web site at "www.emersonradio.com"

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID MANUFACTURER'S WARRANTY.

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug or oven in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning appliance and putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Be sure to allow hot oil or liquids to cool before moving appliance.
12. To disconnect, turn any control to OFF (0) position, then remove plug from wall outlet.
13. Use extreme caution when removing baking pan or disposing of hot grease.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.
15. Oversize foods or metal utensils must not be inserted in a oven as they may create a fire or risk of electric shock.
16. A fire may occur if the oven is covered by, touching or near flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation, or before the appliance cools down.
17. Extreme caution should be exercised when using containers constructed of metal or glass.
18. Do not store any materials, other than manufacturer-recommended accessories, in this oven.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
20. Do not cover crumb tray or any part of oven with metal foil. This will cause overheating of oven.
21. To turn oven off, turn Timer to OFF (0) position.
22. Do not place eyes or face in close proximity with tempered safety glass door, in the event that the safety glass breaks.
23. Do not use appliance for other than intended use.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

IMPORTANT SAFEGUARDS

WARNING

Fire Hazard

- Do not use with oven cooking bags.
- Do not store any materials, other than recommended accessories, in this oven when not in use.
- Always allow at least one inch between food and heating element.
- Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
- Keep 2 to 4 inches away from wall or any objects on countertop.
- Close supervision is necessary when used by or near children.
- Always unplug toaster oven when not in use.
- Regular cleaning reduces risk of fire hazard.
- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.
- Failure to follow these instructions can result in death or fire.

Shock Hazard

 
- Do not immerse this appliance in water or other liquid.

CONSUMER SAFETY INFORMATION:

This appliance is intended for household use only.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the oven. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over. This appliance is equipped with a fully-tempered safety glass door. The tempered glass is four times stronger than ordinary glass and more resistant to breakage. Tempered glass can break, however it breaks into pieces with no sharp edges. Care must be taken to avoid scratching door surface or nicking edges. If the door has a scratch or nick, call our toll-free customer service number. Always unplug your oven from the outlet when not in use.

LOCATION OF CONTROLS

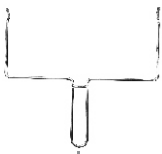

10



11

 


12


1. Door handle
2. Door glass
3. Rotisserie
4. Wire rack
5. Crumb tray
6. Display screen
7. Housing
8. Control panel
9. Front panel
10. Rotation bar holder
11. Crumb tray
12. Bake tray handle

OPERATION

LED DISPLAY:

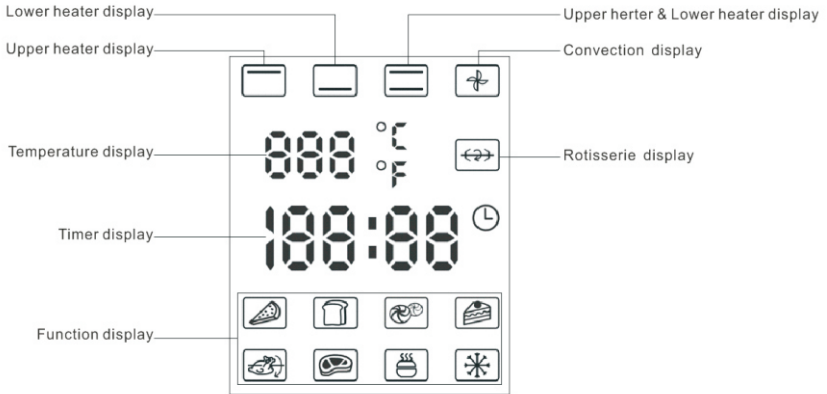

CONTROL PANEL:

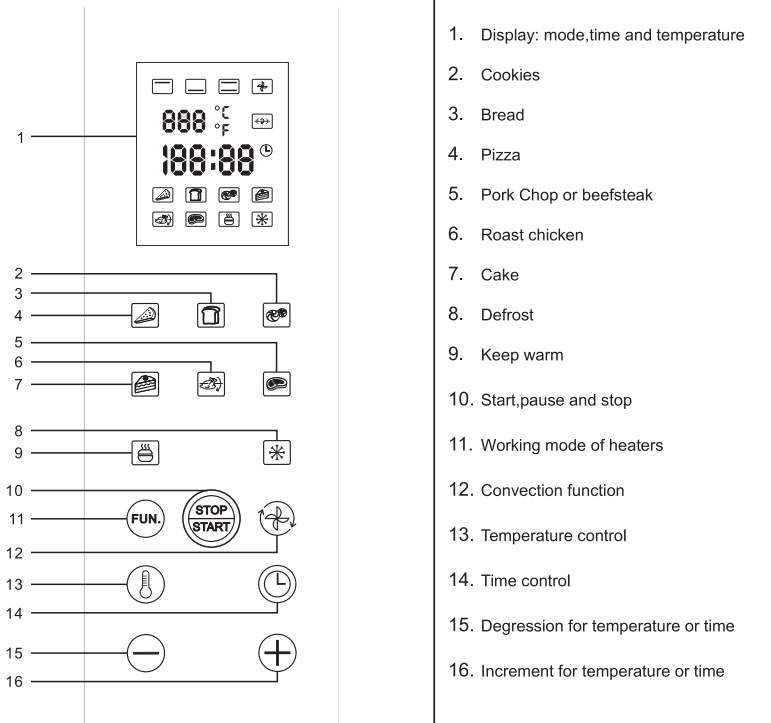 














OPERATION

PART 4: OPERATION GUIDE:

➤ 1. Choose the Default Programs:



 

When the power is on, the display will show the clock at 0:00 with blue color background.

- 1) Press the any symbol of below 8 programs, and press  key to start working.
- 2) Press  key again the oven pause and the background of the  key twinkle.
- 3) Press  key again, the program restart.
- 4) Press  key more than 3s, the program cancel.










Programs	Default time	Default temp.	Time adjustment	Temp. adjustment	Default working mode
	20Min	430°F	YES	YES	Up&down heaters, convection, inner lamp
	\	450°F	\	\	Up&down heaters, inner lamp
	20Min	300°F	YES	\	Up&down heaters, inner lamp
	60Min	340°F	YES	YES	Up&down heaters, inner lamp
	50Min	450°F	YES	YES	Up&down heaters, convection, rotisserie, inner lamp
	18Min	400°F	YES	YES	Up heaters, convection, inner lamp
	60Min	180°F	YES	\	down heaters, convection, inner lamp
	120Min	100°F	YES	\	Up heaters, convection, inner lamp

➤ 2. Choose the DIY mode

When the power is on, the display will show the clock at 0:00 with blue color background.







- 1) Press the  key to select the working mode for heaters:  /  /  ; the default time is 30:00 and default temperature is 300°F.

OPERATION

- 2) Press the  key to select the convection function, press again to cancel it. This key only work together with the  key.
- 3) Press the  key to start the adjustment for temperature, and then press “+”、“-”keys to adjust the time; the unit is 10°F for each press; when keep pressing “+”、“-”keys more than 2s, enter into the mode of Fast forward mode or Rewind mode in 2 units/s speed.
- 4) Press the  key to start the adjustment for time, and then press “+”、“-”keys to adjust the time; the unit is 1min for each press when below 30mins; when keep pressing “+”、“-”keys more than 2s, enter into the mode of Fast forward mode or Rewind mode in 2 units/s speed; the unit is 5min for each press when over 30mins; when keep pressing “+”、“-”keys more than 2s, enter into the mode of Fast forward mode or Rewind mode in 2 units/s speed. The adjustment range is 0~180mins.
- 5) After set up all the data, then press the  key to start working.
- 6) Press  key again the oven pause and the background of the  key twinkle.
- 7) Press  key again, the program restart.
- 8) Press  key more than 3s, the program cancel.

➤ **3.Standby mode:**

When the power is on, the display will show the clock at 0:00 with blue color background.

- 1) The left digit “0” will twinkle in the first 15s; during this 15s, press “+”、“-”keys to adjust the clock in hours; the unit is 1 hour for each press, it’s 24 hours system; press the  key again to enter the adjustment of clock in minutes by pressing “+”、“-”keys; the unit is 1 min for each press, it’s 60 minutes system. After set up the clock, press the  key to start the clock and the lamp of background will crush out in 20s; the oven will enter into standby mode.
- 2) If no operation in the first 15s, then the clock will start from 0:00 at once and the symbol “:” will twinkle; each twinkle of the symbol “:” means 1s; the oven will enter into standby mode.
- 3) During the standby mode, press any key could arouse the oven and the background lamp is on, it will automatic crush out in 20s without further operation.
- 4) During the standby mode, press  key and use “+”、“-”keys to adjust the clock again.
- 5) During the standby mode, press any symbol of 8 default programs or  key to enter the set up of working mode.
- 6) During the standby mode, press  key or  key or “+”、“-”keys, just arouse the background lamp of display only, without buzzer and any action.

OPERATION**WARNING: FIRE HAZARD**

If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.

FOR TOAST

1. Place oven rack on higher track inside the unit. Place food item on rack.
2. Rotate temperature control knob to TOAST.
3. Rotate timer control knob past 10 and then back to desired toast color. A bell will sound when the toast cycle is complete.
4. When finished, rotate timer control knob to OFF and unplug.

Caution: Remove with care as food is HOT.

FOR BAKING

1. Do not use oven cooking bags for baking as this can cause a fire hazard.
2. Always allow at least 1 inch between food and heating element to reduce the risk of fire.
3. Always unplug toaster oven when not in use.
4. Place oven rack in lower track inside unit or use baking pan.
5. Rotate temperature control knob to desired temperature.
6. Set timer control knob to warm. Allow unit to preheat for 4-5 minutes prior to placing food in oven.
7. When ready to bake, rotate timer control knob to a desired time. To set time, rotate timer past 10 before setting any time below 10 minutes.
8. When finished, rotate timer control knob to OFF and unplug.

TOASTING TIPS

- To toast bagels or English muffins, place bread cut-side down. This will toast the cut side more than the outside. English muffins may need a darker setting than regular bread to achieve the same color.
- To toast frozen pastry or waffles, select a light color and toast directly on oven rack. If pastry has a glaze or frosting, use baking pan to prevent dripping.
- When toasting, condensation may form on oven door.
- At the end of the toast cycle, remove toast immediately or the heat remaining in the oven will dry out your food.

TROUBLESHOOTING

The oven will not heat.

Check to make sure the AC cord is plugged in, the oven's TEMPERATURE knob is set to a temperature and the FUNCTION knob is set to one of the cook positions.

An odor and smoke comes from the oven.

Smoke and odor is normal during the first use and should not be present after the initial heating period.

Some foods burn and some are not done.

Use oven rack position to center food in the oven. Adjust oven temperature or cooking time for best results with your recipes.

CARE AND CLEANING

Always unplug the oven and allow it to cool before cleaning. This unit has been designed and engineered with your safety in mind. To assure maximum safe operation, keep unit clean, free of grease and free of build-up of food particles. Do not clean interior cavity of your oven with metal scouring pads. Pieces can break off and touch electrical parts, creating risk of electrical shock. To clean the glass door, use a glass cleaner or a damp cloth. Wipe dry with a clean cloth. To clean the exterior finish, use a damp, sudsy cloth. For stubborn stains, a non-abrasive liquid cleaner or spray glass cleaner may be used. Do not use metal scouring pads, as they might mar the finish. Always remove cleaning agents by polishing with a dry cloth. Slide the crumb tray out from under the bottom of the oven. Wash by hand. Should the soilage be difficult to remove, rinse the crumb tray with hot soapy water and if necessary, scour it delicately, without scratching it.

SPECIFICATIONS

Item	Rating Specification
Power Supply	120V~60Hz
Power Consumption	1600W
Output Power	1600W
Oven Capacity	1 cubic feet
Outside Dimensions	20.0(W)*15.1(D)*12.1(H)inches (507*385*308mm)
Weight	13.2Lbs (6kg)Approx.

BEFORE YOU CALL FOR SERVICE

Refer to the following checklist before you call for service.

If the oven does not work:

1. Check that the power cord is securely plugged in.
2. Check that the door is firmly closed.
3. Check that the cooking time is set.
4. Check for a blown circuit fuse or tripped main circuit breaker in your house.



◆◆◆◆◆ SERVICE ◆◆◆◆◆

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:

1-800-898-9020 OR 1-800-695-0098

FOR CUSTOMER SERVICE, PLEASE E-MAIL TO:
internet@emersonradio.com

OR WRITE TO:
Emerson Radio Corp.
Consumer Affairs Dept.
3 University Plaza
Suite 405
Hackensack, NJ 07601

LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of one (1) year from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility, provided the manufacturing defect is verified along with the date of purchase:

- * Repair service for one (1) year from date of original purchase at no charge for labor and parts.
- * Replacement of a defective magnetron for seven (7) years from date of original purchase (labor not included after initial twelve (12) months).

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- * Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- * Enclose your check or money order payable to Emerson Radio in the amount of \$15 to cover return shipping and handling costs.
- * Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
- * Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- * Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE: This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Products not purchased in the United States.
- (f) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

15-01-1402M

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference.

Model Number: _____

Serial Number: _____

EN



EMERSON
PART NO.: ER101004-20170417-00

Printed in China