
USE AND CARE GUIDE

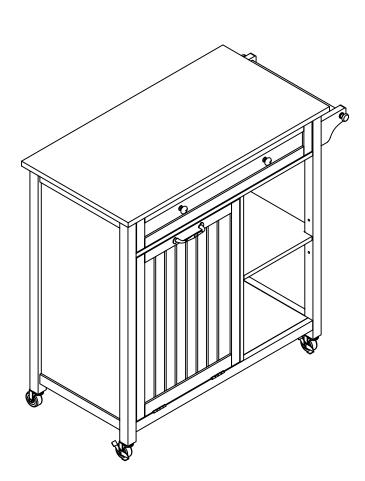

Questions, problems, missing parts? Before returning to the store, call Customer Service. 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this ******. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	3
1 Year Warranty	
What is Covered	3
What is Not Covered	3
Pre-assembly	4
Planning Assembly	

Tools Required	4
Hardware Included	
Pre-assembly (continued)	5
Package Contents	
Assembly Note	
Touble Shooting	6
Assembly	7

Safety Information

- □ Keep small parts away from children during assembly.
- □ Read and follow instructions carefully.

- $\hfill\square$ Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- □ Adult assembly required.
- □ Small parts may present choking hazard prior to assembly.



NOTE: If you are unsure about your wall type or what mounting method you should use, consult a qualified professional.

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- $\hfill\square$ This product should only be used on a flat, level surface.
- Product is designed to hold 119 pounds. Exceeding this limit may damage the product or cause injury to the user.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

 
This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly


PLANNING ASSEMBLY

Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

TOOLS REQUIRED



HARDWARE INCLUDED

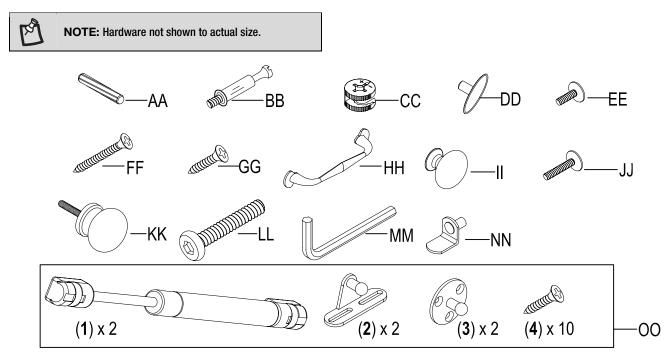


Part	Description	Quantity
AA	Wood dowel	26
BB	Cam lock bolt	39
CC	Cam lock	39
DD	Plastic cover	10
EE	1/2 in. Knob bolt	2
FF	1 in. Flat head screw	13
GG	1/2 in. Flat head screw	4
HH	Handle	1

Part	Description	Quantity
I	Knob	2
JJ	3/4 in. Handle bolt	2
KK	Knob for towel rack	2
LL	1-3/4 in. bolt	4
MM	Wrench	1
NN	Shelf support	4
00	Support	2

Pre-assembly (continued)

PACKAGE CONTENTS

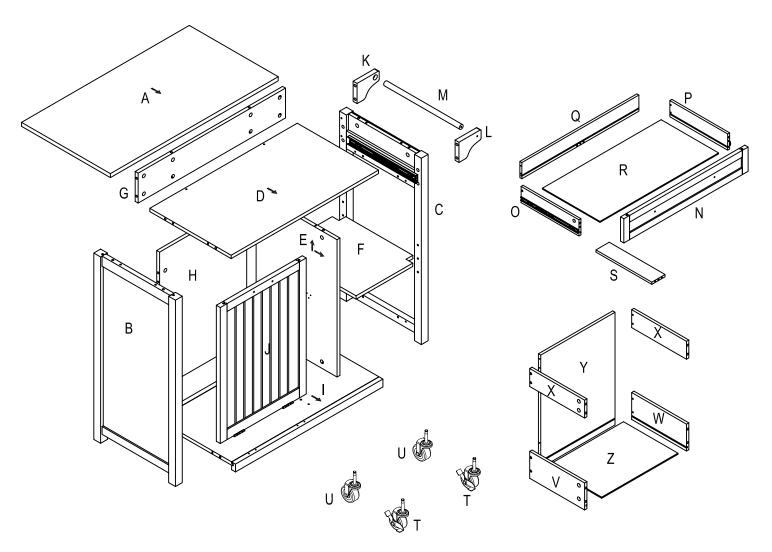


Part	Description	Quantity
Α	Top panel	1
В	Left side panel	1
C	Right side panel	1
D	Fixed panel	1
E	Partition	1
F	Adjustable shelf	1
G	Up back panel	1
Н	Bottom back panel	1
I	Bottom panel	1
J	Bottom drawer front panel	1
К	Right side towel rack	1
L	Left side towel rack	1
М	Towel rack bar	1

Part	Description	Quantity
Ν	Top drawer front panel	1
0	Top drawer left side panel	1
Р	Top drawer right side panel	1
Q	Top drawer back panel	1
R	Top drawer bottom panel	1
S	Support bar	1
Т	Universal wheel with brake	2
U	Universal wheel	2
V	Bottom drawer left side panel	1
W	Bottom drawer right side panel	1
Х	Bottom drawer support panel	2
Y	Bottom drawer back panel	1
Z	Bottom drawer bottom panel	1

Pre-assembly (continued)


ASSEMBLY NOTE

Upon opening, thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish during shipment. In order to prevent damage during assembly, Please assemble this item with at least two people.

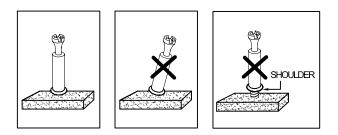

NOTE: Turn the cam-bolt screws until they are tight, the shoulder should be against the surface of the part.

HOW TO USE THE CAM-TOOL

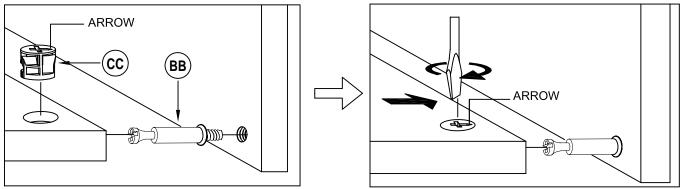

NOTE: The arrows on the hidden cam-locks should point to the cam-bolts.


TROUBLE SHOOTING

PROBLEMS	SOLUTIONS		
	Make sure adjustable center feet levelers are adjusted properly. The levelers are pre assembled on the bottom of the legs.		
Not all of the product's legs touch the floor	The product is KD construction. You may need to loosen the bolts and place the product on a flat surface. Ensure that the legs all touch the flat surface and then re-tighten the bolts.		
	Loosen all the bolts and apply some weight to the product to get all the feet to touch the floor. Then re-tighten the bolts in that position.		
Panel cannot be assembled	Make sure panel is on right direction.		
Door cannot be closed or without magnetic function	Adjust the magnetic clamp make sure it is assembled on appropriate position.		
Door is not flat	Adjust the magnetic clamp make sure it is assembled on appropriate position.		
Drawers cannot pull in or Pull out smoothly	Refer assembly instruction details to assemble drawers, and pull in and pull out drawers several times gently.		
Drawer cannot be removed	When removing the drawer, tip-up the safety release tab to remove the drawer from the body.		
	Check if drawer two side boards are assembled backwards.		
Drawer cannot be assembled	According to drawer assembly instruction step, Check if drawer two side boards are assembled backwards.		


Assembly

1 Attaching the partition to the bottom panel

a) Install bolt (BB) into panel (I).

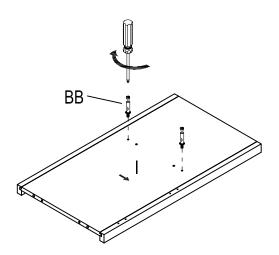

d) Join partition (E) to the panel (I) with dowel (AA).

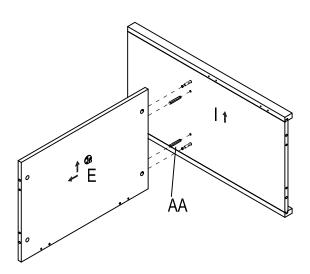


- e) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.
- b) Insert lock (CC) into partition (E). c)Attach support member (00-3) to partition (E) with screw (00-4) as shown. B 00-(4) 00-(3) UNLOCK LOCK ~Е CC Wood dowel Large head Cam lock bolt Cam lock Support Small head (**3**) x 1 (**4**) x 3 (AA) x 2 (**BB**) x 2 (**CC**) x 2 ATTACTOR 00

HOMEDEPOT.COM Please contact 1-877-527-0313 for further assistance.


7

$\mathbf{2}$ Attaching the bottom back panel


a) Install bolt (BB) into partition (E).

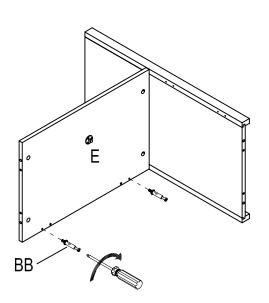


c) Join panel (H) to the partition (E) with dowel (AA).

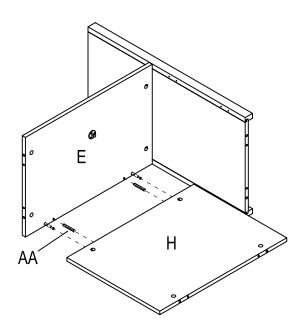


d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

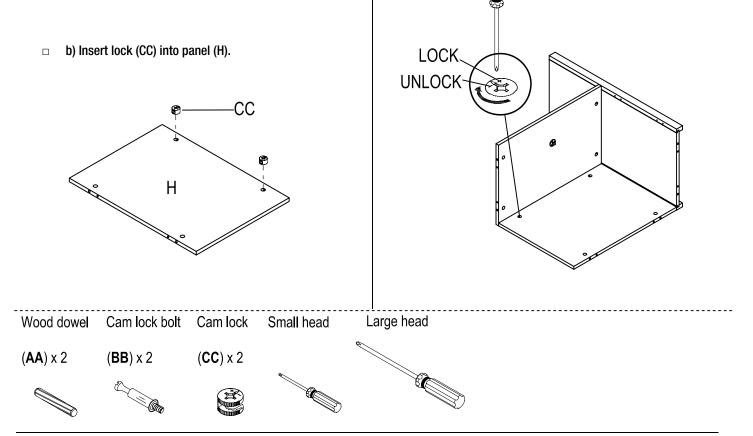


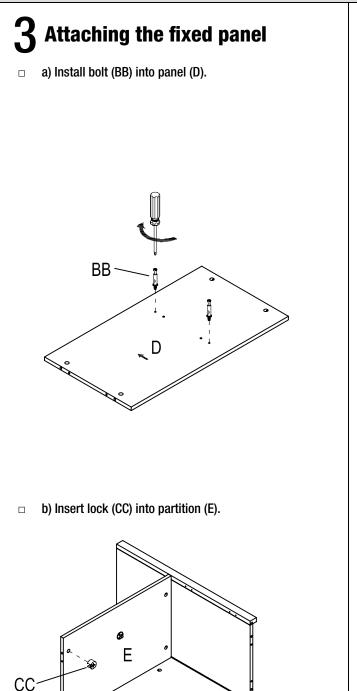

 $\hfill\square$ c) Join panel (D) to the partition (E) with dowel (AA).

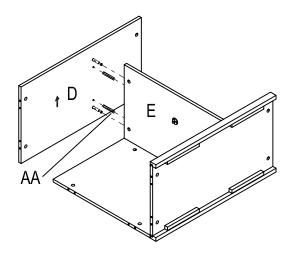


d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

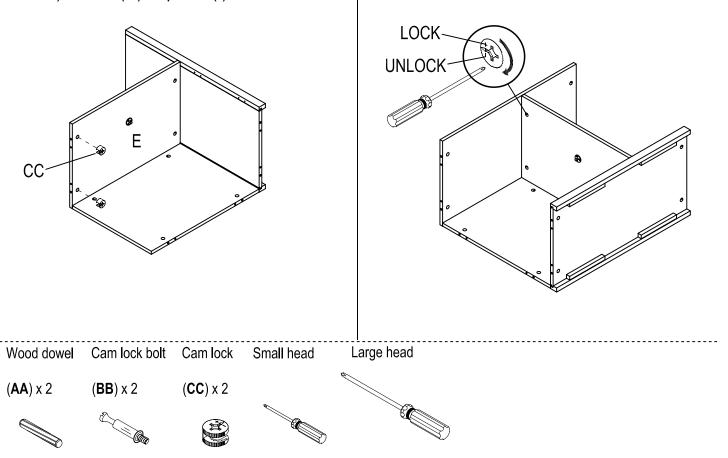


4 Attaching the up back panel


a) Install bolt (BB) into panel (D).

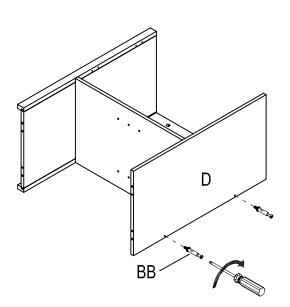

□ c) Join panel (G) to the panel (D) with bolt (BB).

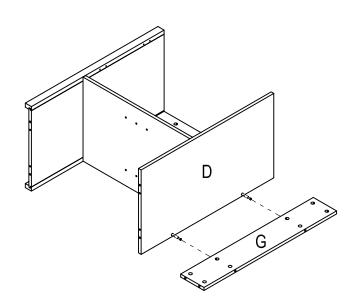


 $\hfill\square$ d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

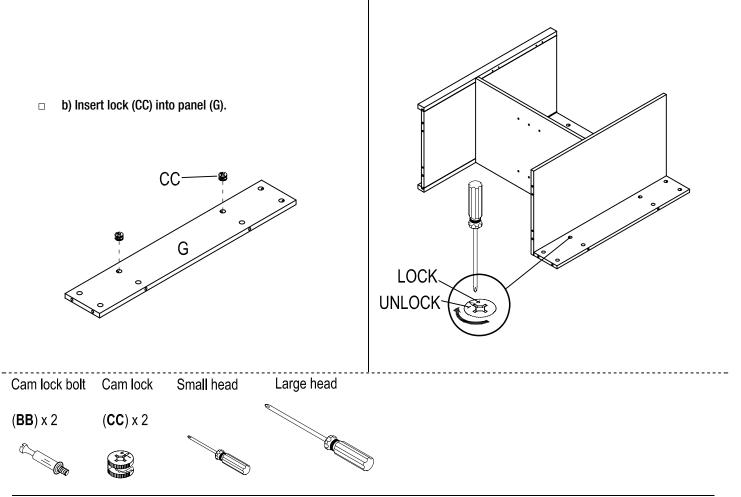


$\mathbf{5}$ Attaching the left side panel


- a) Install bolt (BB) into panel (B).
- b)Attach support member (00-3) to panel (B) with screw (00-4) as shown.

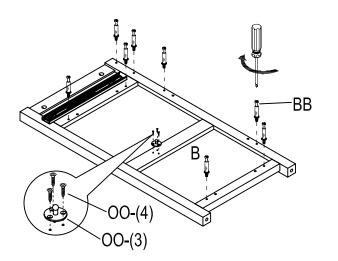

d) Join panel (B) to the assembled body with dowel (AA).

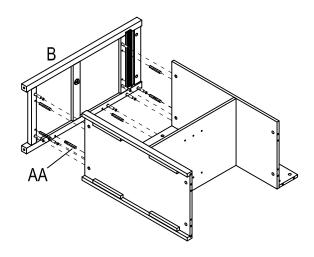


- $\hfill\square$ e) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.
- $\hfill\square$ \hfill c) Insert lock (CC) into panels (D), (G), (H) and (I).

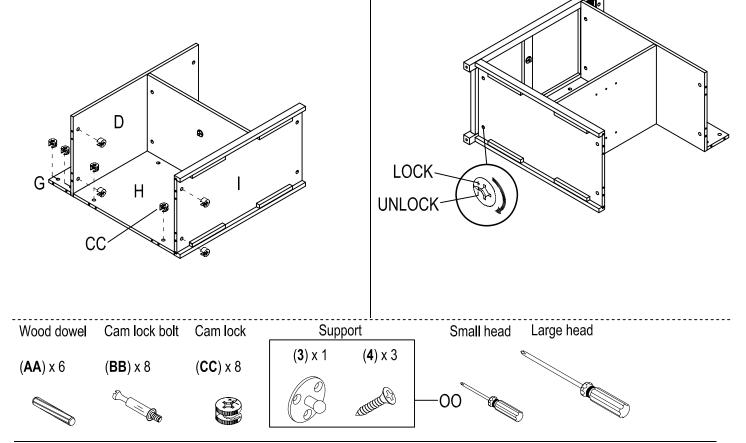


$\boldsymbol{6}$ Attaching the towel rack

  $\hfill\square$ a) Join towel rack side panels (L) and (K) to the towel bar (M).




b) Attach towel rack side panels (L) and (K) to the panel (C) with bolt (LL). Turn and tighten bolt (LL) with wrench (MM).

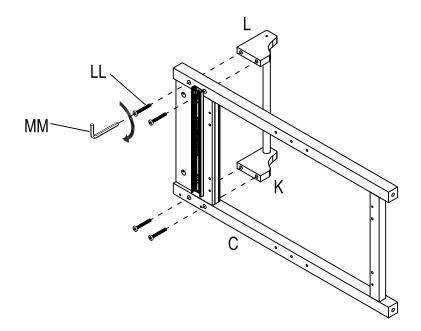

1-3/4in. bolt	Wrench
(LL) x 4	(MM) x 1


$\mathbf{7}$ Attaching the right side panel

a) Install bolt (BB) into panel (C).

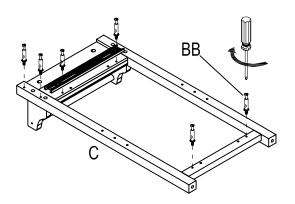


 $\hfill\square$ b) Insert lock (CC) into panels (D), (G), and (I).

 $\hfill\square$ c) Join panel (C) to the assembled body with dowel (AA).

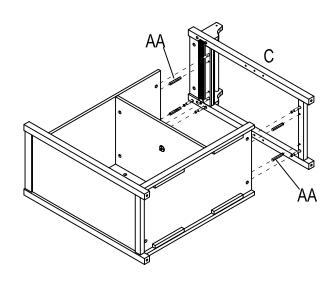


 $\hfill\square$ d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

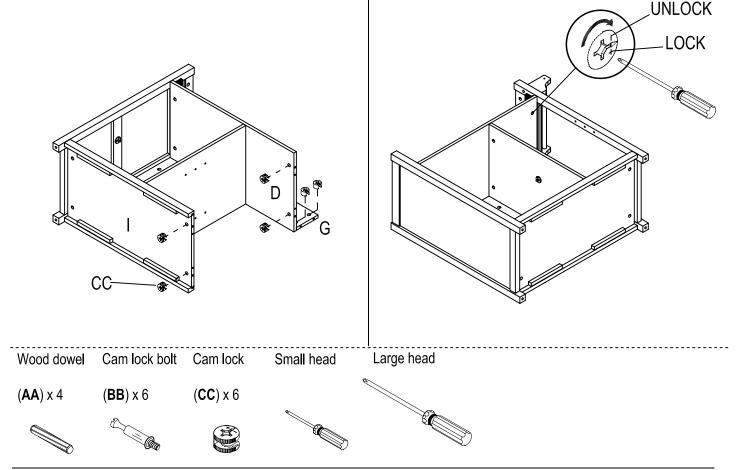



Assembling the universal wheel

 $\hfill\square$ Insert wheels (T) and (U) into panels (B) and (C) as shown.

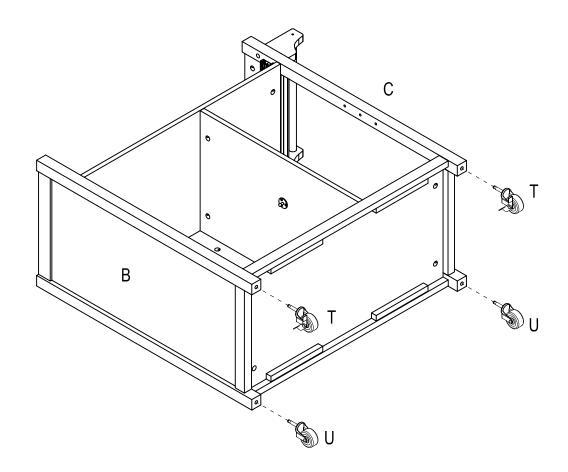

a) Install bolt (BB) into panel (A).


Attaching the top panel

g

CC-

Wood dowel

(**AA**) x 4

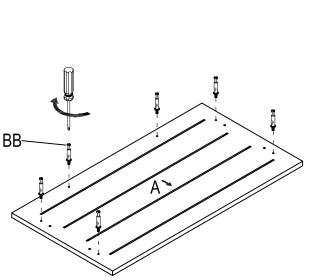

c) Insert lock (CC) into panels (B), (C) and (G).

8


<u>~</u>@

В

Cam lock bolt


(**BB**) x 6

- c) Join panel (A) to the assembled body with dowel (AA).
- d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

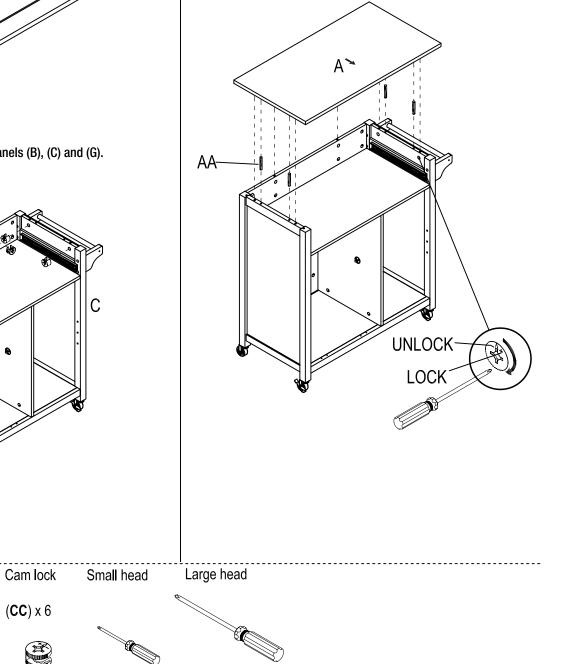

Assembling the adjustable shelf

- a) Turn and tighten knob (KK) to the towel rack side panels.
- **b)** Insert shelf supports (NN) in desired positions and place shelf (F) on the supports.

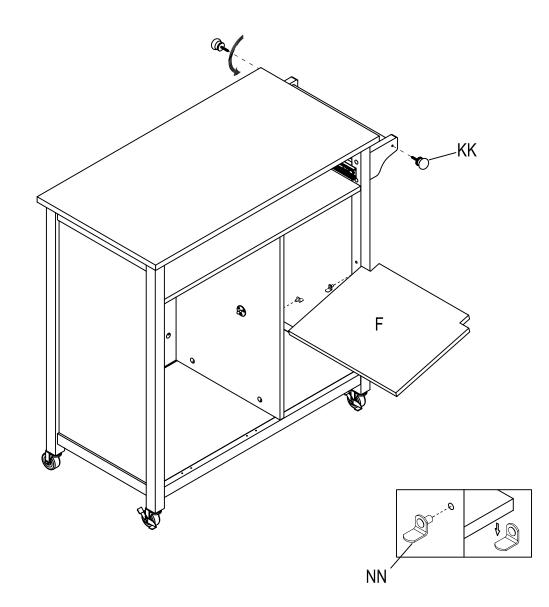


Shelf support	Knob for towel rack	 	
(NN) × 4	(KK) x 2		
R			


11 Attaching the bottom drawer front panel

a) Install bolt (BB) into panel (J).


b)Attach support member (00-2) to panel (J) with screw (00-4) as shown.

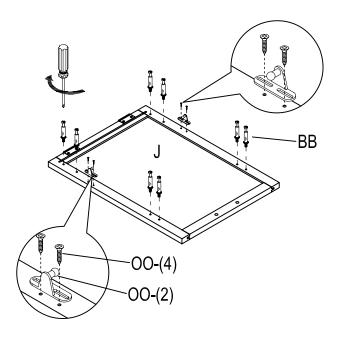

c) Attach panel (J) to the assembled body with screw (GG) as shown.

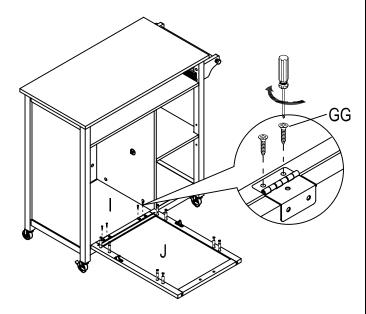


□ d) Insert lock (CC) into panels (V), (W) and (X).

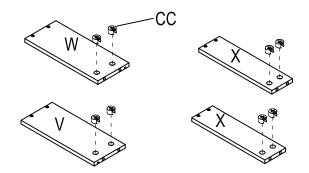


 $\hfill\square$ e) Join panels (V), (W) and (X) to the panel (J) with bolt (BB).

Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

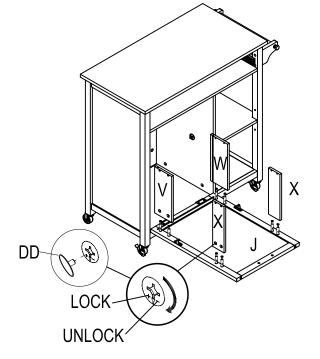


 $\hfill\square$ f) Cover the cam holes with the cover (DD).

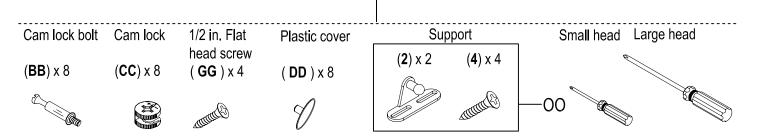

$\mathbf{2}$ Attaching the support

- a) Slide panel (Z) into the grooves on panels (V) and (W).
- b) Tighten handle (HH) to panel (J) with bolt (JJ).

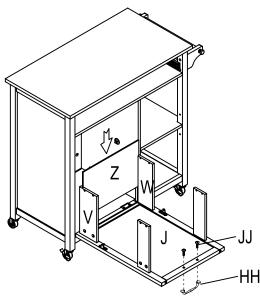

c) Tighten panel (Y) to the assembled body with screw (FF).

Y

FF-

Handle


(**HH**) x 1

3/4 in. Handle bolt

(JJ) x 2


CULLE

d) Join the both ends with the middle part of the support (00-1).

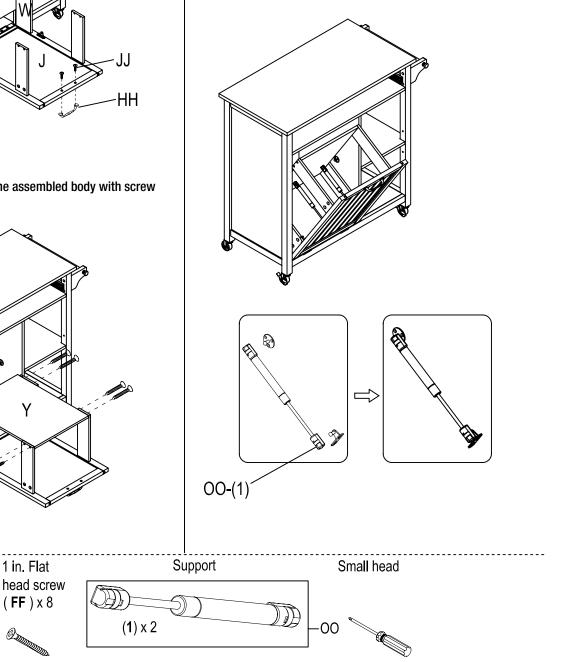


13 Assembling the drawer


 \square a) Install bolt (BB) into panel (N).

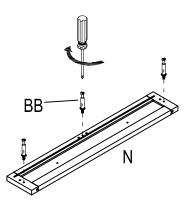


□ b) Insert lock (CC) into panels (0), (P) and bar (S).

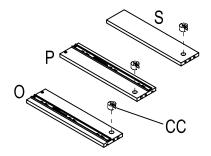


□ c) Join panels (0), (P) and bar (S) to panel (N) with dowel (AA).

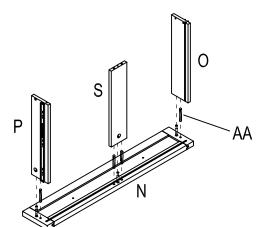


d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.
 Slide panel (R) into the grooves on panels (0) and (P).

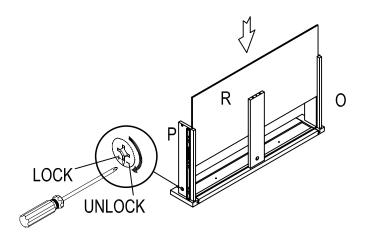


• e) Tighten panel (Q) to the assembled body with screw (FF) and dowel (AA).

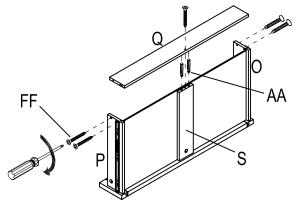

□ f) Tighten knob (II) to panel (N) with bolt (EE).

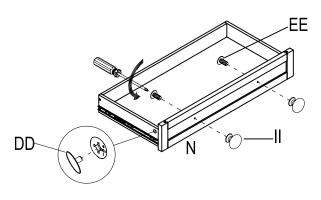

 \Box g) Cover the cam holes with the cover (DD).

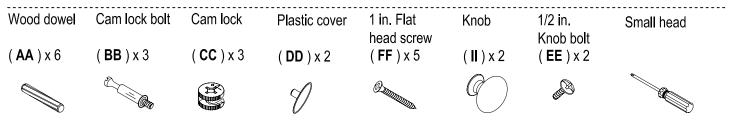


HOMEDEPOT.COM Please contact 1-877-527-0313 for further assistance.



Finalizing the assembly

Insert the drawer into the assembled body as shown.

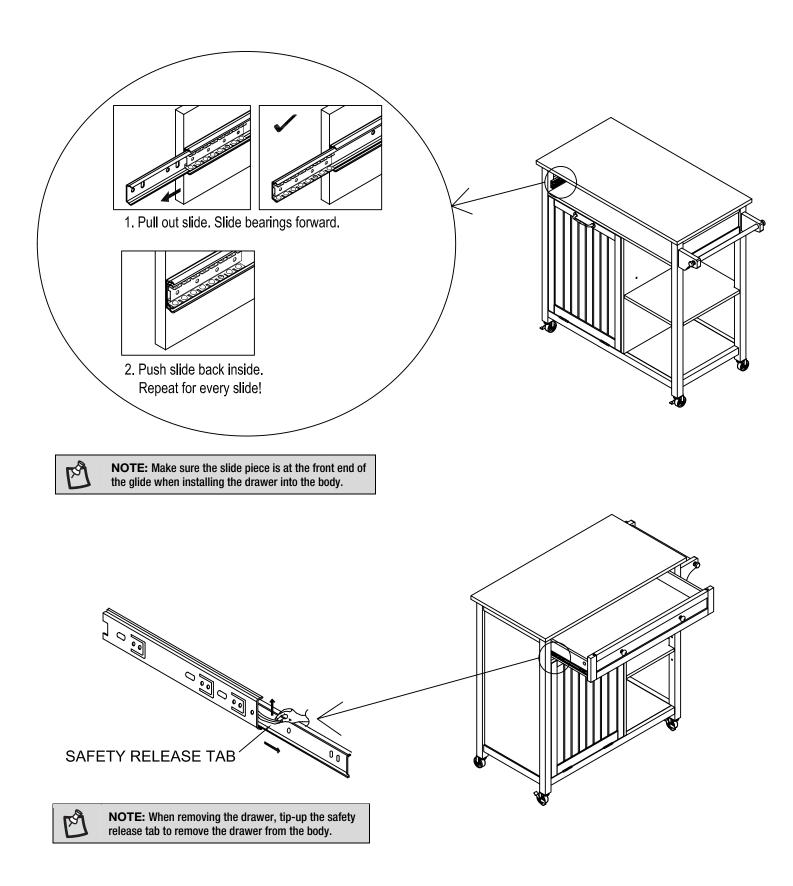

StyleWell.

Questions, problems, missing parts? Before returning to the store, call Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.