



LED Animated Outdoor Lightshow Tree


Indoor / Outdoor 14 Repeated Light Show Animations

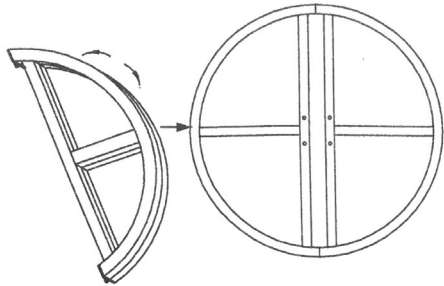


- 1 Expand the light show tree base.

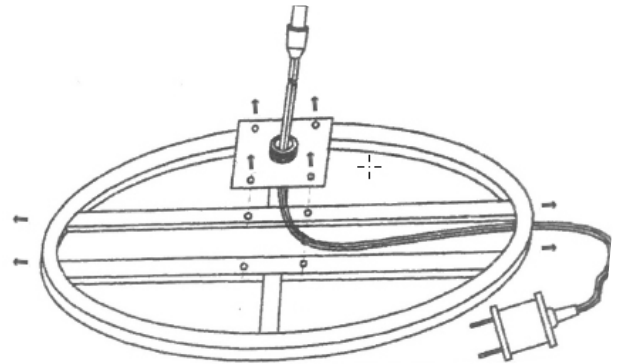

- 2 Affix the square metal plate to the base with the included bolts. Insert bolts at both sides of the base to secure the base. (Note: bolts used vary by model)

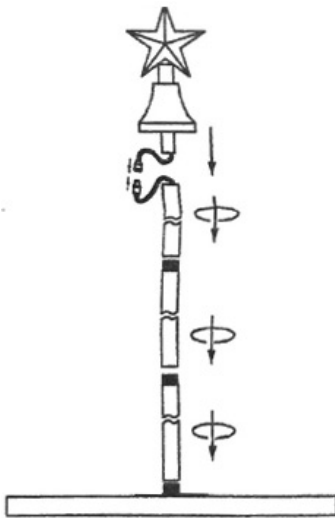


- 3 Screw the lower tube to the base. Then screw the next tube into the lower tube and repeat as needed. The power cord is pre-threaded through the tubes. Connect the star plug to the tube plug. **Twist the plug ends to lock them together.**

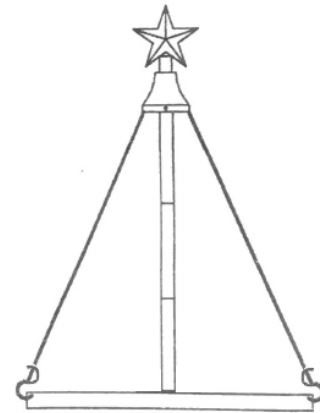

- 4 Insert the star top. Then remove the twist tie from a strand of lights and hook the strand to one of the pre-drilled holes in the base using the included S-hooks. Repeat this process for each strand and attach the strands around the base.

TIP: By only undoing one strand at a time, it reduces the likelihood of strands tangling, which saves time. Keep the twist ties and use them again when you store the tree.

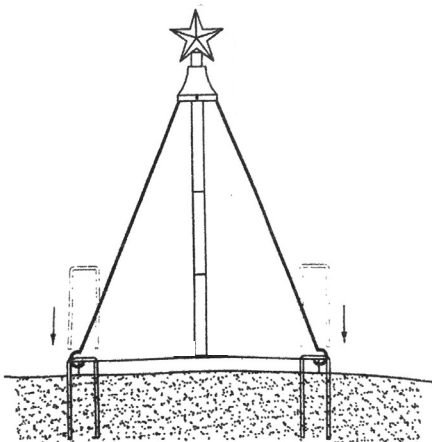

- 5 Outdoor: Affix the light show tree base frame to the ground using ground stakes.

Wintergreen[®]
LIGHTING