ASSEMBLY INSTRUCTIONS FOR LIGHTED TREE

Caution: Carefully Read Instructions and Procedures for Safe Operation

MODEL L302

UNPACKING, ASSEMBLY and SHAPING

- 1) Before you start to assemble your tree, choose a location near a wall outlet.
- 2) Carefully remove contents from the carton. Contents will include:
 - 1) Tree Top- Section A
 - 2) Middle Tree- Sections B
 - 3) Bottom Tree-Section C
 - 4) Tree Stand
 - 5) Extra Bulbs/Fuses

DO NOT DISCARD CARTON! Use for Tree Storage.

CAUTION: MAKE SURE ALL LIGHT WIRES & HANDS ARE CLEAR OF BRANCH HINGES.

- 3) Insert the bottom tree section into the stand body. Allow the branches to fall into place or gently pull them out and down.
- 4) Insert tapered end of middle tree section pole into the bottom tree section pole. Allow the branches to fall into place or gently pull them out and down.
- Now locate the attached extension cord and drop it through the bottom of the tree and plug the bottom section light set into the extension cord and plug it into the wall.
- *** If your tree has more than one extension cord, make ALL extension cords plug into the WALL OUTLET***
- 5) Place the tree top into the middle tree section pole. Plug in the light set from the tree top section into the extension cord.
 - CAUTION: MAKE SURE ALL LIGHT WIRES & HANDS ARE CLEAR OF BRANCH HINGES.
- 6) Your entire tree should now be lit. If some bulbs do not light, search for any broken or loose plugs or missing bulbs.
- 7) Keep tree plugged in while shaping your tree. Should a light flicker while doing this, check for the bulb that may have caused the trouble.
- 8) Begin to shape the branches working from the bottom to the top. Start with tips farthest from the pole, one to the right, one to the left, and one at the center of the main stem.
- 9) After shaping the whole tree following the previous steps, step back and take an overall look at the tree. Shift branches to fill any gaps. Slightly up sweep all branch tips for a uniform look. Your tree is now ready to decorate and enjoy.

DISASSEMBLY and STORAGE

- 1) Unplug extension cord(s) from wall outlet.
- 2) Unplug the tree sections from the extension cord(s). Keep stacks plugged together.
- 3) Gently lift off each tree section from top to bottom. Remove the stand from the bottom section.
- 4) Carefully place the tree sections back in the storage carton and tape it shut. Store carton in a cool, dry place where the temperature does not exceed 100 degrees Fahrenheit.

2-05 084-120059

CUSTOMER AID FOR CHRISTMAS TREES

For any questions, comments, problems or missing parts, do not return to place of purchase. Please call General Foam Plastics at 1-800-813-0206 and ask for the Product Service Dept. between the hours of 8:00 AM and 5:00 PM, Mon - FrI Eastern Standard Time. Or try our web site at www.genfoam.com

