

Installation Guide – Watering Wand (16 in., 8■Pattern)

Product Overview

- Heavy-duty 16 in. metal watering wand with 8 spray patterns.
- Full-metal body & trigger; rubberized bezel for impact resistance.
- Fits standard USA 3/4 in. garden hoses; no adapter required.
- Dual water control: trigger and thumb ON/OFF slider.

What's Included

- Watering wand with ergonomic pistol grip
- Pre-installed standard hose gasket (inside the inlet)

Tools Required

- None. Hand-tighten only.

Installation & Setup

- Turn off your water spigot.
- Inspect the hose gasket inside the wand's inlet; seat properly.
- Thread the wand onto a 3/4 in. garden hose by hand. Do not use pliers.
- Tighten until snug; avoid over■tightening.
- Set the thumb ON/OFF control to OFF before opening the spigot.
- Open the spigot slowly; check for leaks. If leaking, re-seat/replace gasket.

How to Use

- Select a spray pattern by rotating the bezel dial.
- Adjust pressure with the flow-control knob to suit the task.
- Start or stop water by squeezing/releasing the trigger or sliding the ON/OFF control.
- Use the hold-open clip for continuous flow to reduce hand fatigue.
- Recommended uses: hanging baskets, shrubs, lawns, car/patio wash, pet rinse.

Safety & Care

- Do not exceed household water pressure.
- Do not connect to hot water.
- After each use, shut off the spigot first, release pressure, then set control to OFF.
- Store indoors when freezing temperatures are expected.
- Rinse debris from spray head; occasionally lubricate trigger pivot with a drop of light oil.
- Replace the hose gasket if drips occur at the inlet.

Troubleshooting

- Leaking at hose connection → check/replace gasket; hand-tighten firmly.
- Weak spray → ensure spigot fully open; clean any clogged spray ports.
- Trigger hard to press → inspect for debris; apply a drop of light oil to pivot.