


NOTICE:

1. When gas leaks from its container, do not pull the plug, out or in, for it may arouse sparks and fire calamities.
2. Do not splash water on the rear of the appliance, for it may cause malfunction or electric shock.
3. Do not store inflammabe materials such as ether, benzene, LP gas and glue etc in the refrigtherator.
4. Do not place bottled beverage in the freezer, so as to prevent breaking.
5. It is recommended not to place object on the top of appliance which is magnetic, heavy, or be filled with water. Electronic components may not work steadily if water gets inside. Do not store object which is costly or impressible to temperature and , e.g. serum, bacterin and so on.
6. The refrigerant of this product is R600a, which is inflammable. So, be cautious not to damage the cooling system during the transportation and installation.
7. DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



INSTALLATION INSTRUCTIONS

1. The refrigerator should be located in a completely flat surface, leave 5-10 cm between each side of the appliance and the wall, and leave 30 cm between the top of the appliance and the ceiling.
2. Choose a location which is not exposed to sunlight, high temperature or humid, as humidity may cause stain.
3. Pull out the bottom panel before installation.
4. The appliance can be adjusted by switching its two legs in the front of the bottom panel when it is unstable. Switching them in the clockwise direction can rise up the maching.
5. The location should be firm and flat. An un-securely position may cause noise and libration:
(a) The noise may be increased if the floor is not firm.
(b) Put a sheet under the appliance to solve the heat emission if you need to locate it onto a carpet.
6. Make sure the adjustable legs are clung to the floor, and set the appliance slope backward slightly to keep the doors closed tightly.

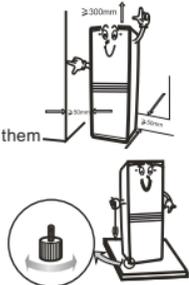

REVERSING THE DOOR

You can choose to open your refrigerator by the right side or the left side. To change the way of opening, please follow the instructions below.

Important safety warning: before doing so please unplug and disconnect the appliance


In addition to the accessories packed, you will need:

Medium-sized cross screwdriver

Small screwdriver

A solid line



1. First, check to make sure the power is disconnected.
2. Open the upper door, and close the bottom door.

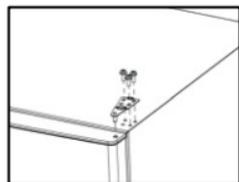

3. Remove the protective covers with a Phillips screwdriver through the back side, and save the protective covers.
4. Remove the 3 shelf-tapping screws, and save them.
5. Push the top hinge forward, remove the door and save it aside.




6. Pry off and remove the cover over the screw holes on the left side of refrigerator housing. Attach cover on the right side. Cover is force-fitted.

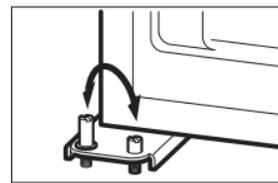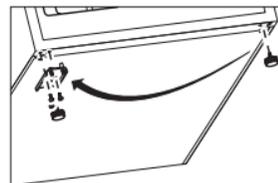


7. Push the machine slightly backward against the wall.
8. Disassemble the 2 fixed stands.
9. Disassemble the bottom hinge.
10. Assemble the bottom hinge on the other side of the machine.
11. Assemble the stands.
12. Exchange the 2 bolts and fix them on the other side.



INSTALL THE HANDLES

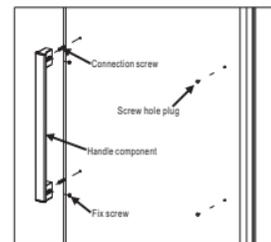

1. Use allen wrench to loose the fix screw and take out the handle component.
2. Twist out connection screw
3. Use card lift up screw hole plug and take it out.

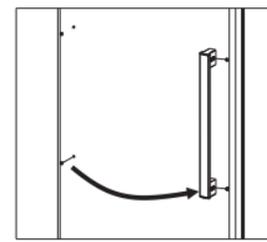

4. Install the handle component on the right side.
5. Stick screw hole plug into the left screw hole.