

Wooden Jungle Gym

USER MANUAL



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

SAFETY & CARE

 
- ADULT assembly required!
- Never place product on an elevated surface.
- Children must not use this product until assembly is completed.
- Always place product on a flat, level surface. NEVER place near stairs.
- This product should only be used under adult supervision.
- This product is intended for indoor, domestic use only. It is not suitable for commercial or medical use.
- DISPOSAL OF PACKAGING: Make sure to throw away all packaging materials. They are not to be used as toys.
- NEVER use this product if there are any loose or missing fasteners, loose joints or broken parts. Check after assembly.
- Adults should check all screws weekly or if the product gets loose and or wobbly, then tighten. If product continues to be not sturdy, then stop and do not use.
- Cleaning - using a damp cloth, use mild liquid dish soap to wipe clean product. You may want to clean the under side first to make sure you are not damaging the finish.

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.




①×1 46.7in




⑦×4 43in



 ②×1 48in



⑧×1 46.7in

 

③×1 48in



⑨×1 48in



④×1 46.7in



⑩×1 48in



 
⑤×3 29in



⑥×2 14.2in




⑪×1 46.7in



⑫×2 43.8in



 
⑮×2 42.5in

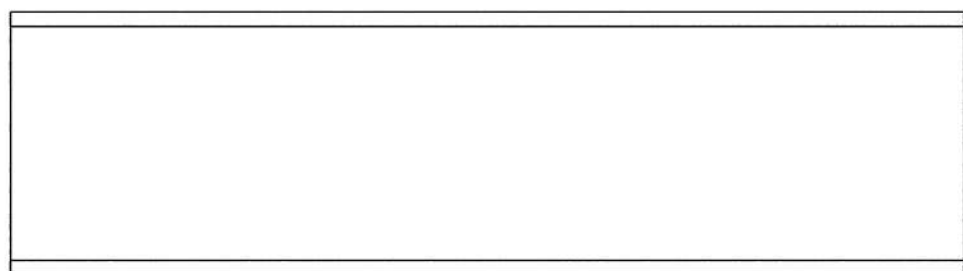


⑭×1 47.2in



 
⑬×9 15.4in

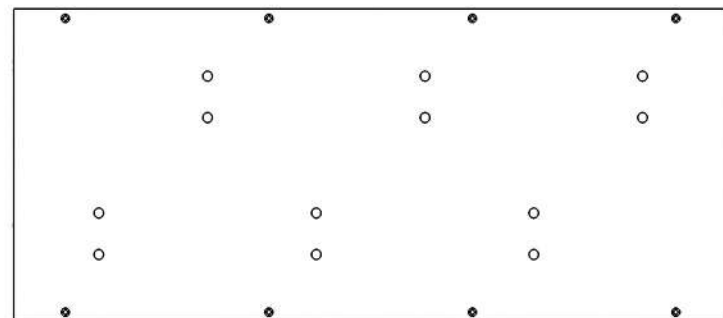

⑯×1 35.4in

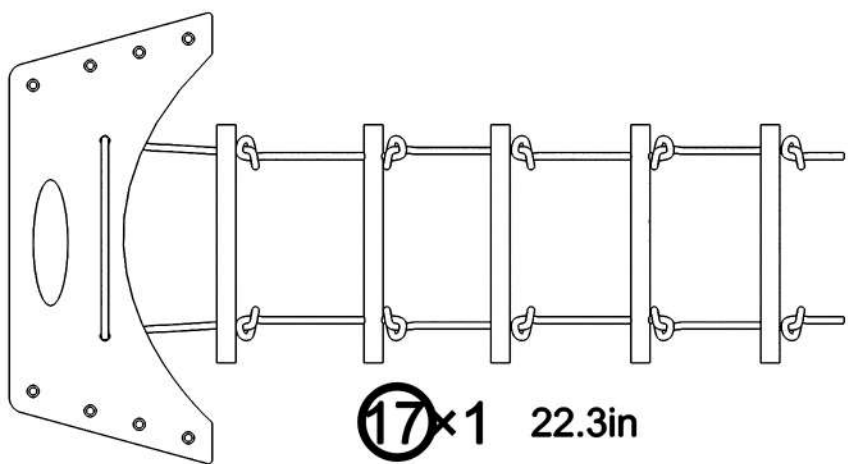 

⑰×1 22.3in

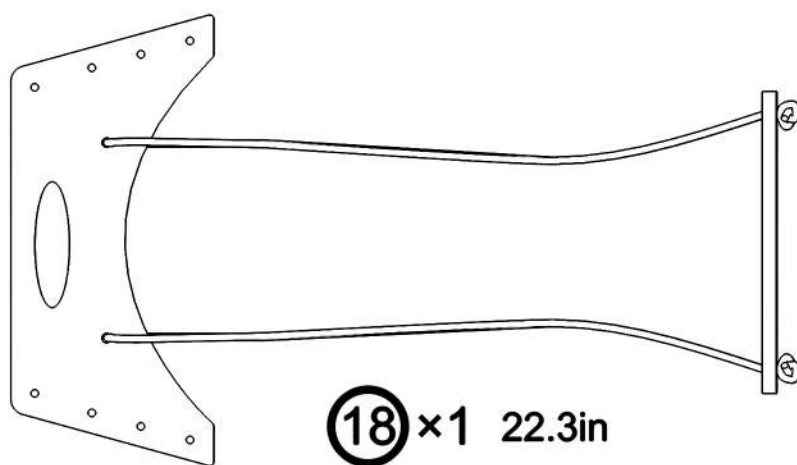 


⑱×1 22.3in




⑲×6



 
⑳×1 14.2in

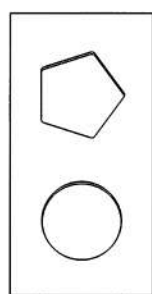

㉒×1 13.5in

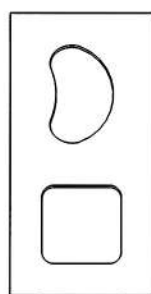 

㉓×1 13.5in

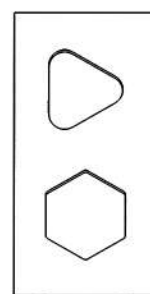 

㉔×1 13.5in



 
㉕×1 110in



㉖×1 94.5in




㉑×1 14.2in



M4×30

 A×55



M4×40

B×20



M8×30

C×16



 
M8×40

D×4




M10×35

E×12



M4

 F×1



M10

 
G×1





M10


H×1

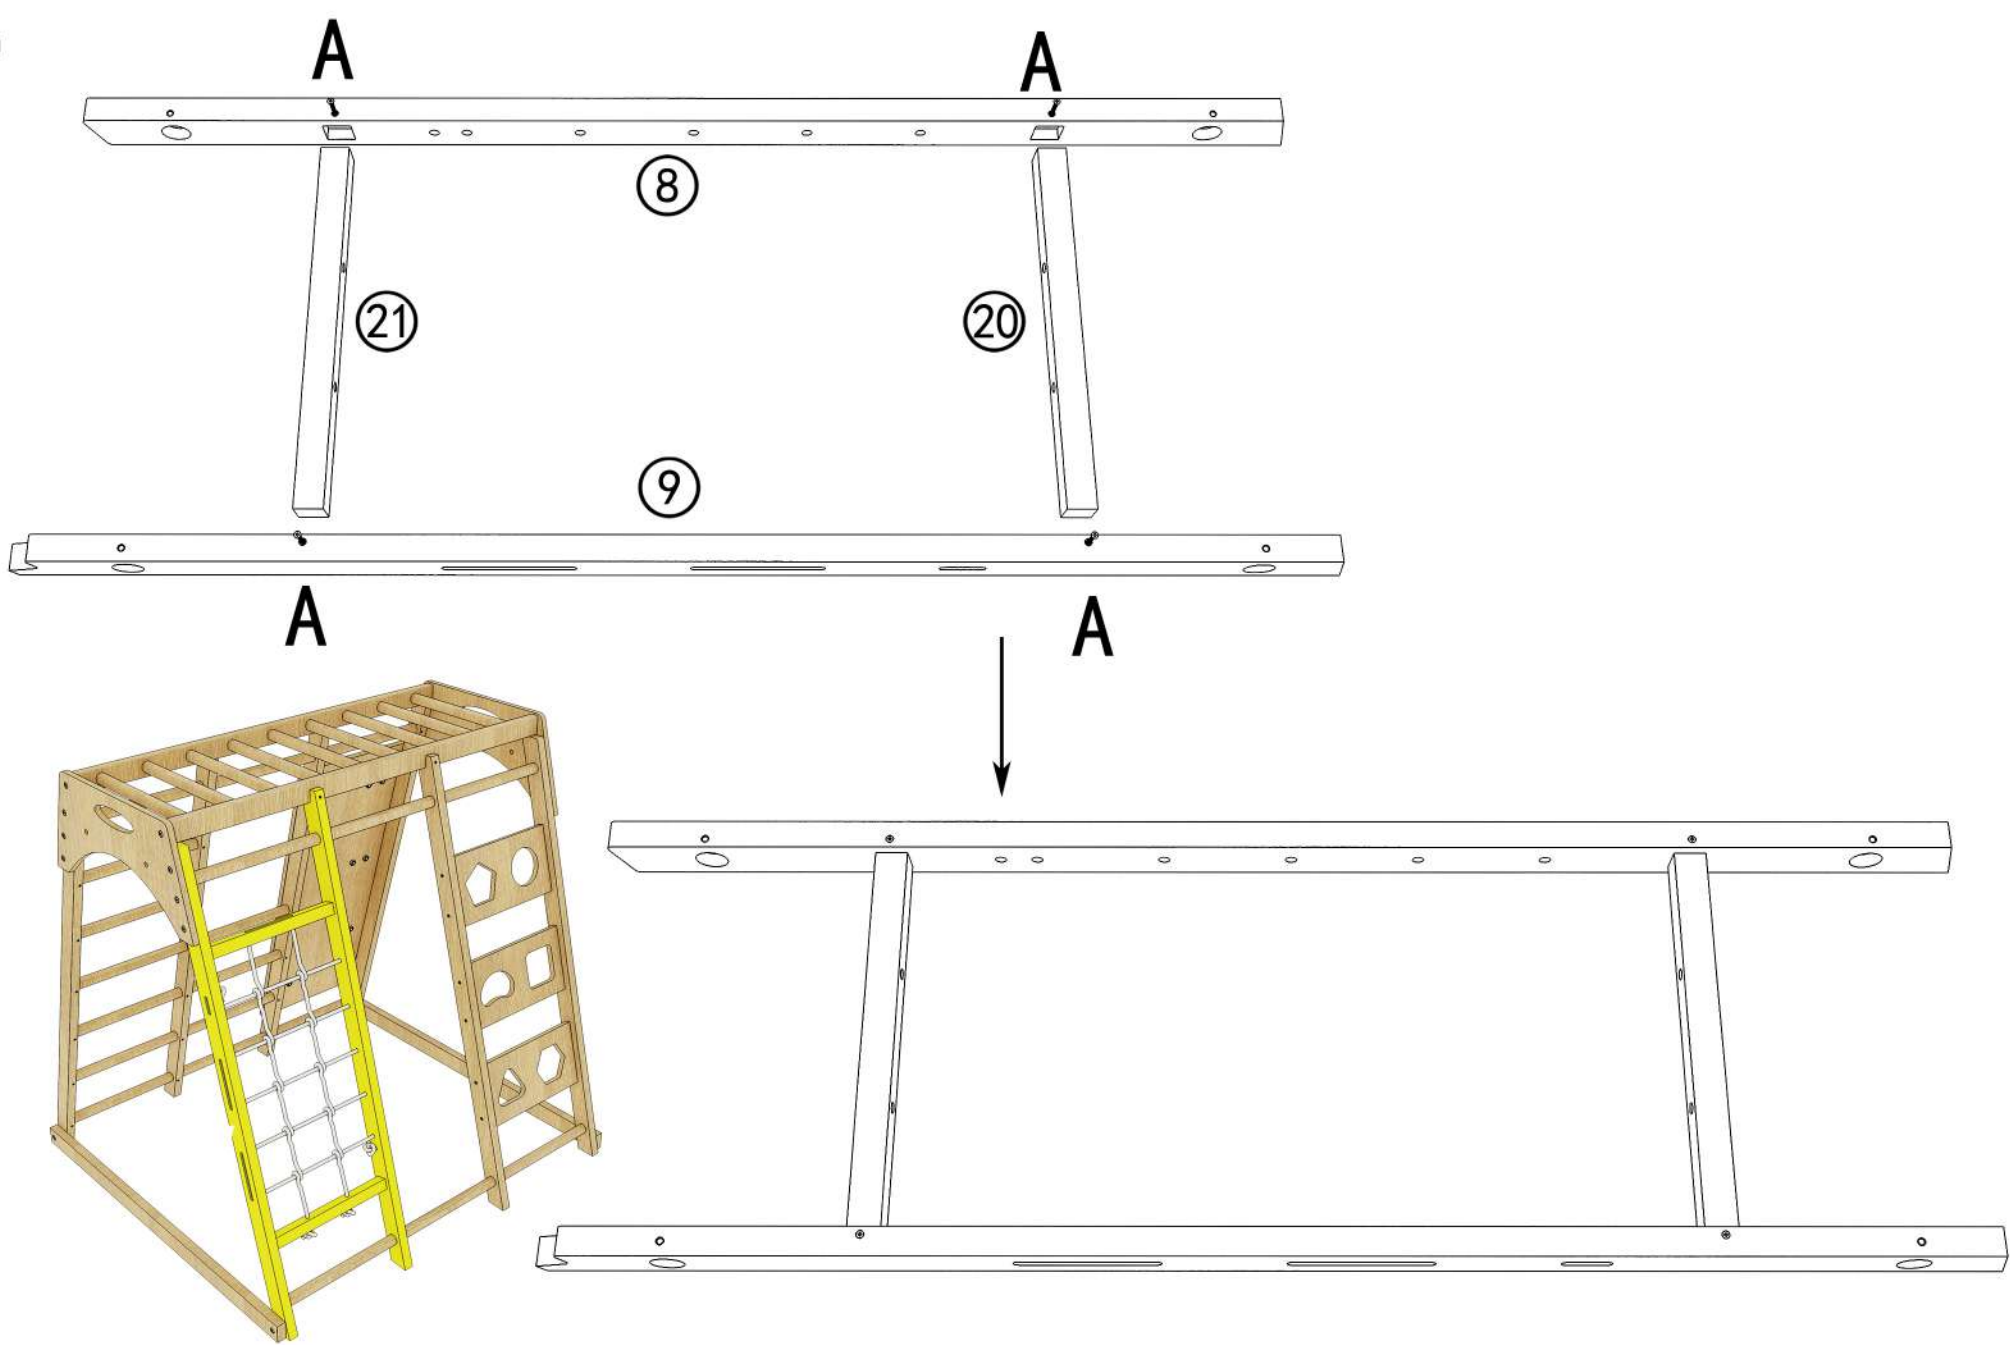A1-1




21	1	
20	1	
8	1	
9	1	
A	 M4 x 30	4

 A2-1

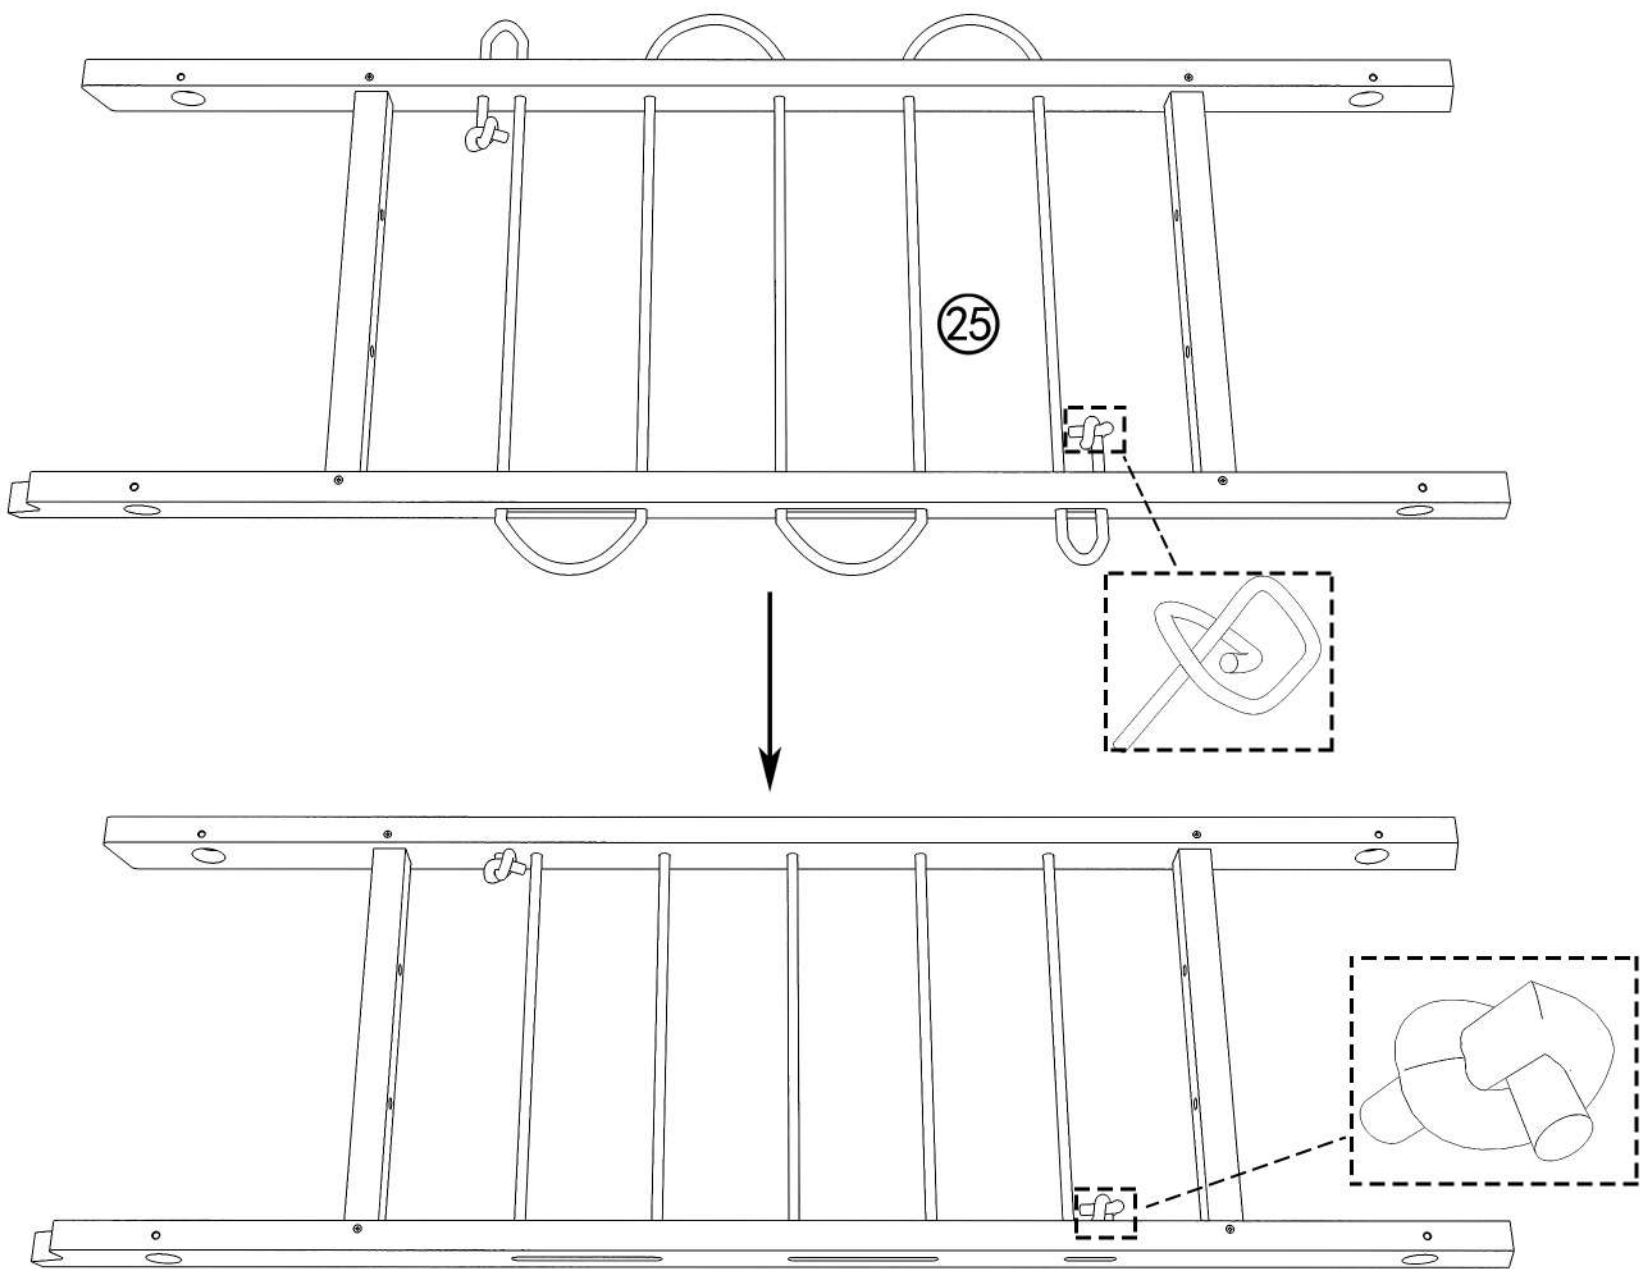


25	1
----	---

 A2-2

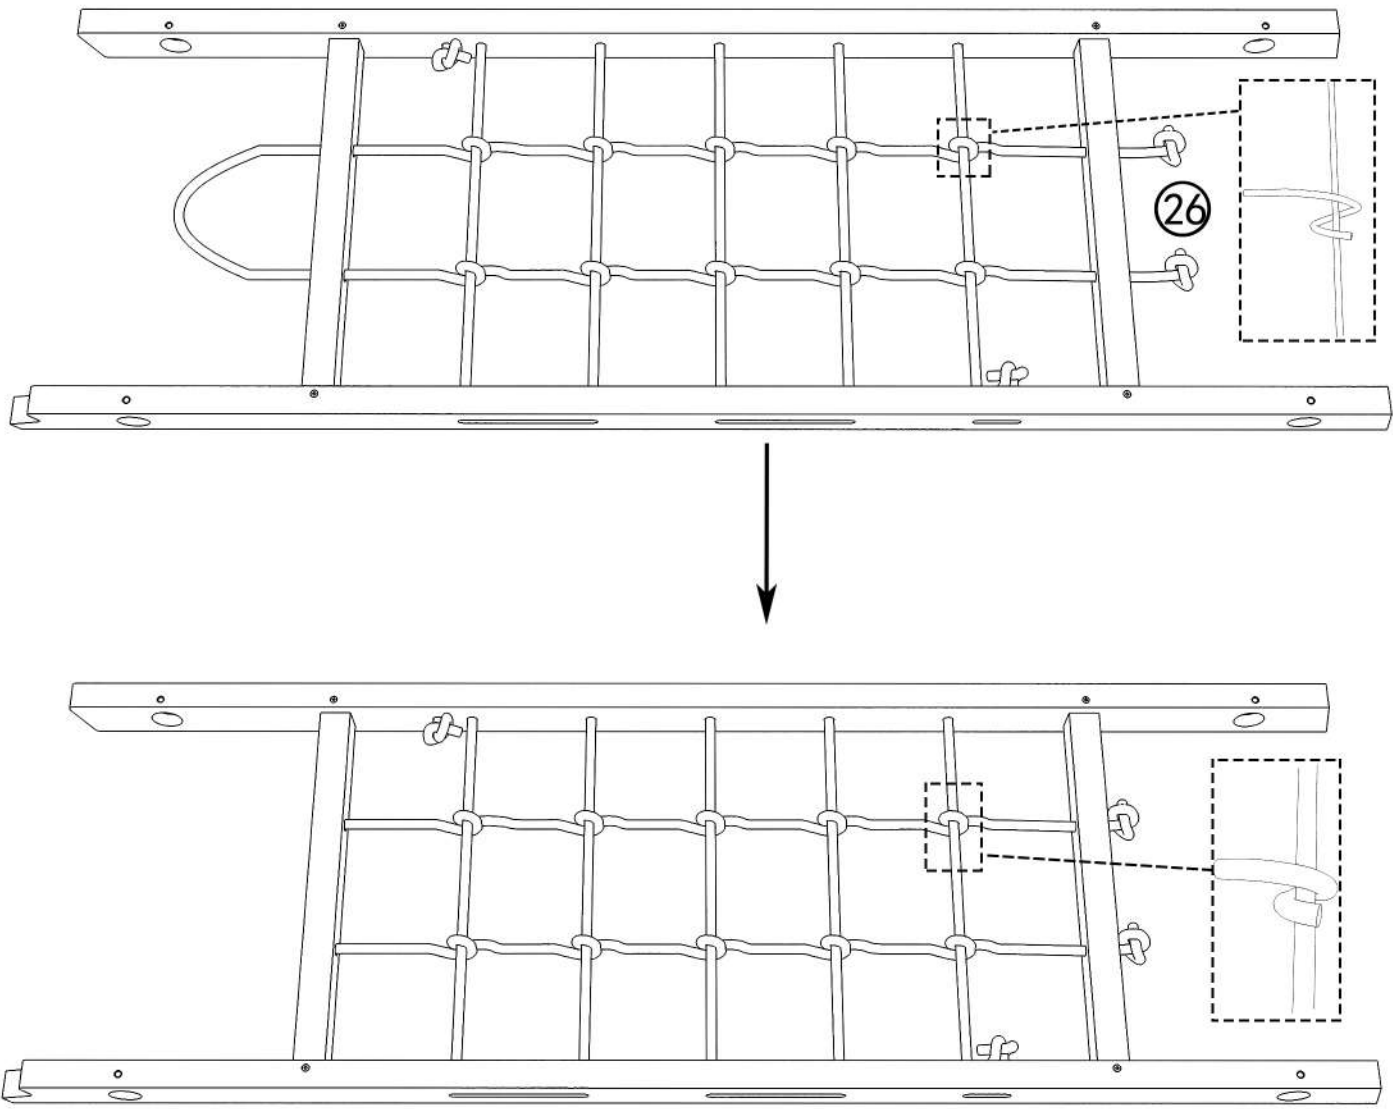


(26) 1

 
B1-1

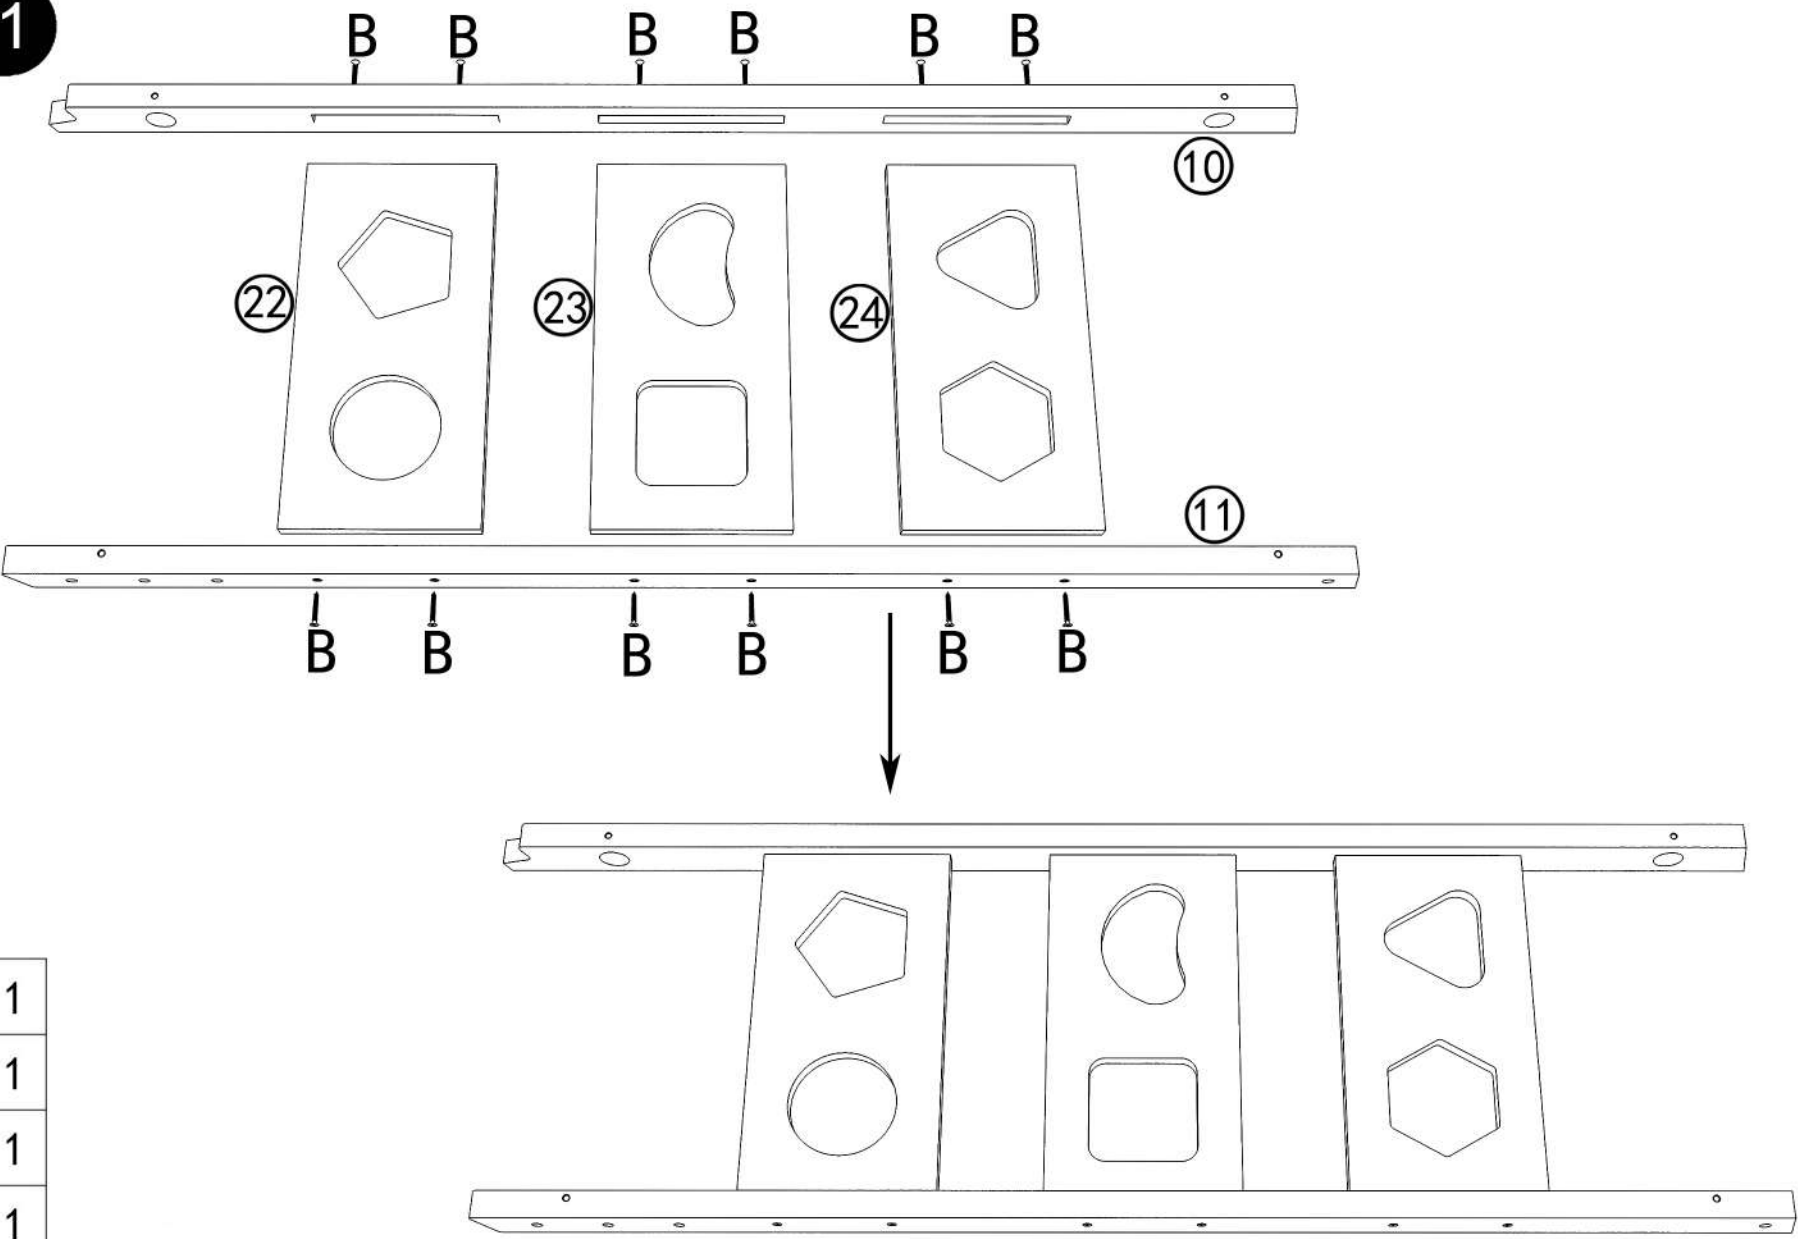

 (24) 1
(23) 1
(22) 1
(11) 1
(10) 1



B  M4 × 40 12

 C1-1

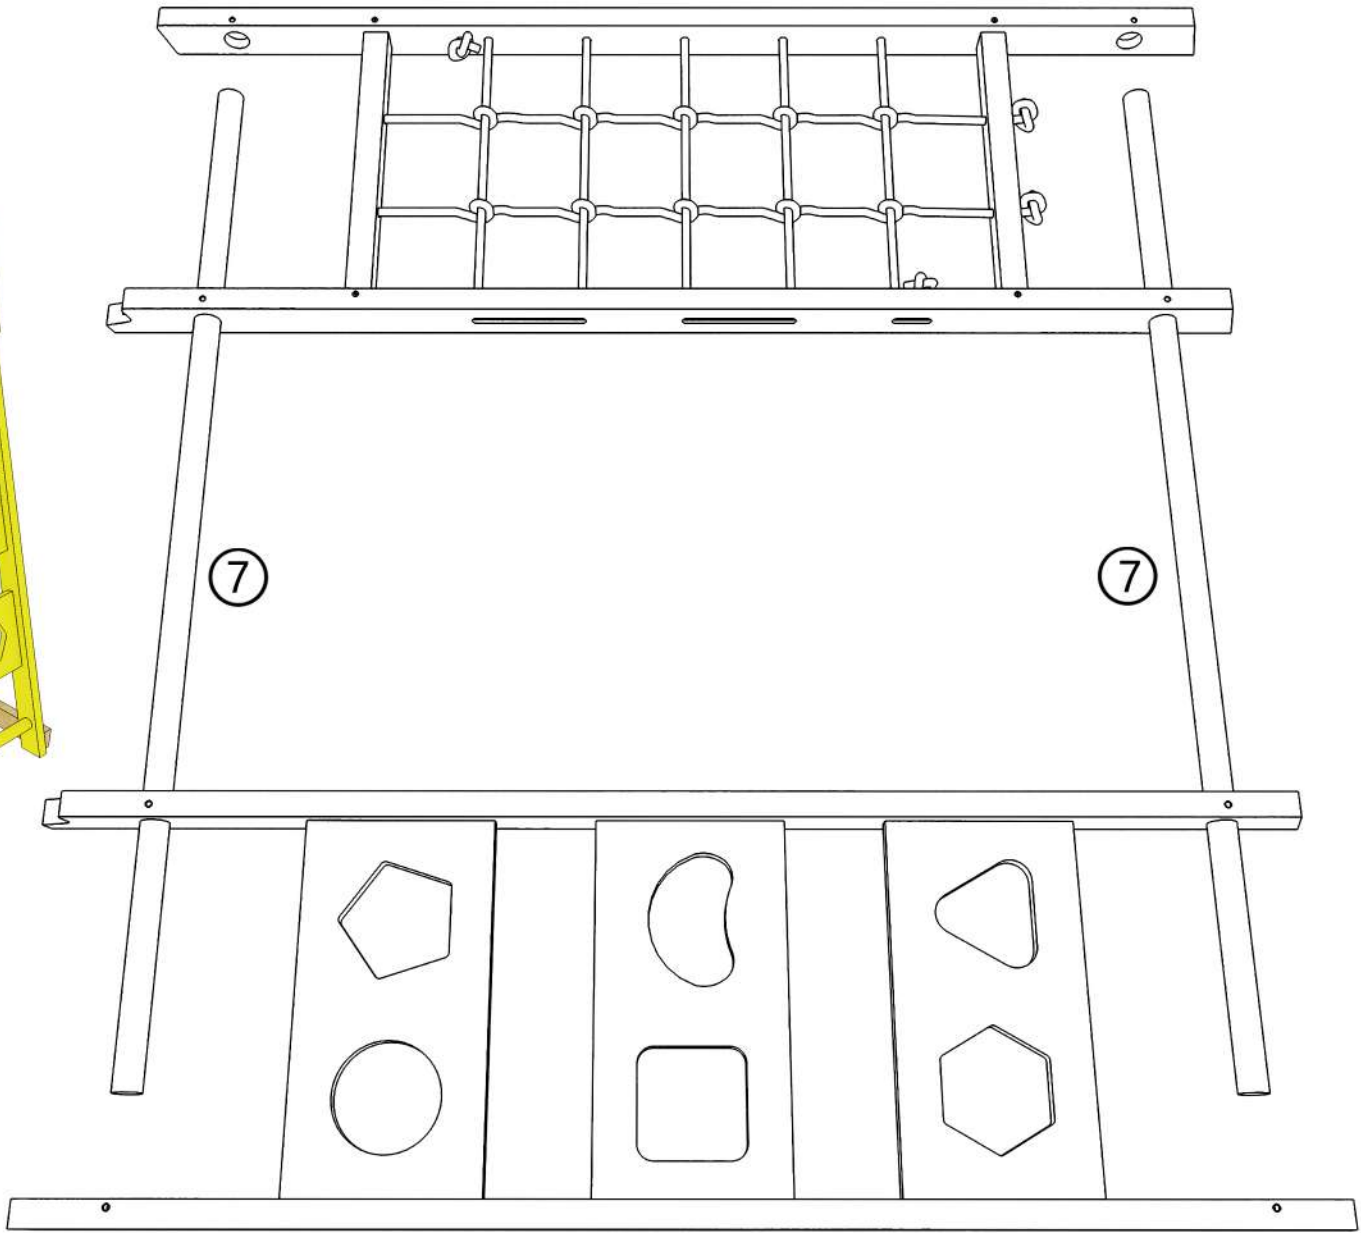

7 2

 
 

C1-2

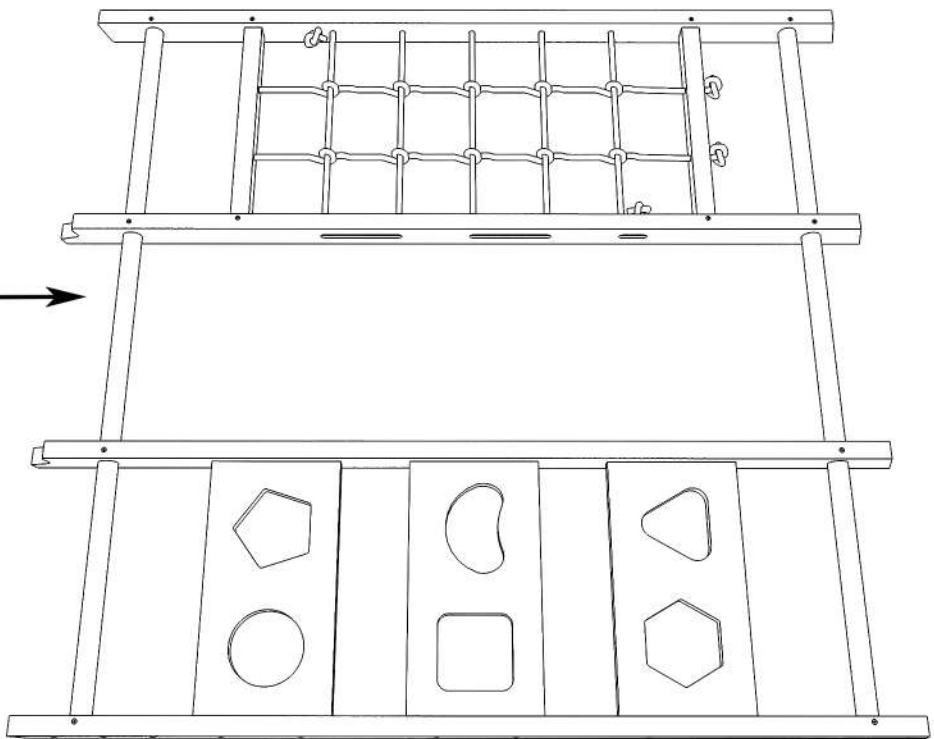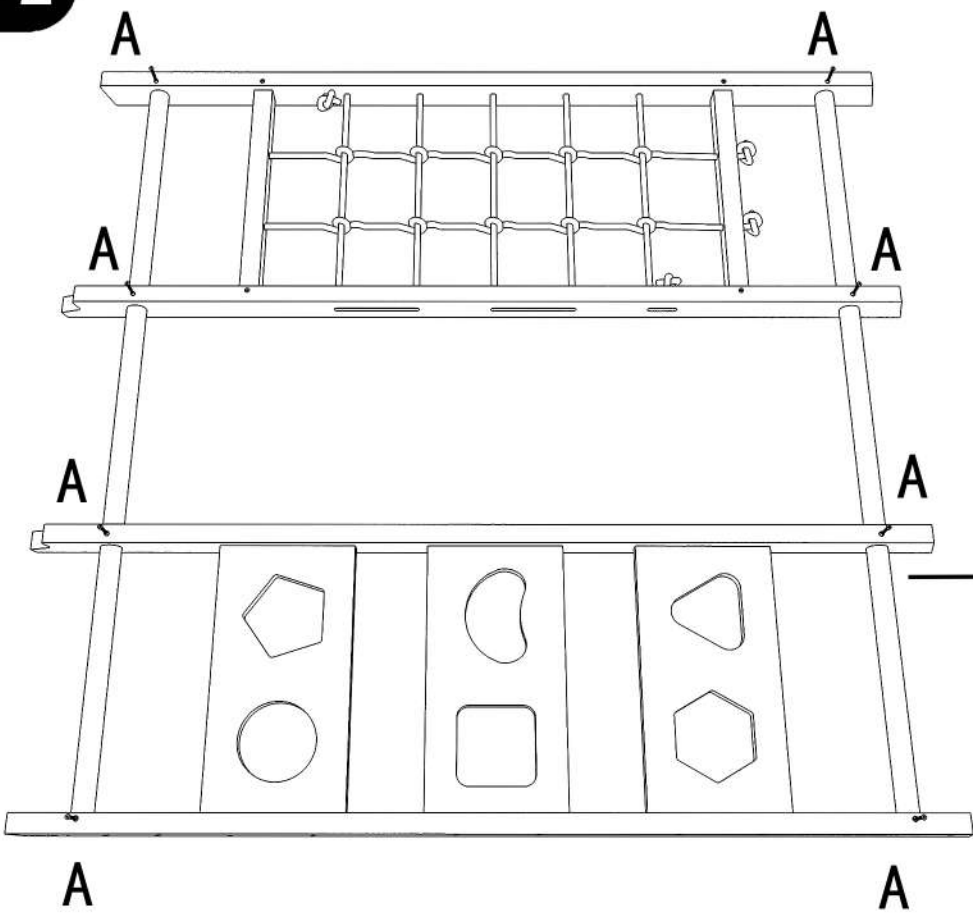


A  M4 x 30 8


D1-1

  
To fasten screw #E,
use both Wrench
#H & G to increase
the leverage.

19	6		
16	1		
E		M10×35	12
H		M10	1
G		M10	1

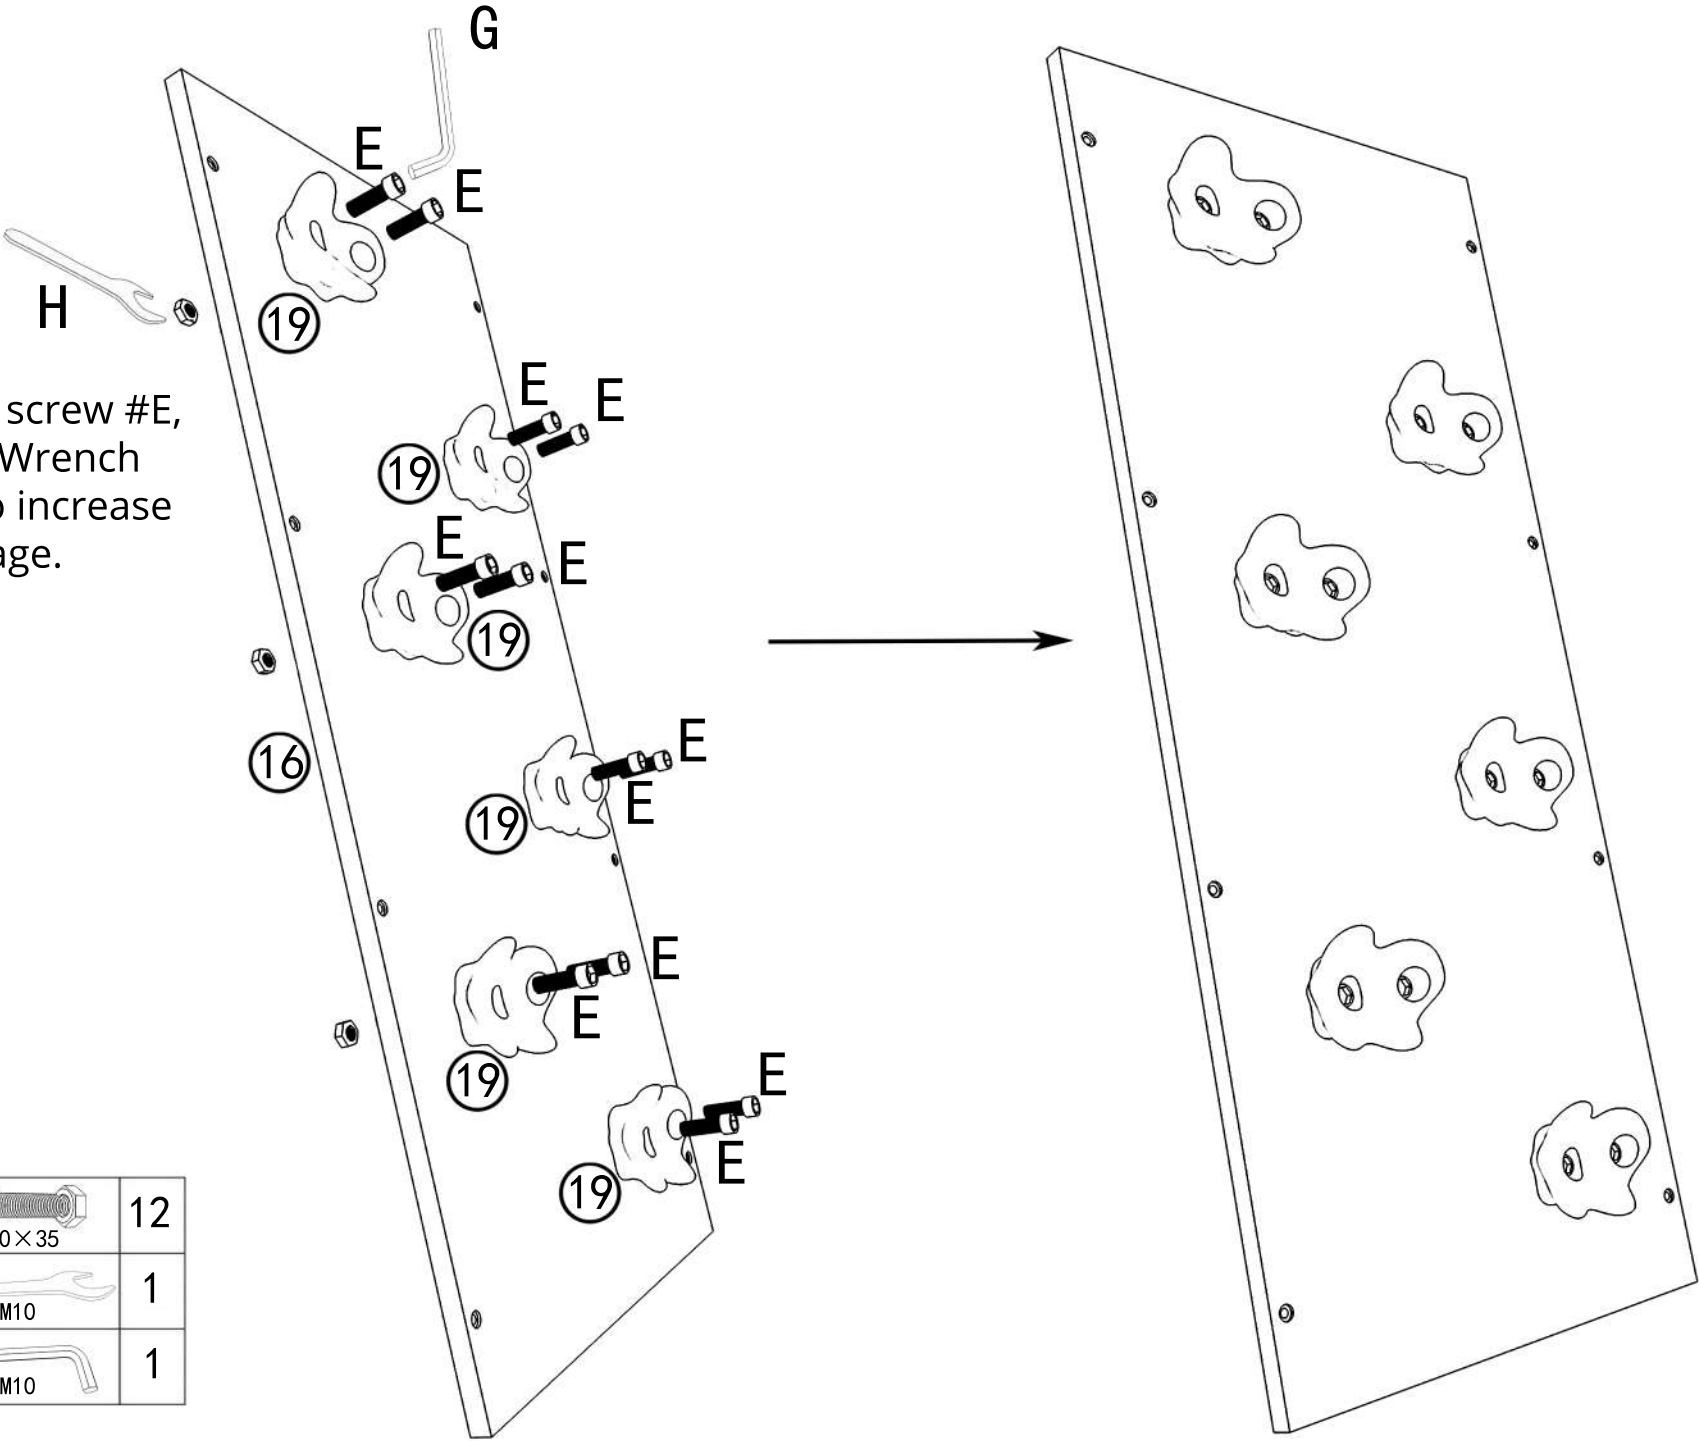 


D1-2

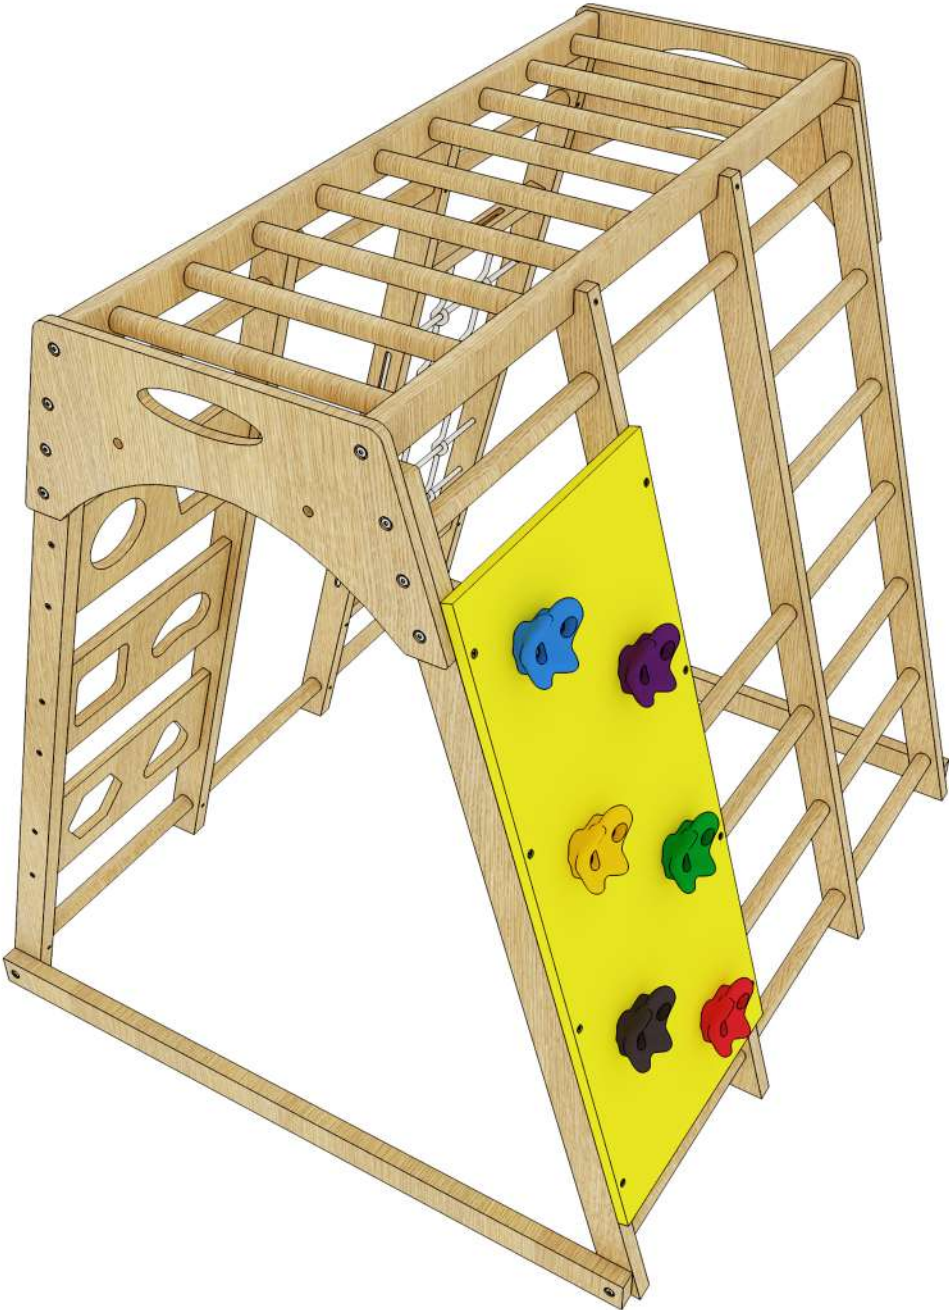 

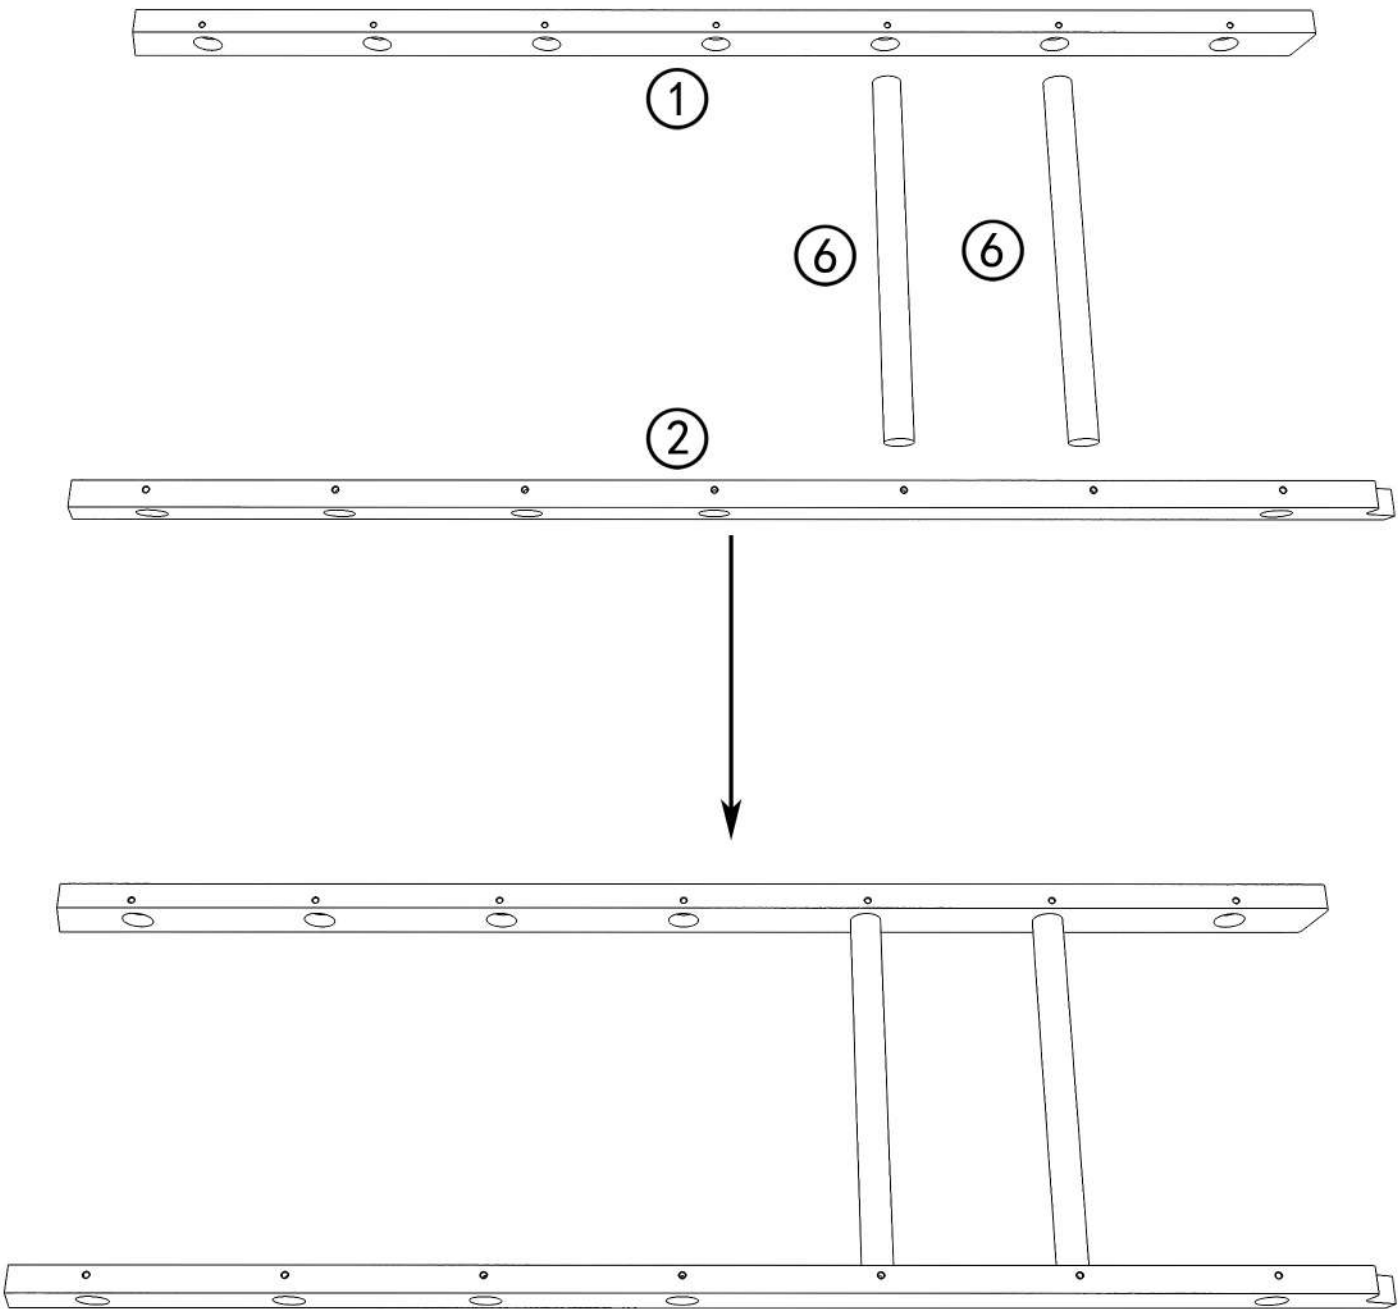 


⑥	2
②	1
①	1

 E2-1

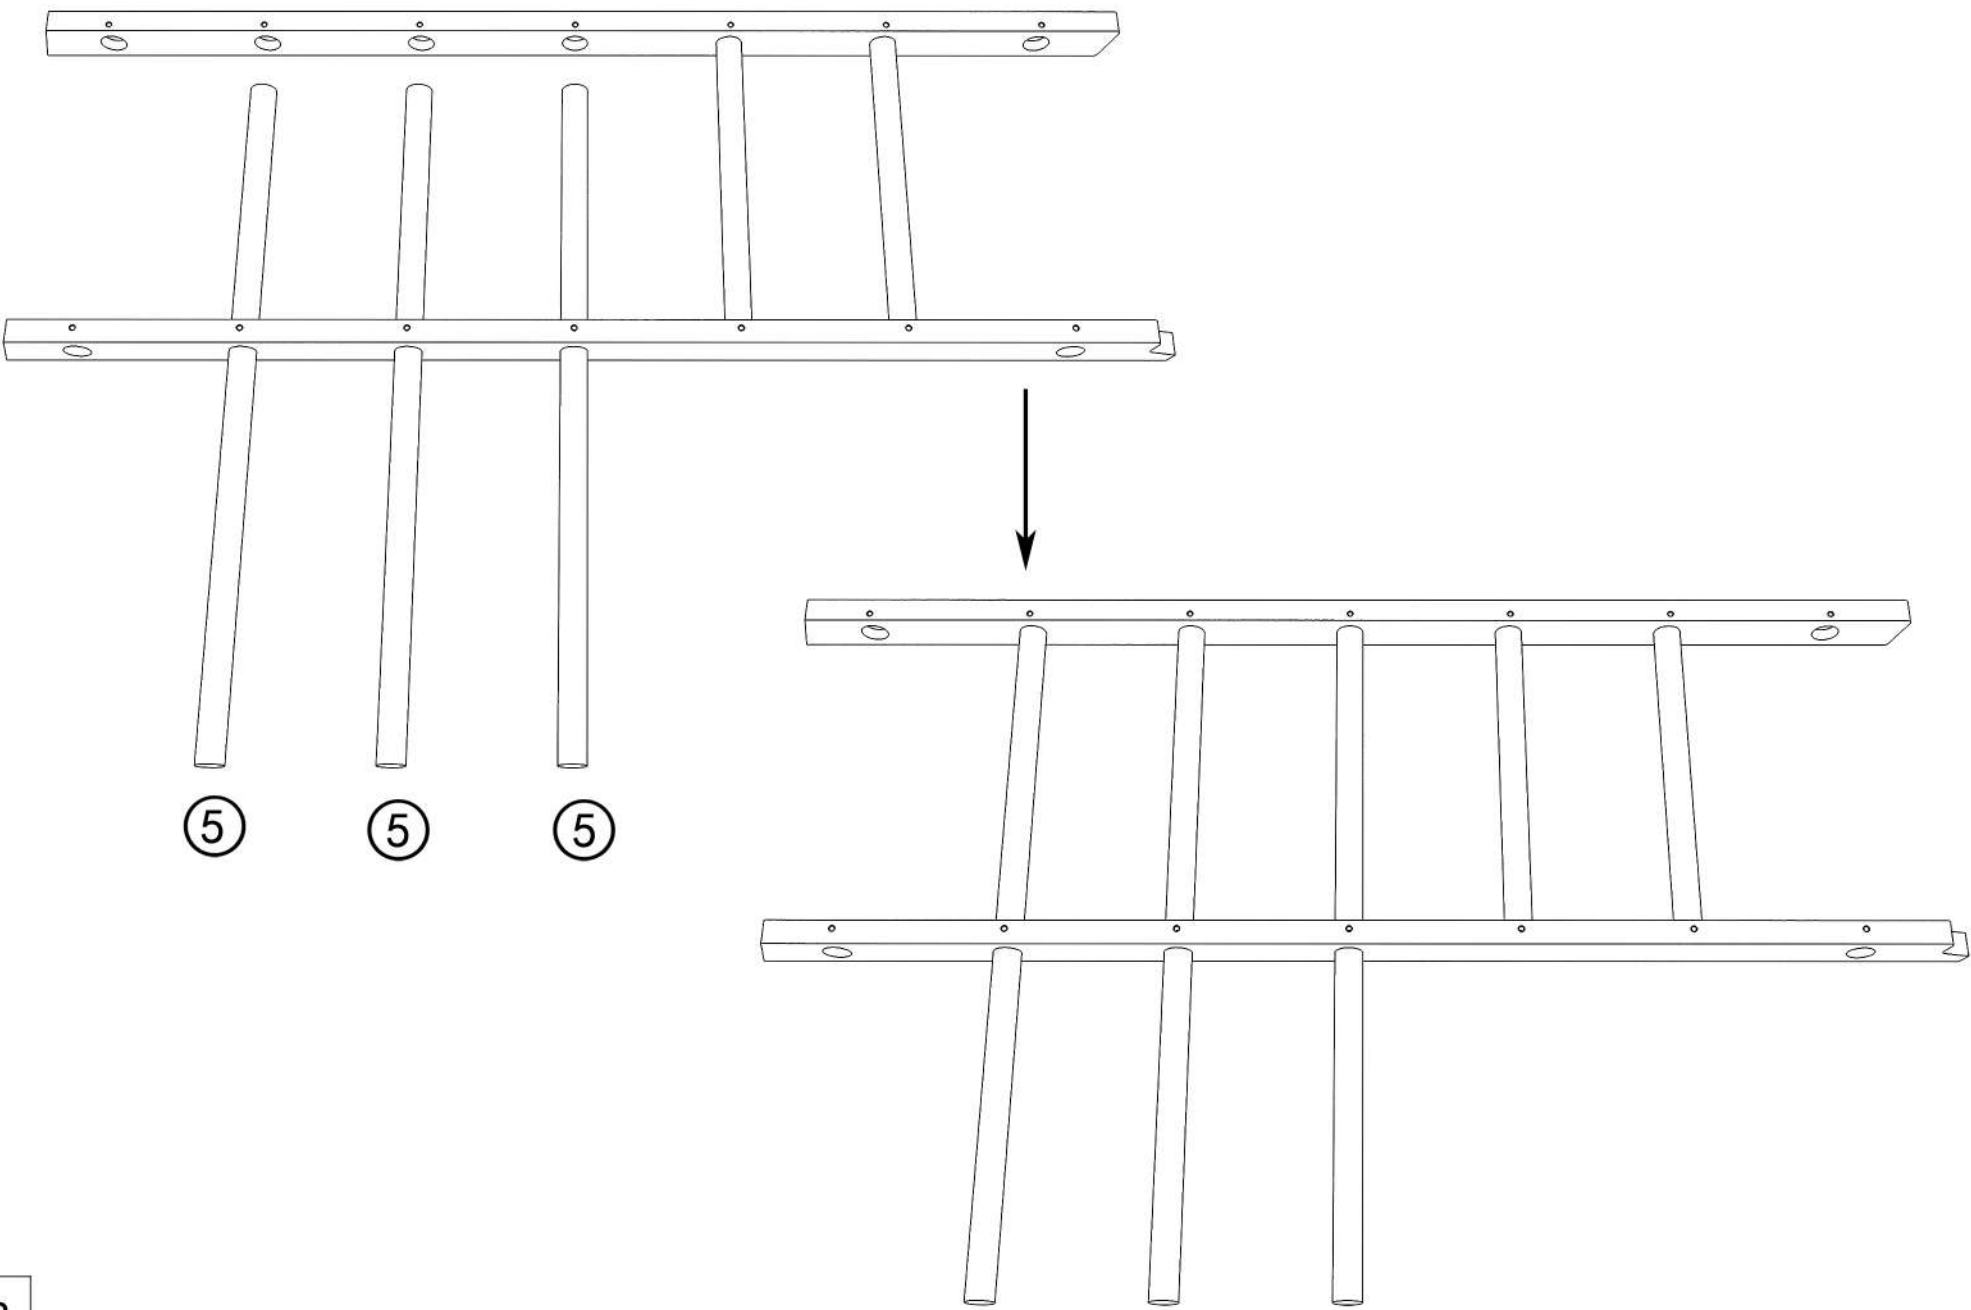


5 3

 
E3-1

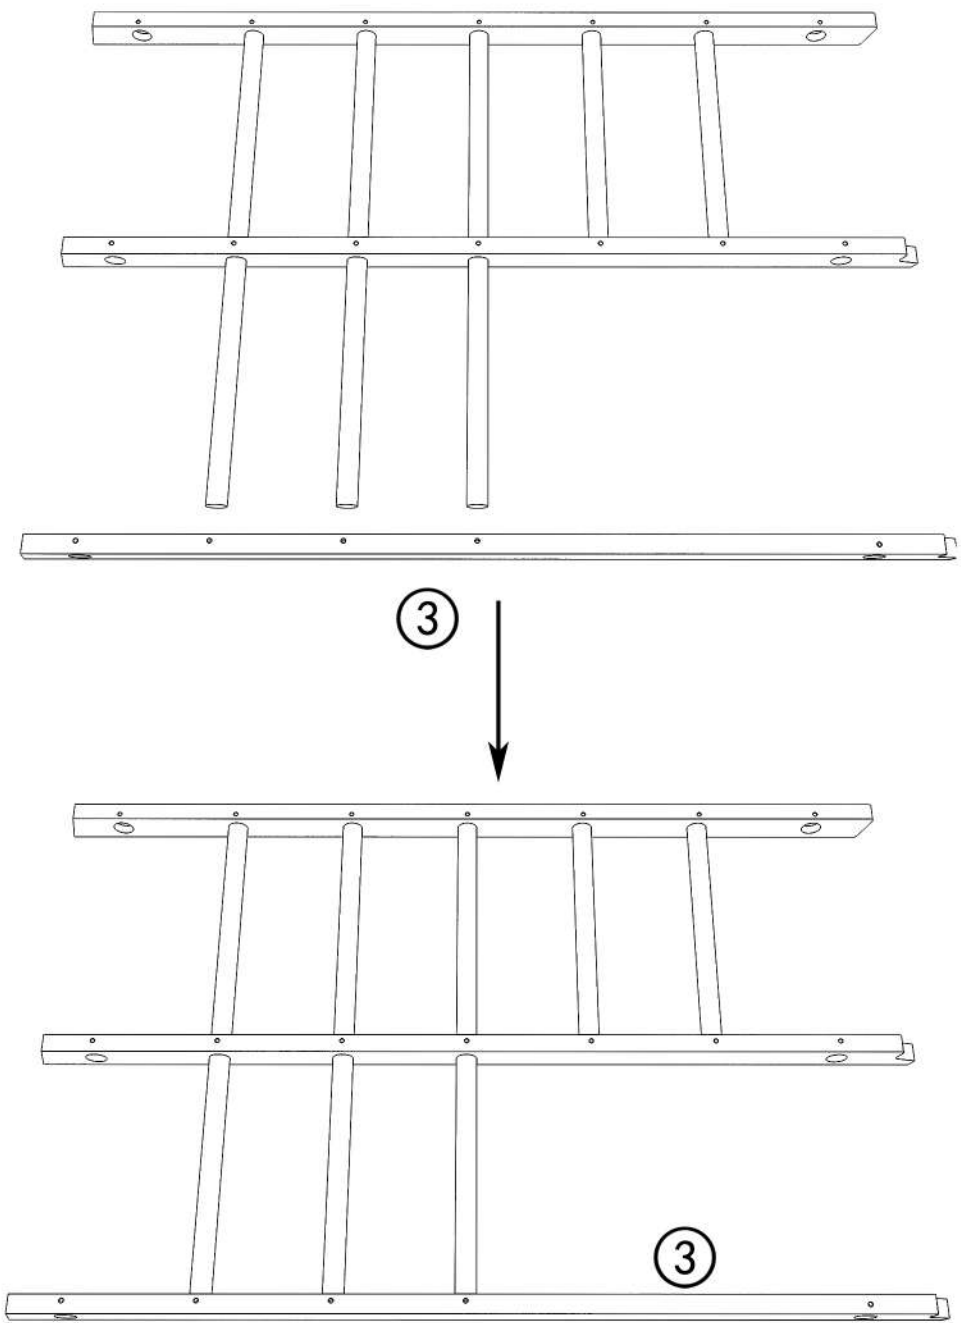


3 1

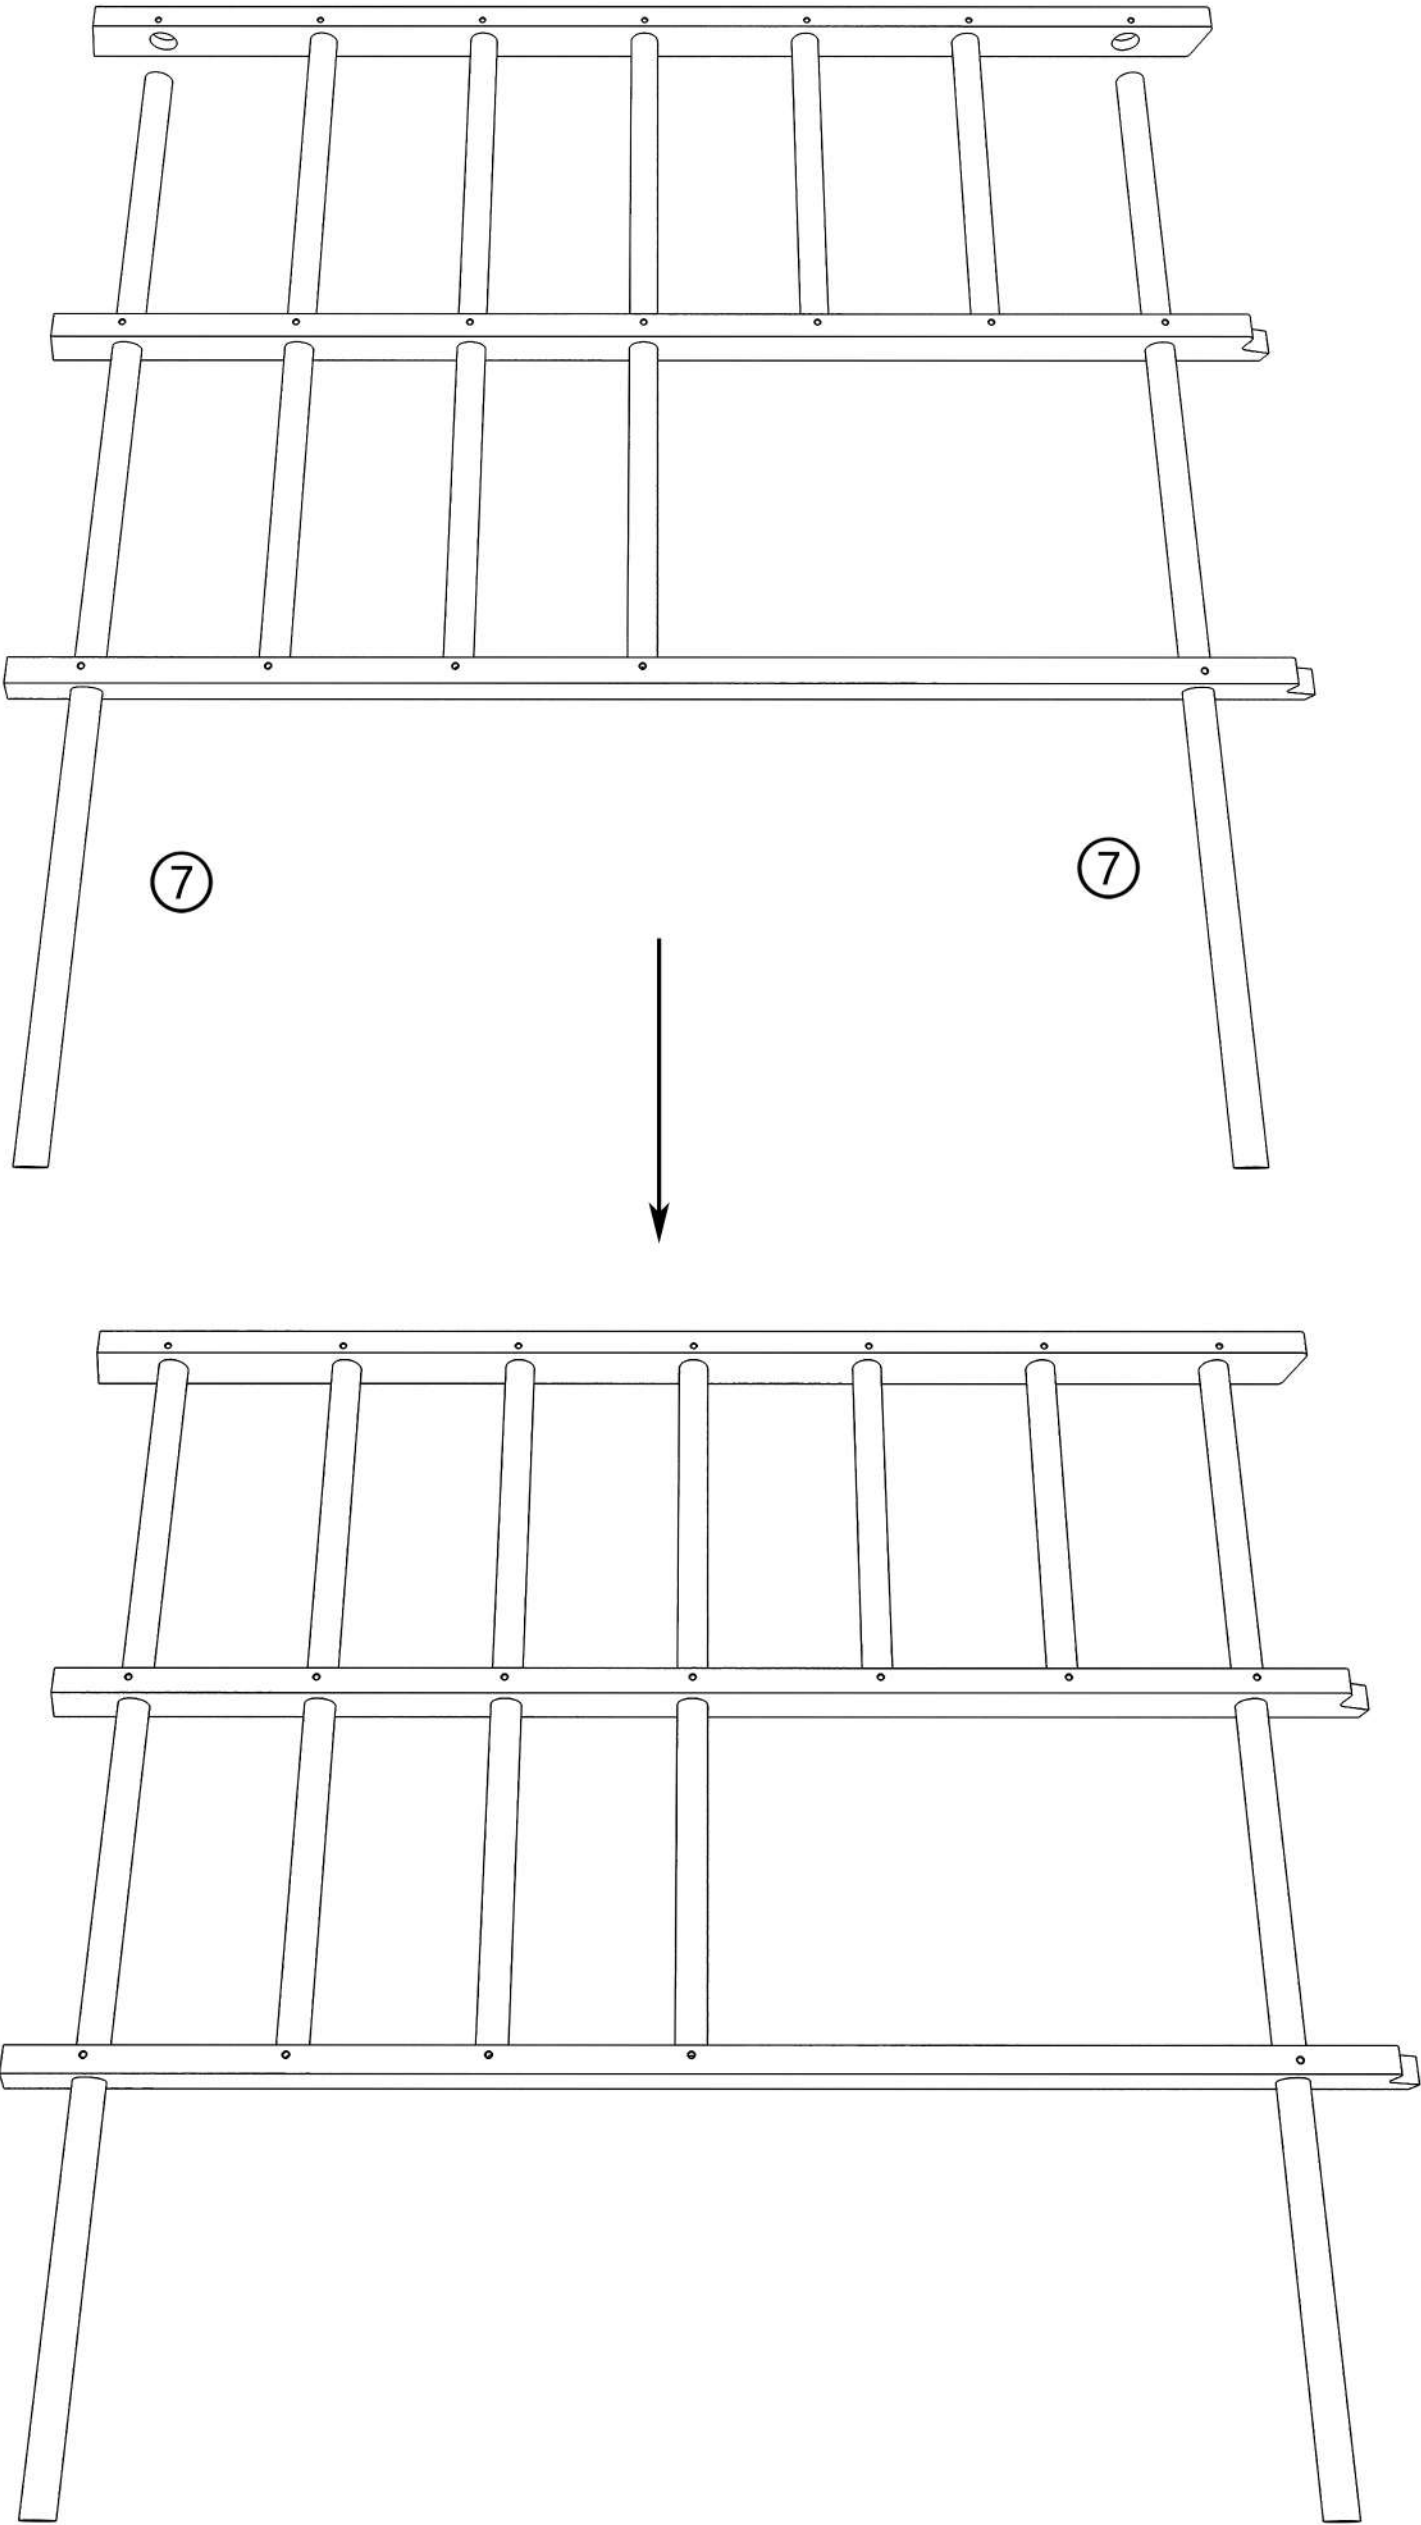 



E4-2

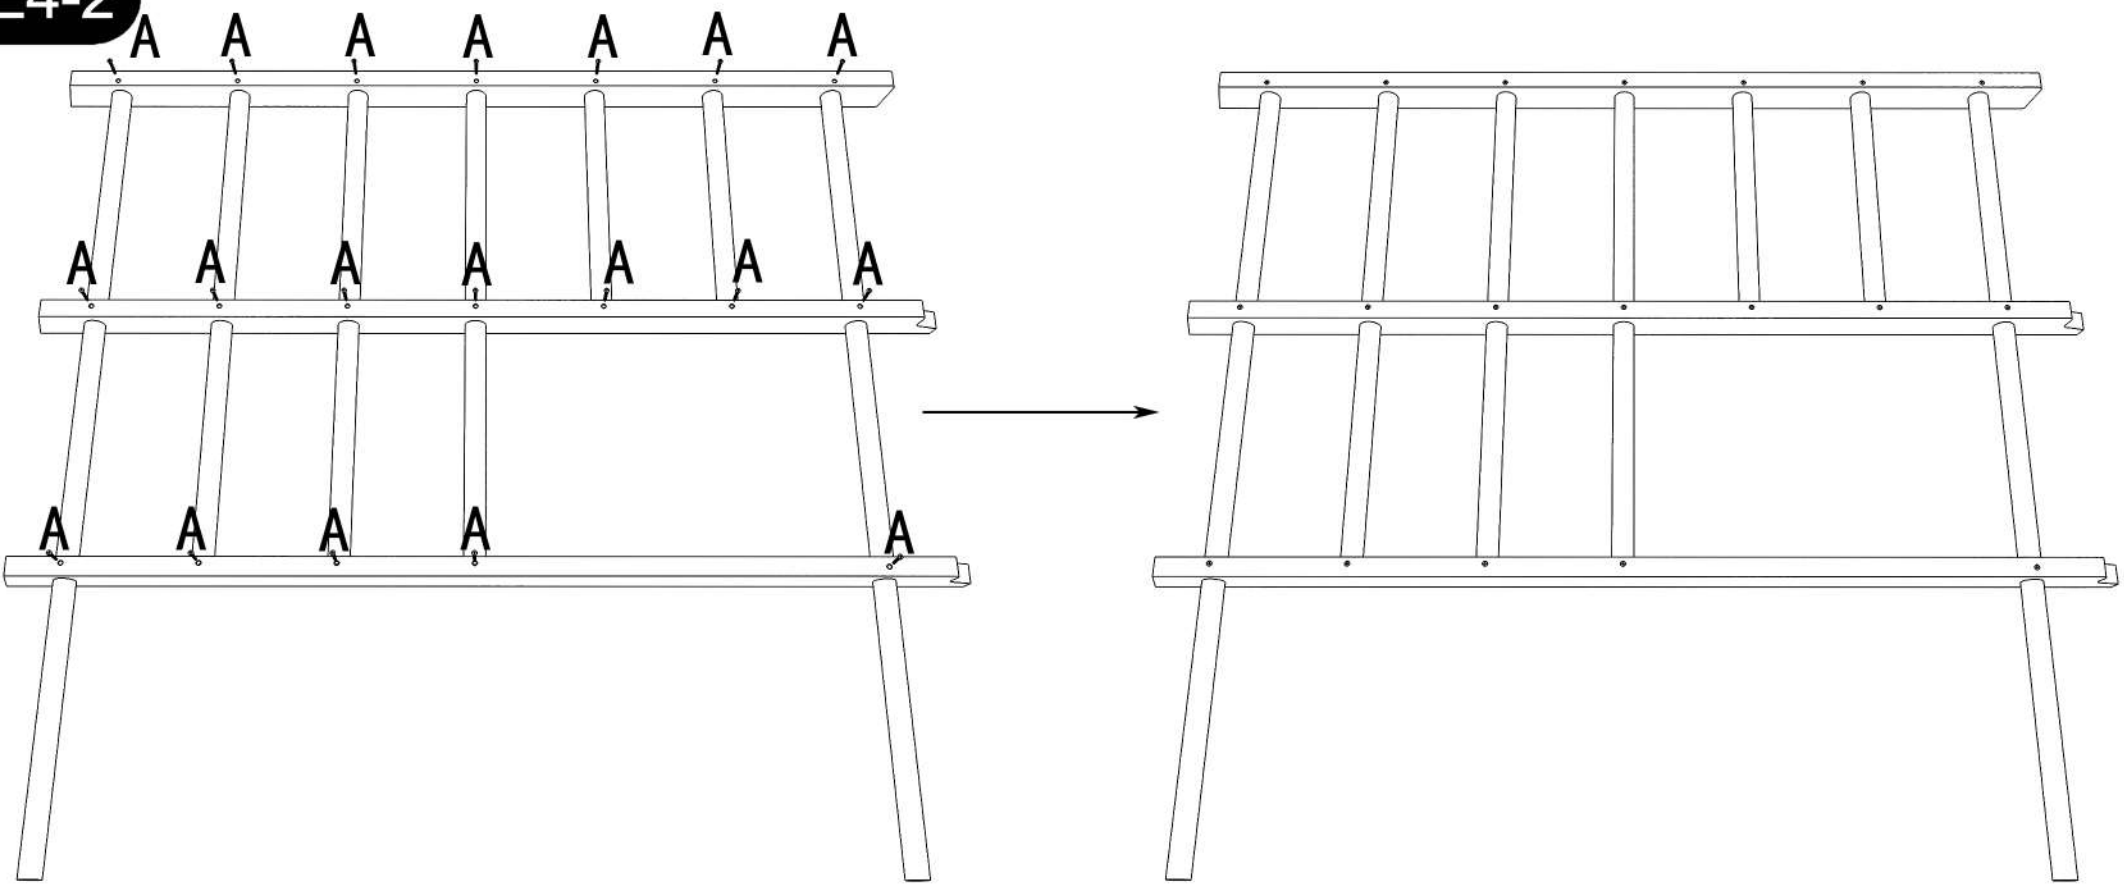 




A		19
M4 × 30		

  
E4-3

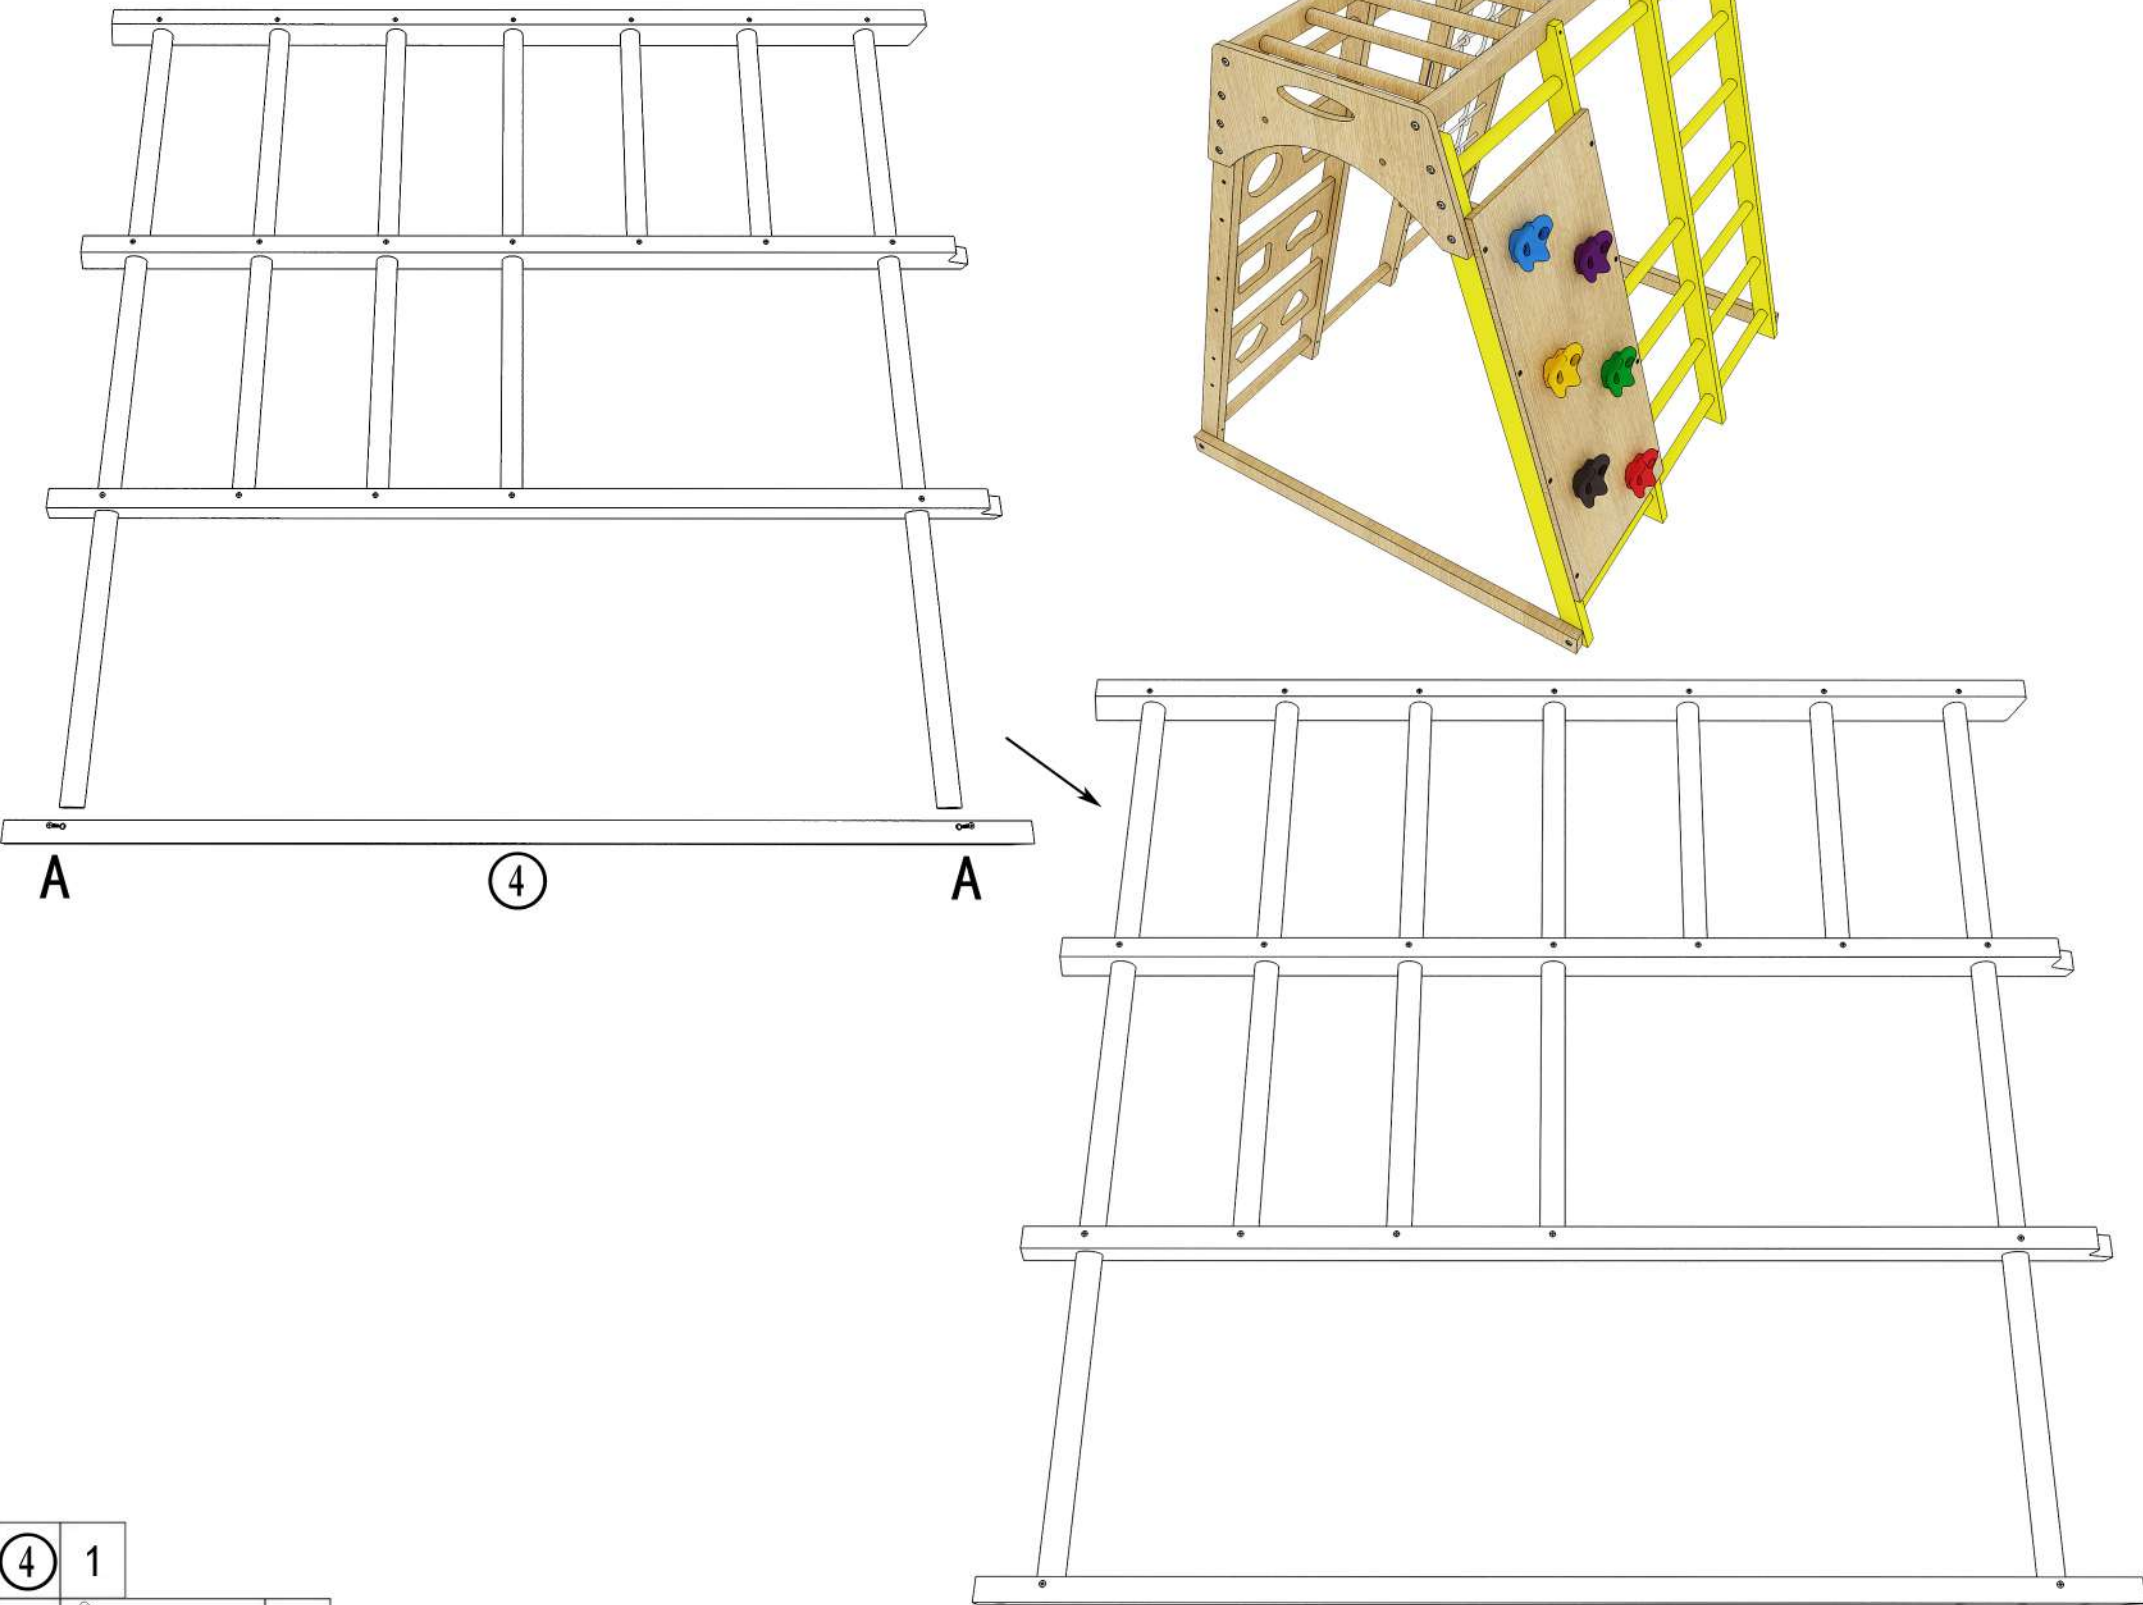


④	1	
A		2
M4 × 30		

    
 
F1-1 Flip the frame 180°

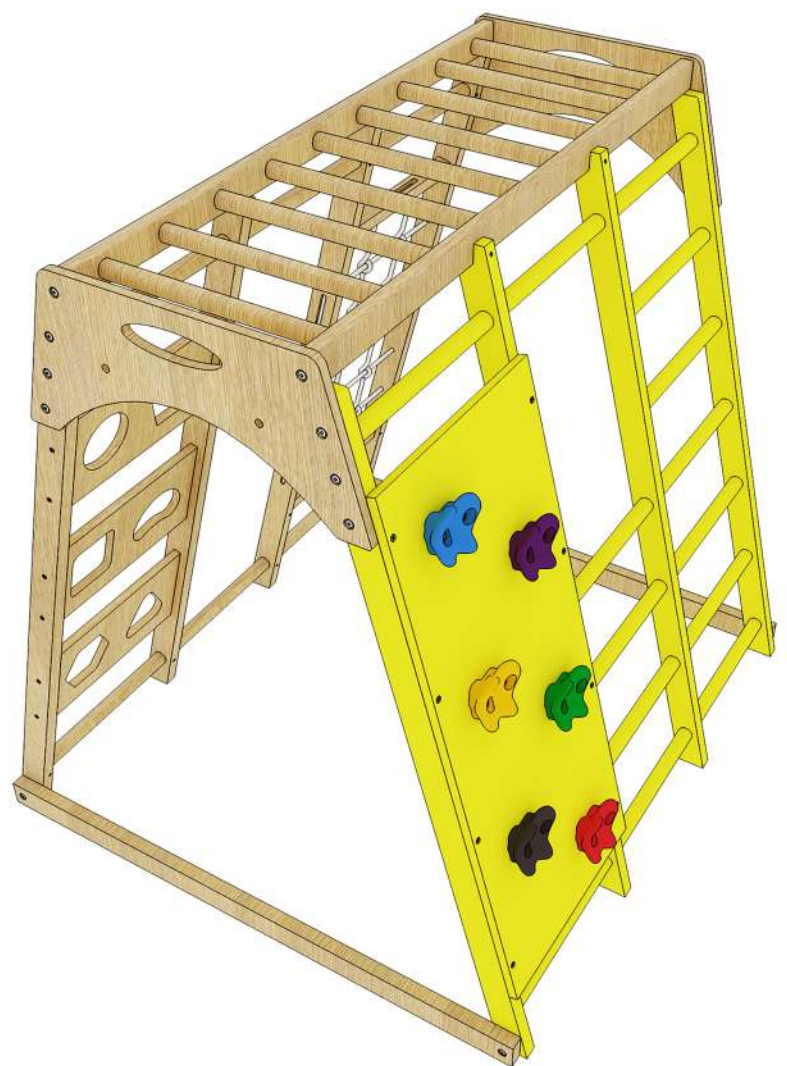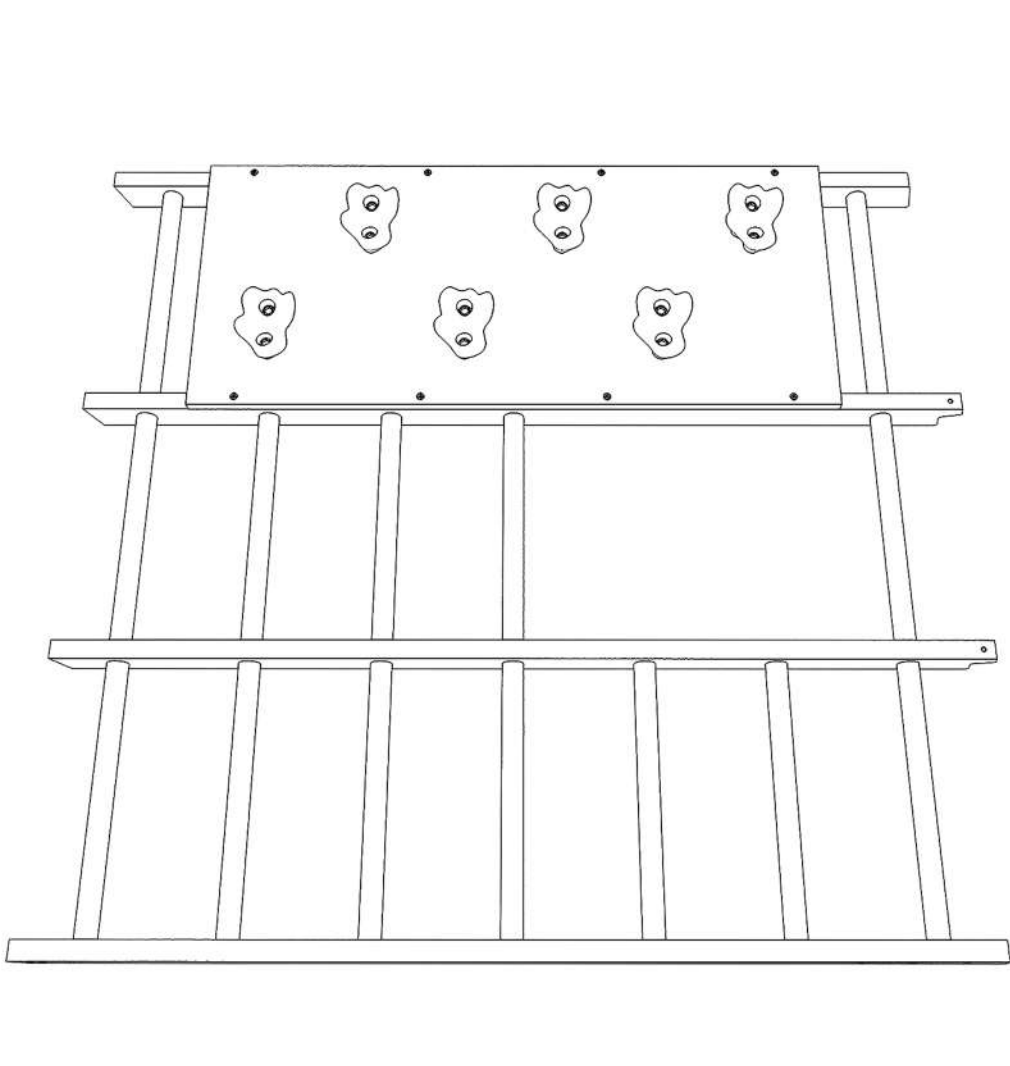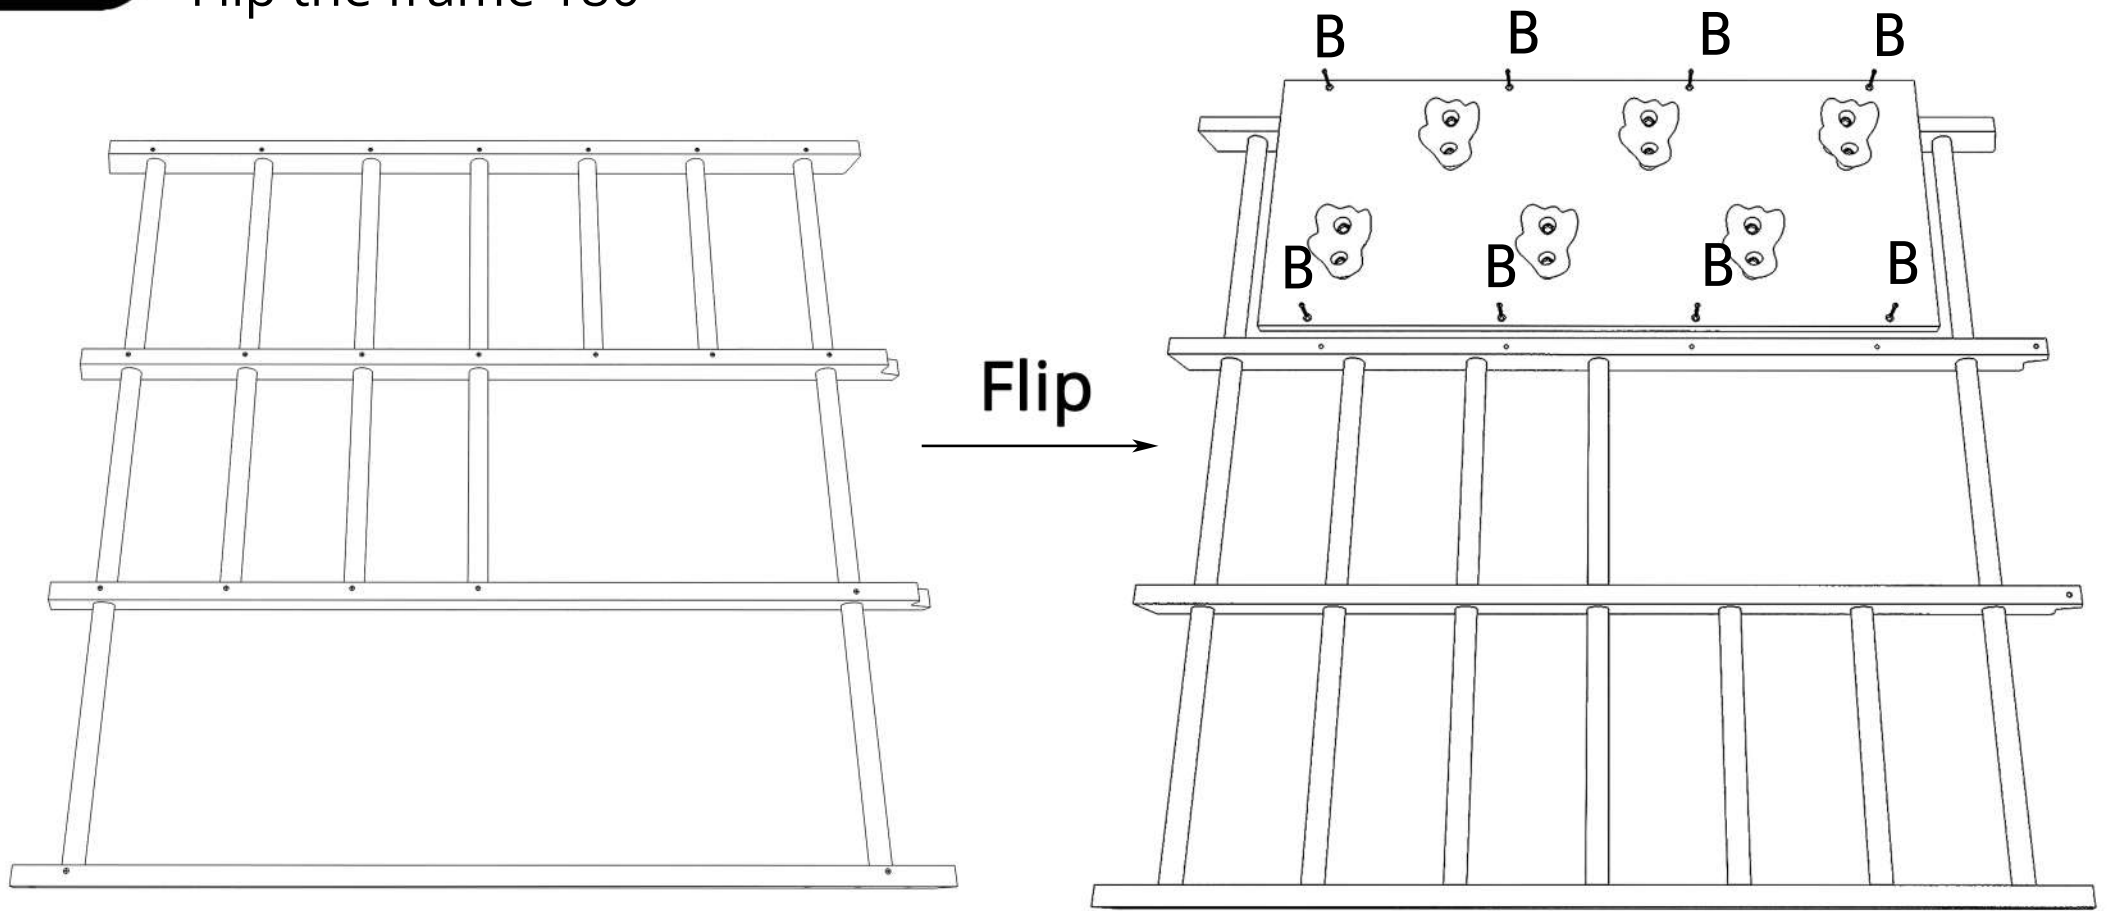


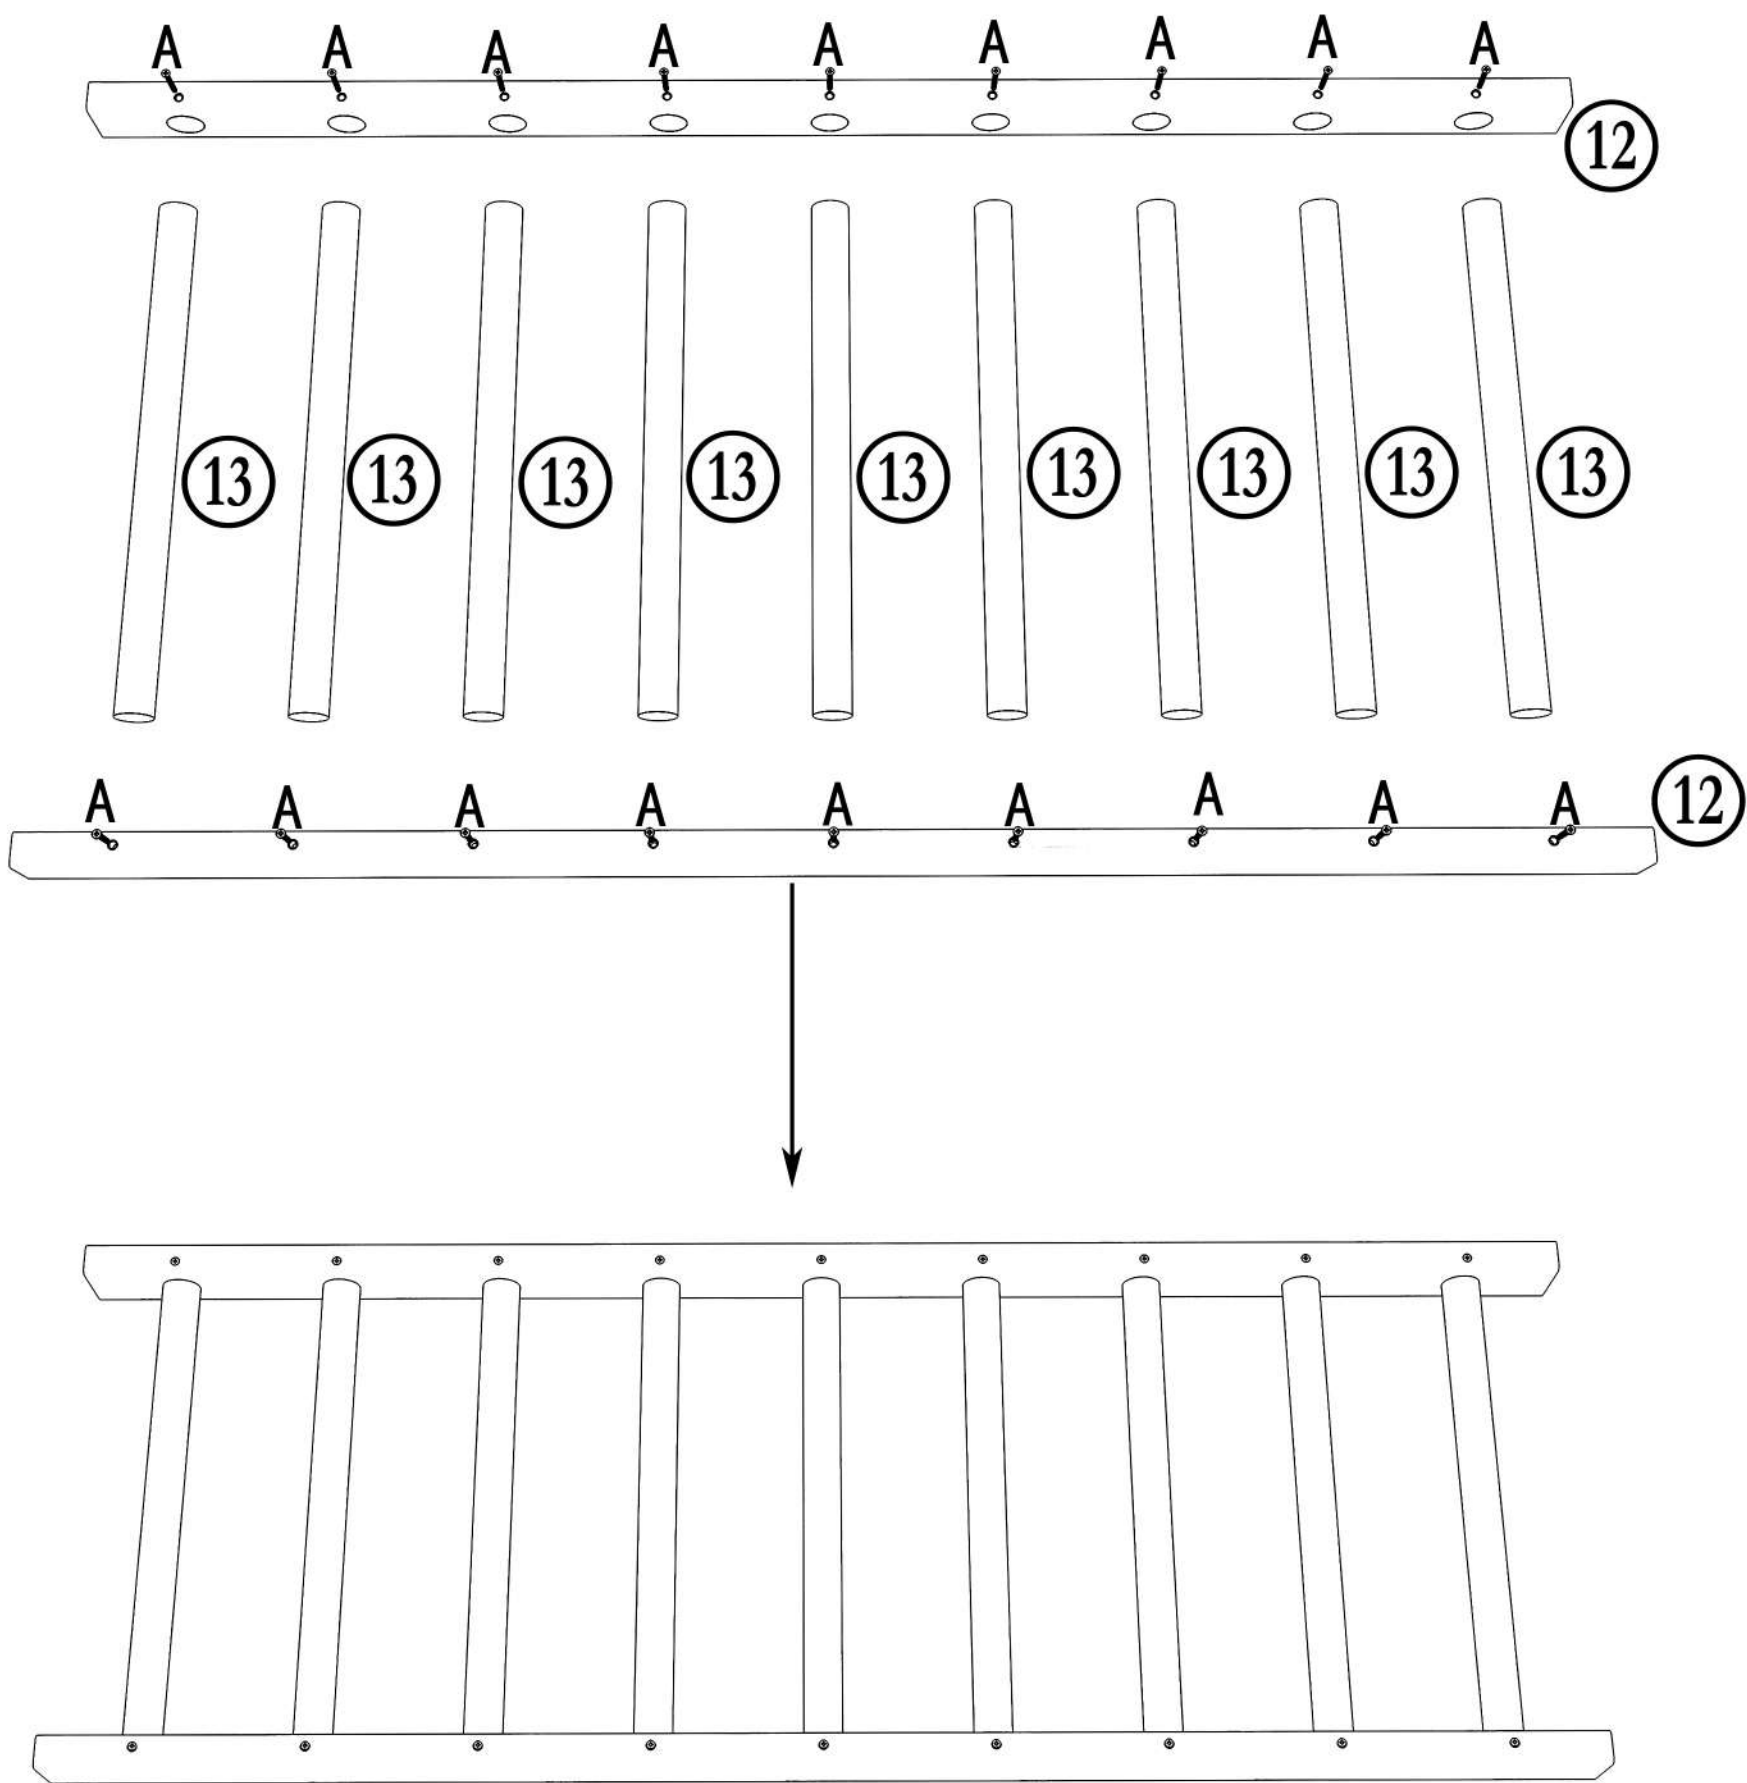



⑬	9	
⑫	2	
A		18

    M4×30

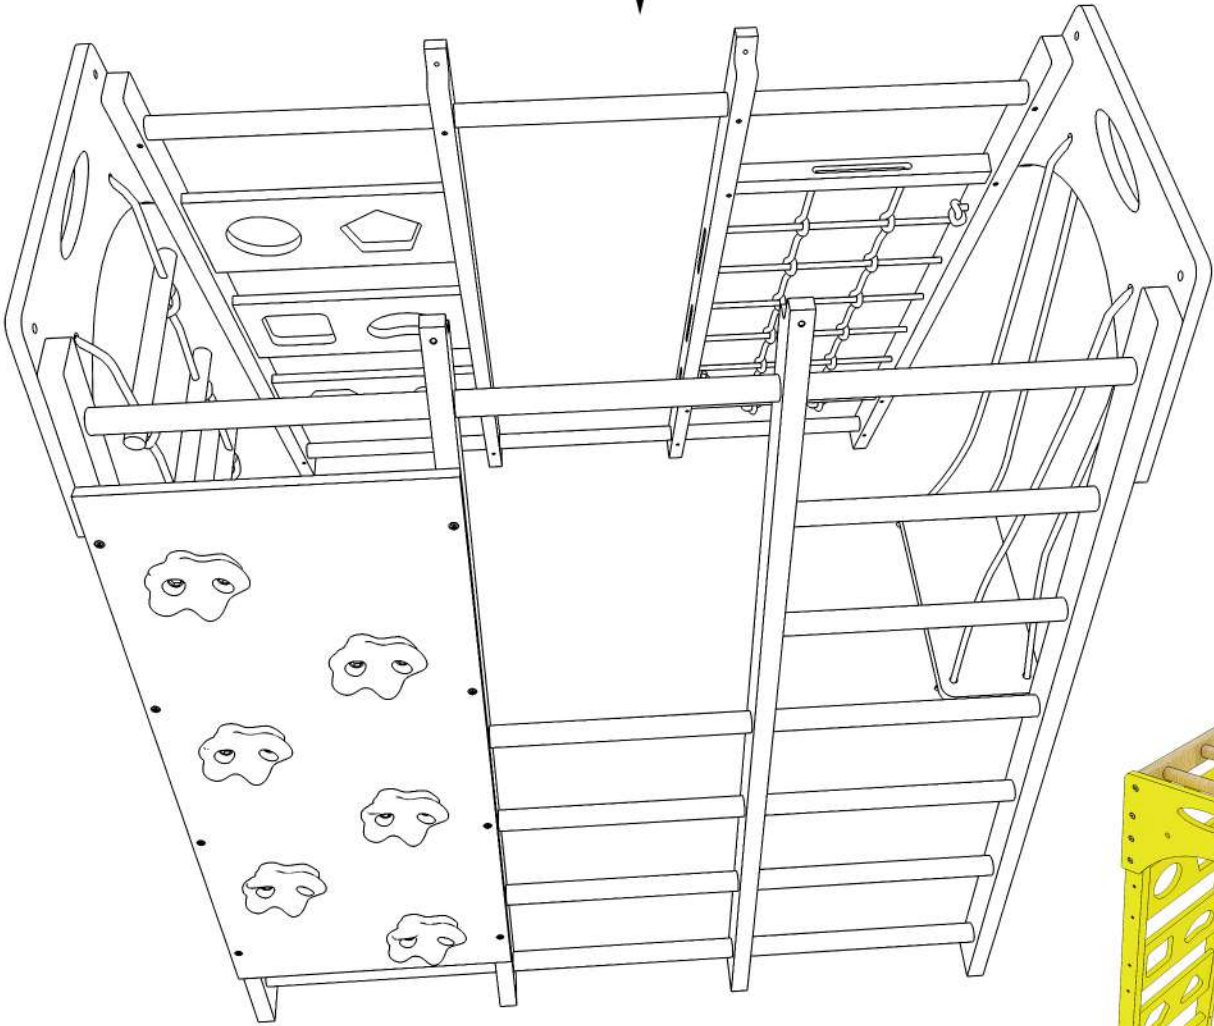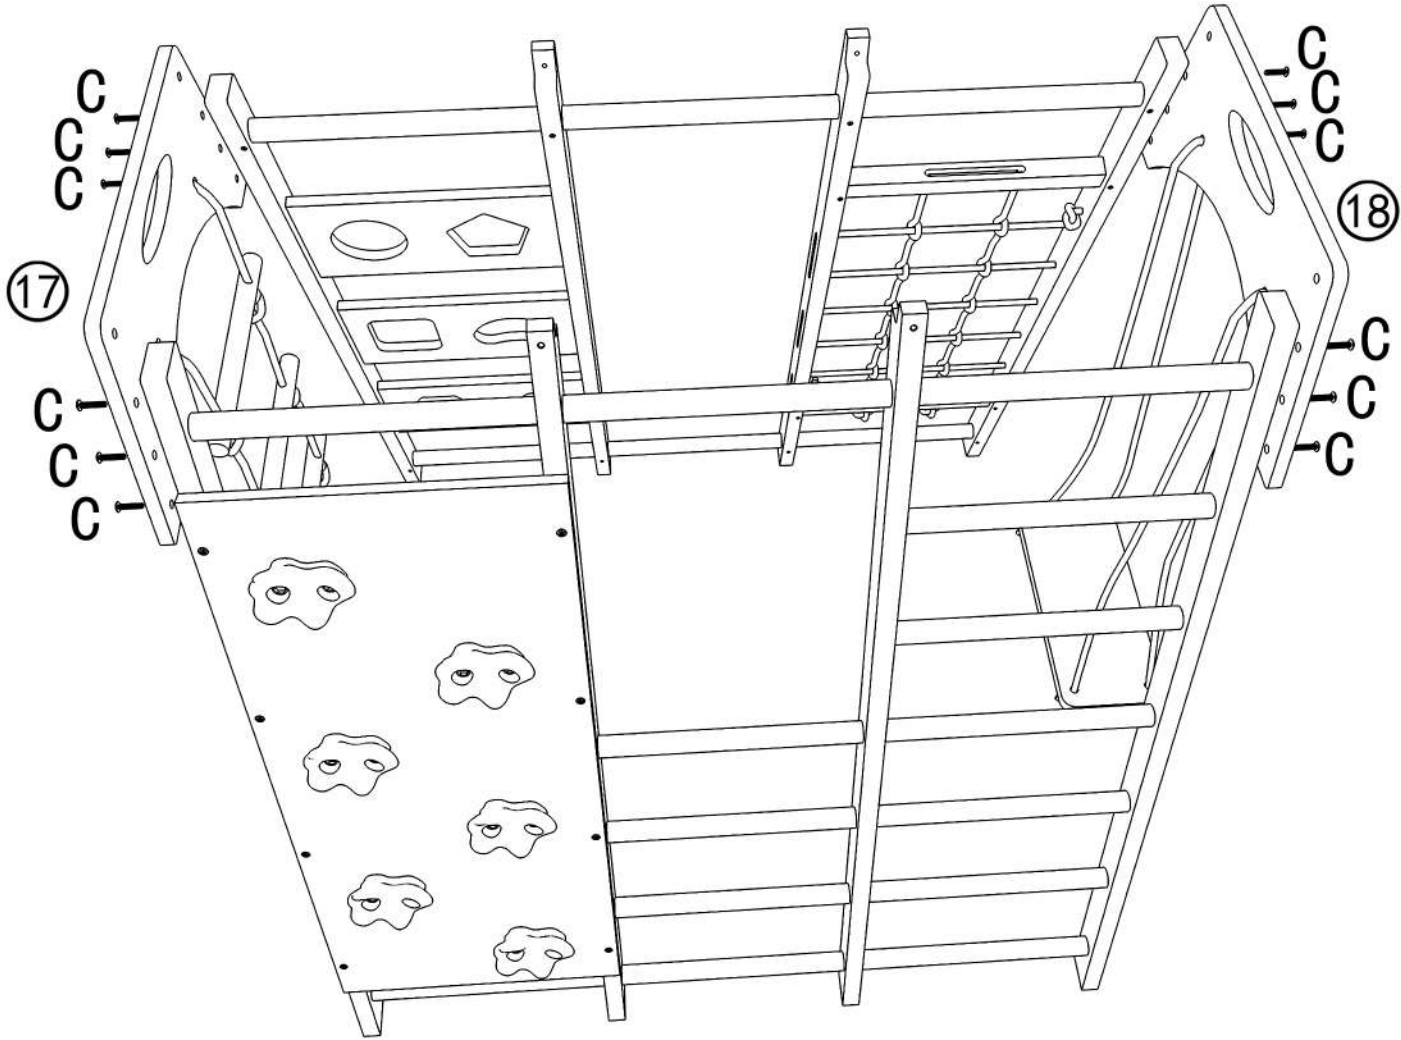




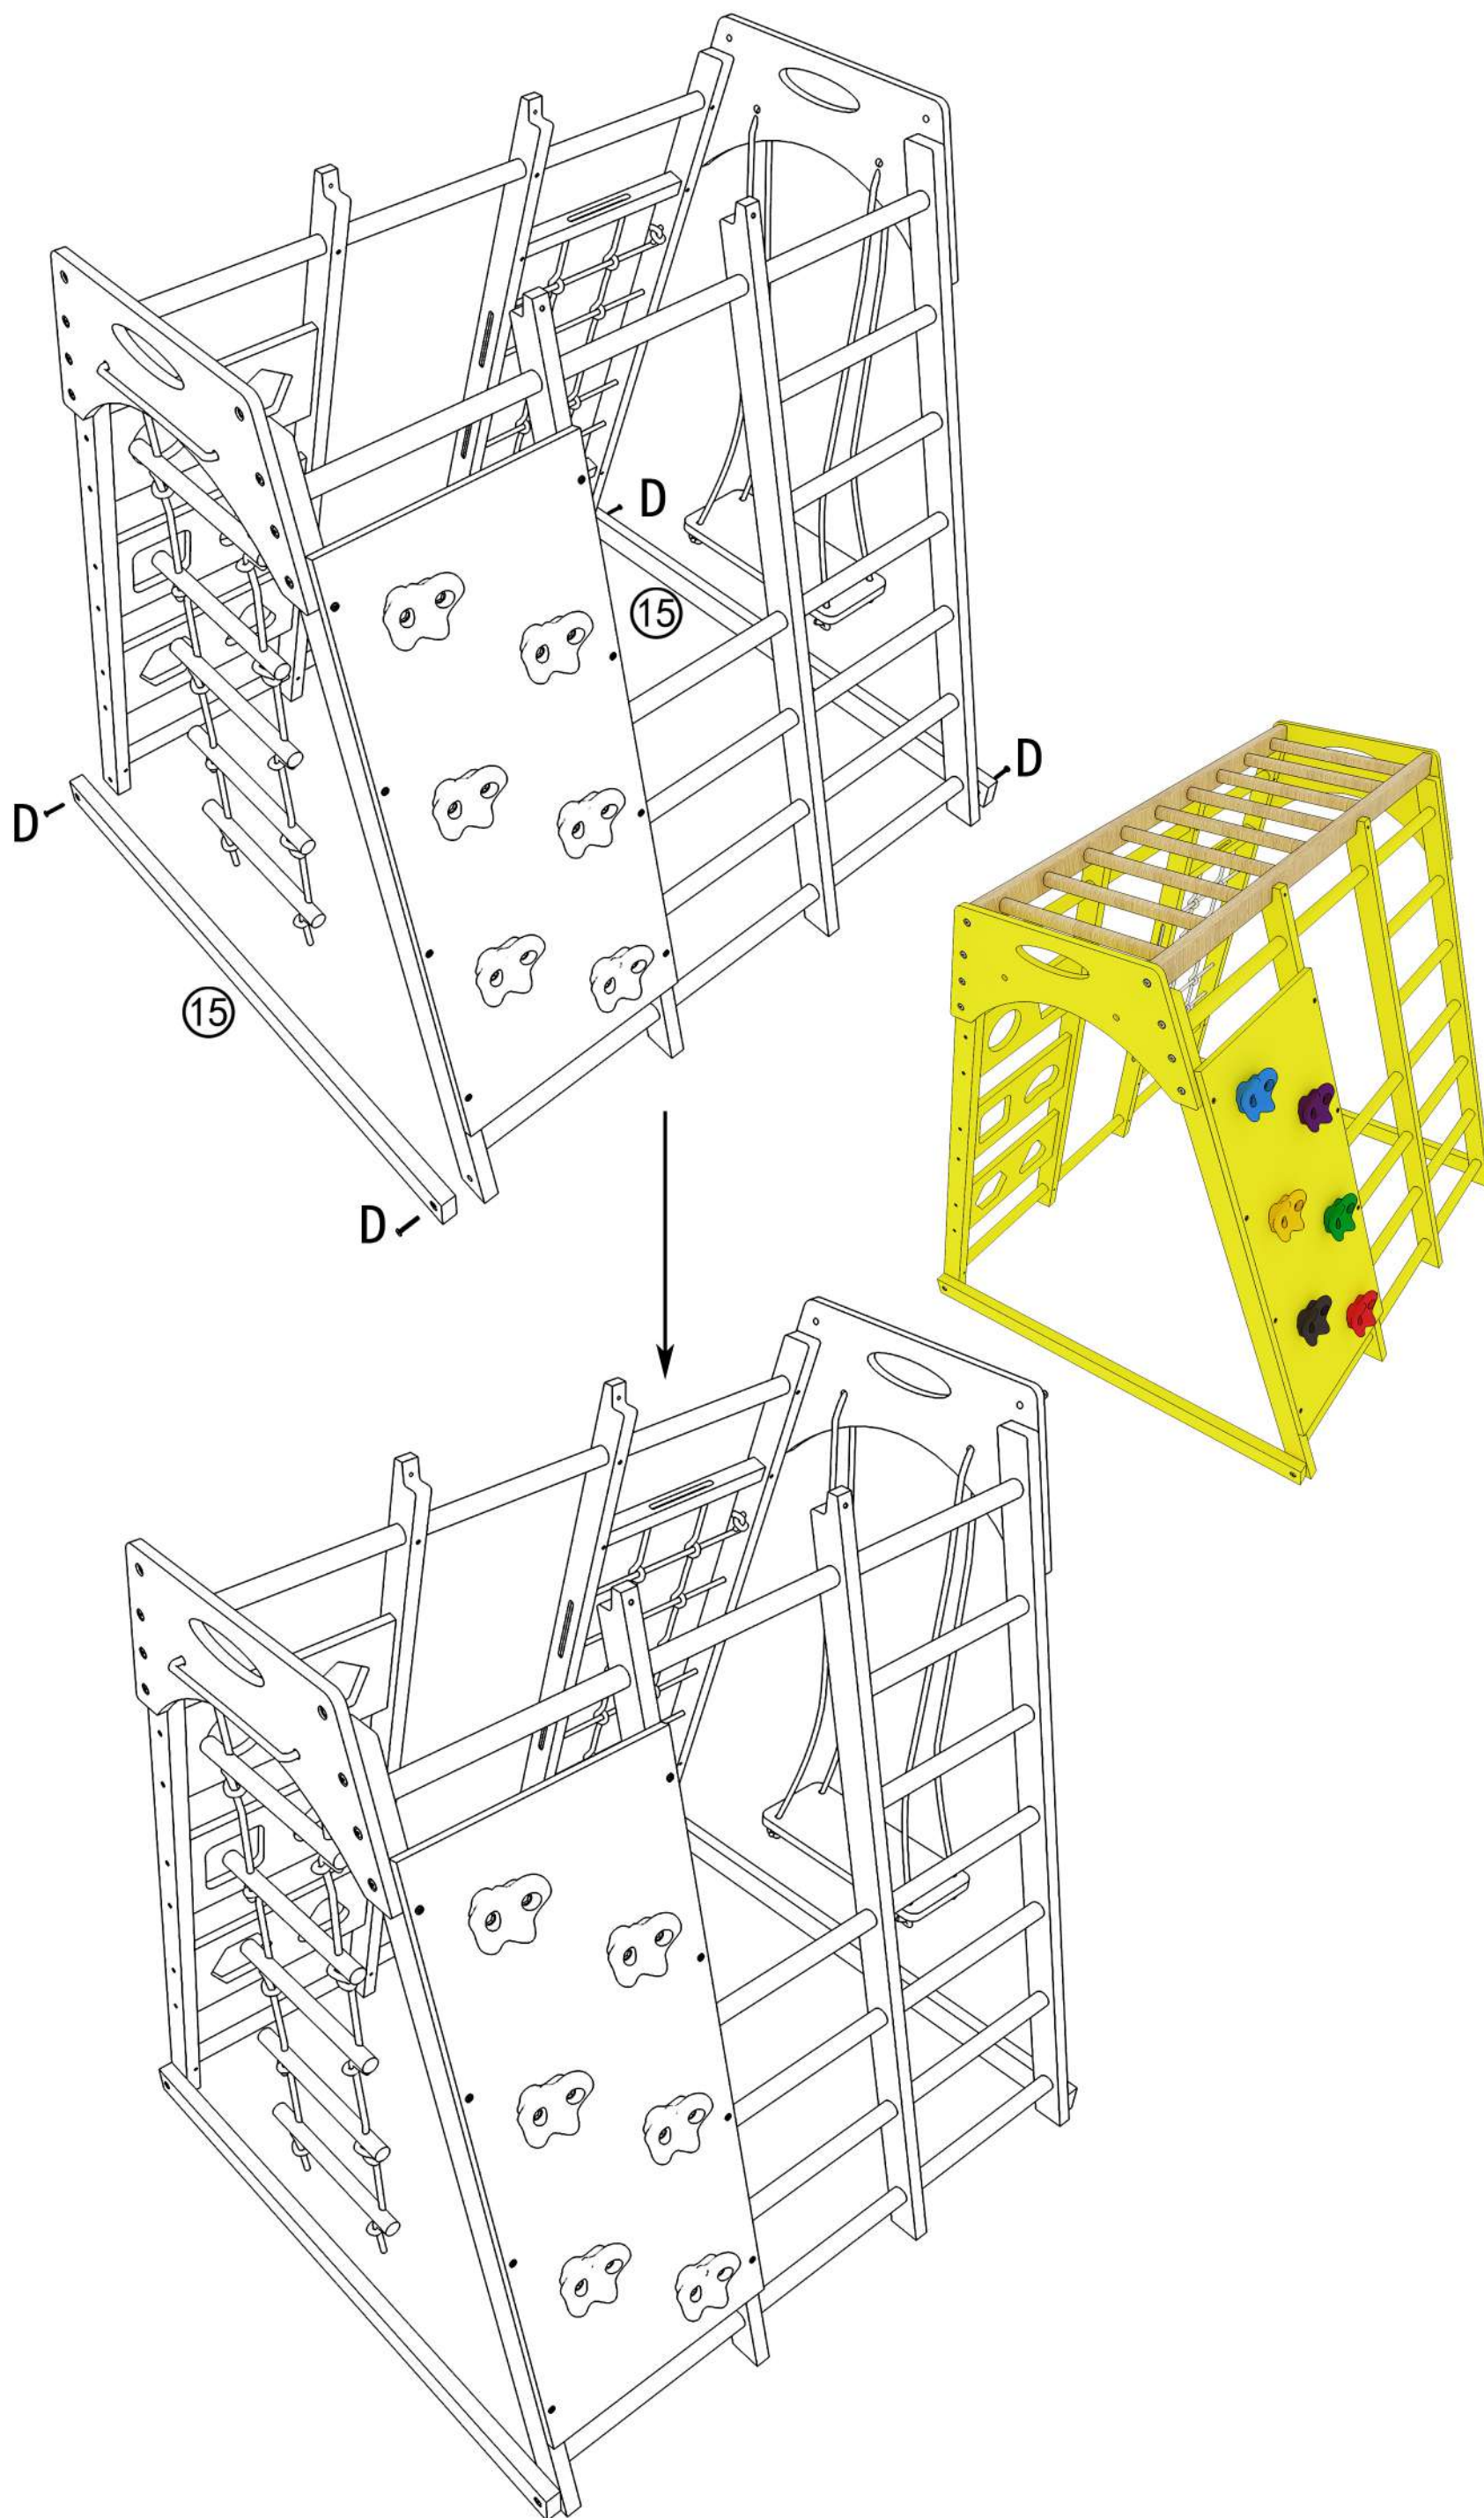18	1		
17	1		
C		M8 x 30	12

 


15	2		
D		M8 × 40	4

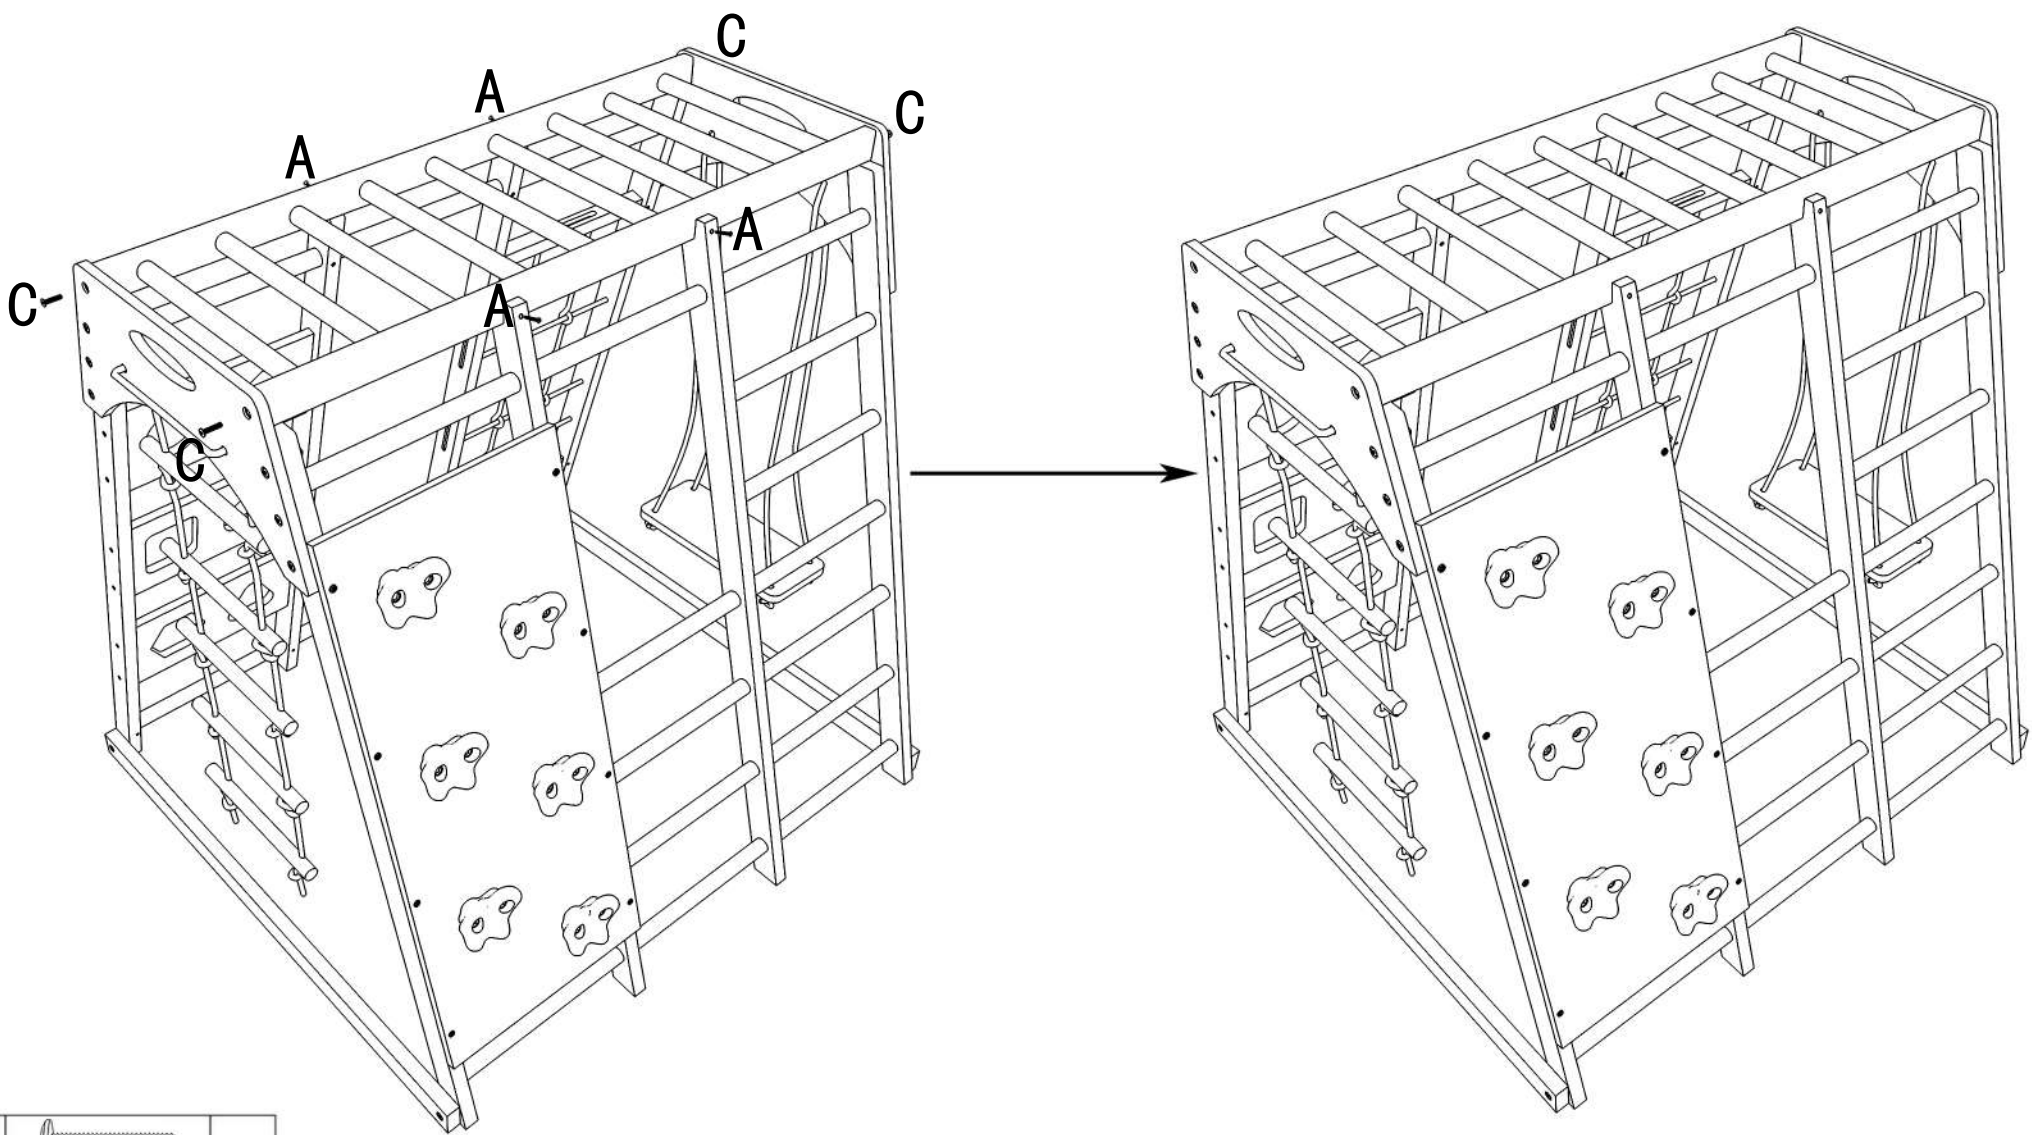 H3-1




C		4
A		4

 H3

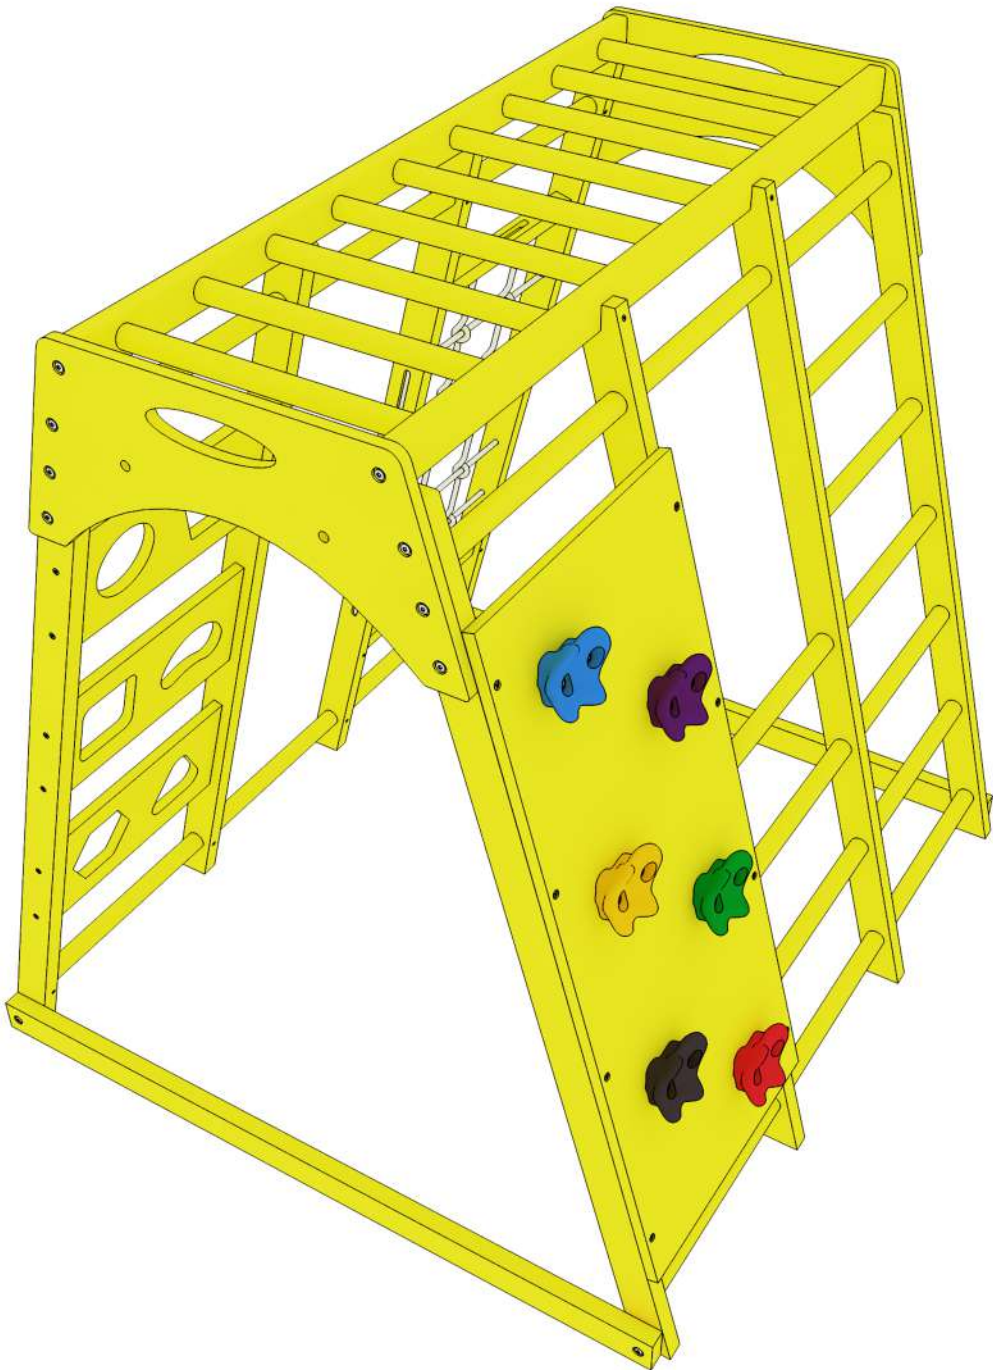

H4-1

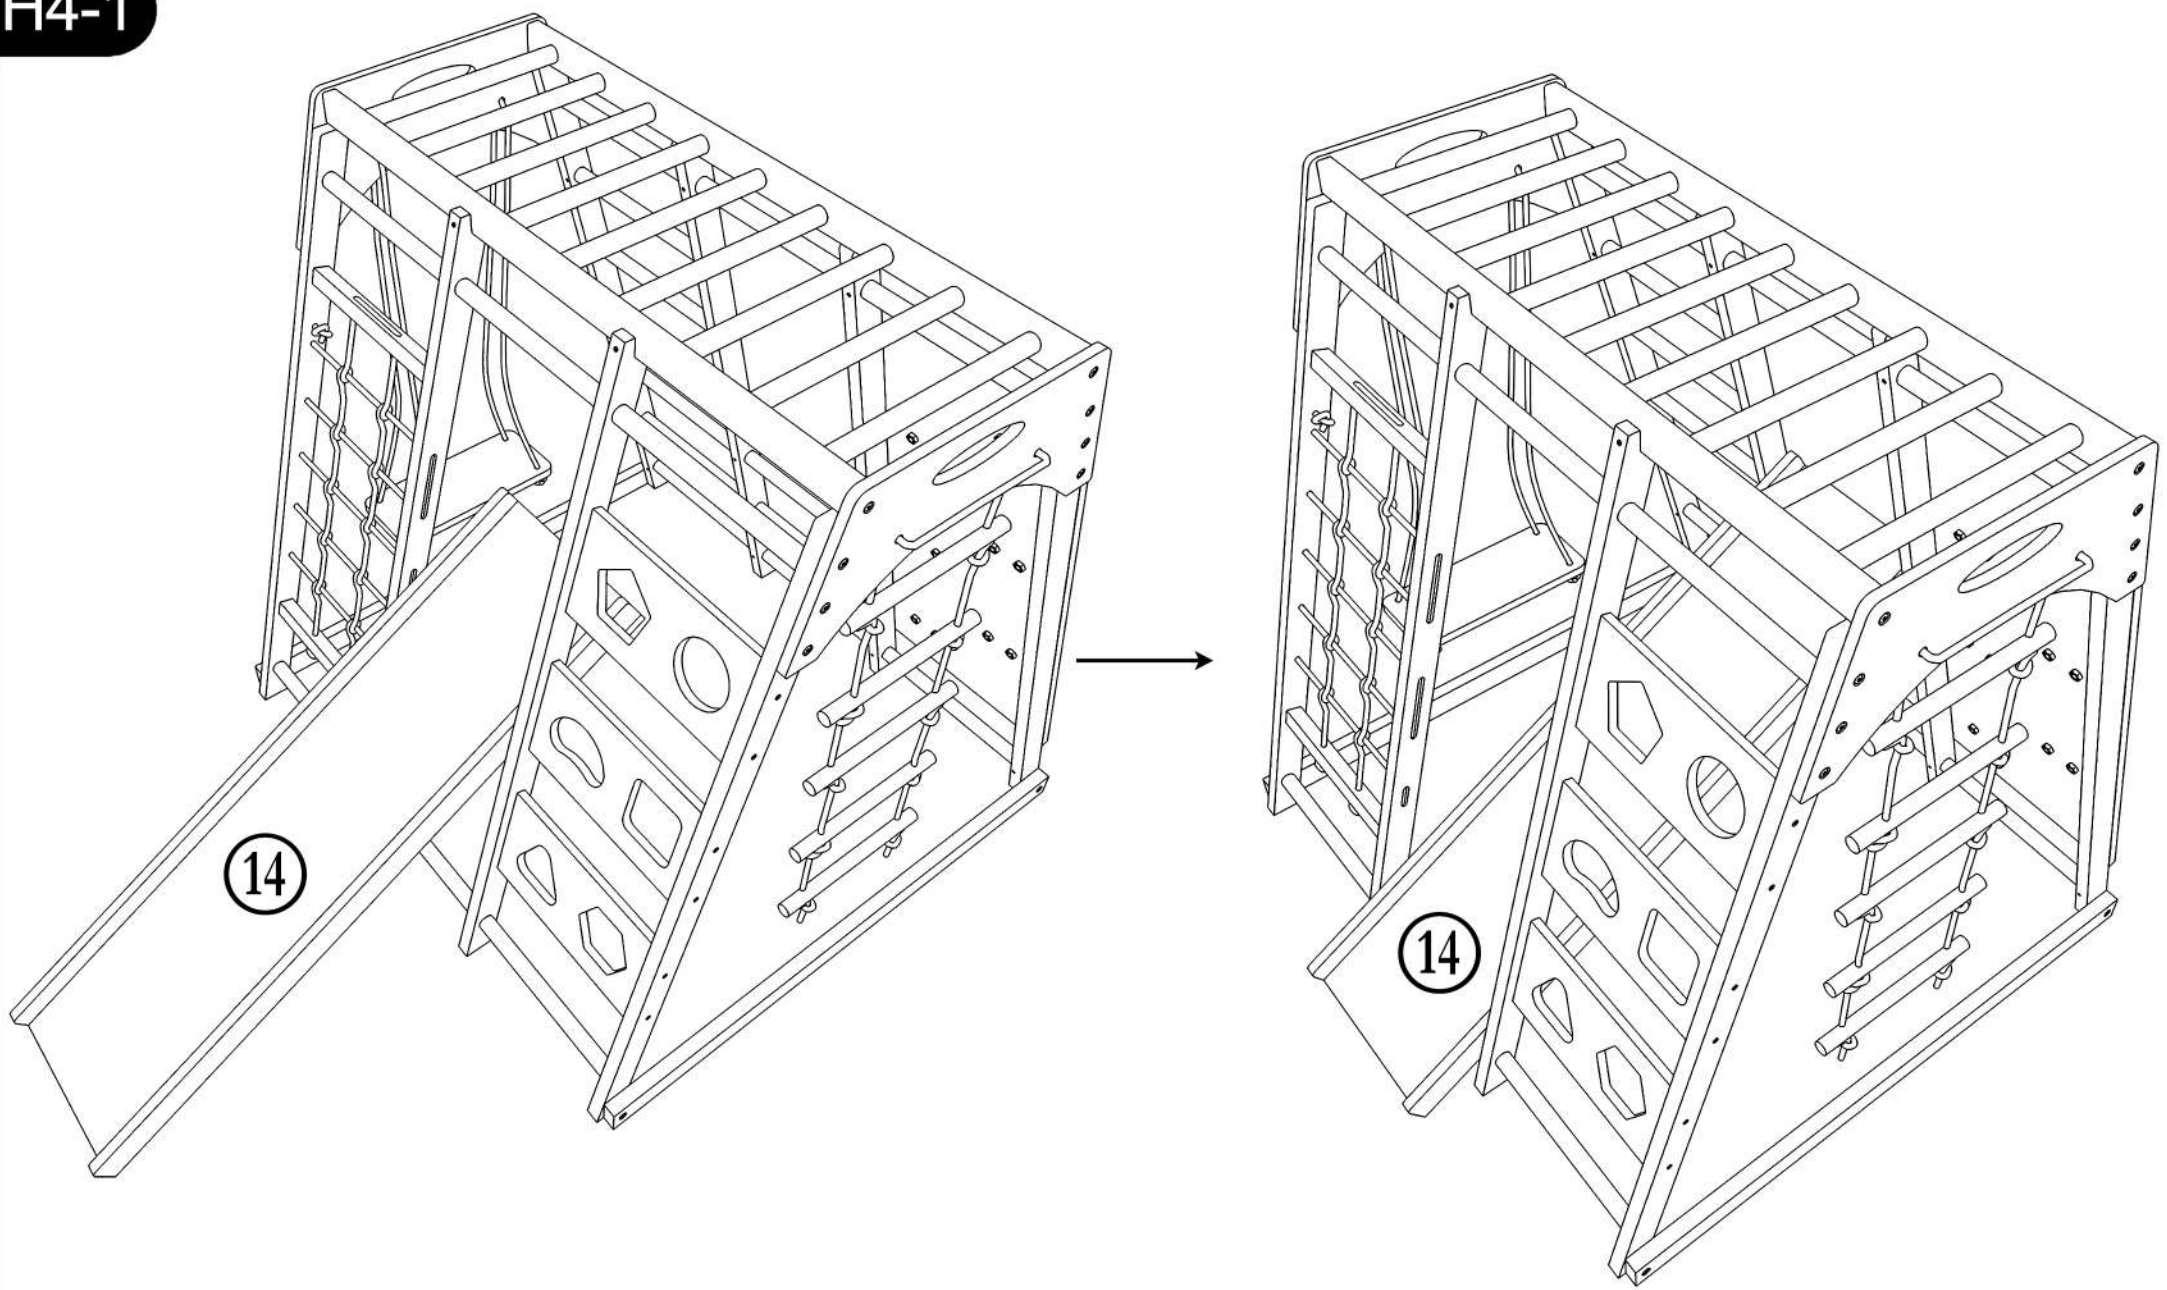 

14 1

H4

