

BLACK+ DECKER®

INSTRUCTION MANUAL

Powerful Upright Vacuum



BDUR1

Please read before returning this product for any reason.

3 - 4	Safety
5 - 6	Product Overview
7 - 10	Getting Started
11 - 12	Using Your BDUR1
13	Storing Your BDUR1
14 - 19	Maintenance
20	Troubleshooting
21	Warranty

Please keep this manual for later maintenance of the vacuum and for contacting us.

SAFETY DEFINITIONS

To reduce risk of injury, read the instruction manual.

▲ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.

▲ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.

▲ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in **death or serious injury**.

▲ (Used without word) Indicates a safety related message.

NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.

Before using this product, please read the following safety instructions and follow all safety precautions. Any operation inconsistent with this instruction manual may cause damage to this product.

▲ **WARNING:**

POLARIZATION INSTRUCTION

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

▲ **WARNING:**

To reduce risk of injury, read the instruction manual.

DO NOT vacuum water, wet objects, liquids, ashes, hot coals, cigarette butts, matches or any hot, smoking or burning objects, etc.

DO NOT pick up flammable or combustible materials (i.e. lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapor.

DO NOT pick up toxic material (i.e. chlorine bleach, ammonia, drain cleaner, etc.

DO NOT vacuum Toner (for laser printer, copy machines etc.) as there is a risk of fire and explosion.

DO NOT vacuum plaster, cement etc., as the filter can become blocked.

DO NOT use vacuum without all the filters fitted.

DO NOT store or use the appliance near high temperature areas.

DO NOT run over the power cord with the vacuum cleaner.

DO NOT use vacuum cleaner if it is blocked. Turn off and clear all blockages before continuing.

DO NOT use vacuum cleaner with blocked filters. Clean or replace filters before continuing. (refer to User Maintenance section).

DO NOT use vacuum cleaner if the appliance malfunctions, sounds abnormal, smells, smokes, is dropped or damaged in any manner or any breakage is found during operation.

DO NOT misuse the cord. Never pull the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.

DO NOT use vacuum cleaner to pick up large, hard, or sharp objects such as glass, nails, screws, coins, etc., that are likely to cause damage.

DO NOT use vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into liquid (water etc.)

DO NOT close door on cord, or pull cord around sharp edges or corners.

DO NOT leave unattended when plugged in and/or switched on

DO NOT handle the plug or vacuum cleaner with wet hands.

DO NOT use with any openings blocked and do not restrict airflow.

DO NOT operate the appliance with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

DO NOT attempt to modify this product in any way.

Questions? Contact Customer Service

Phone: 855-454-8078

BDUR1-IB-V4

FCC Information


1: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

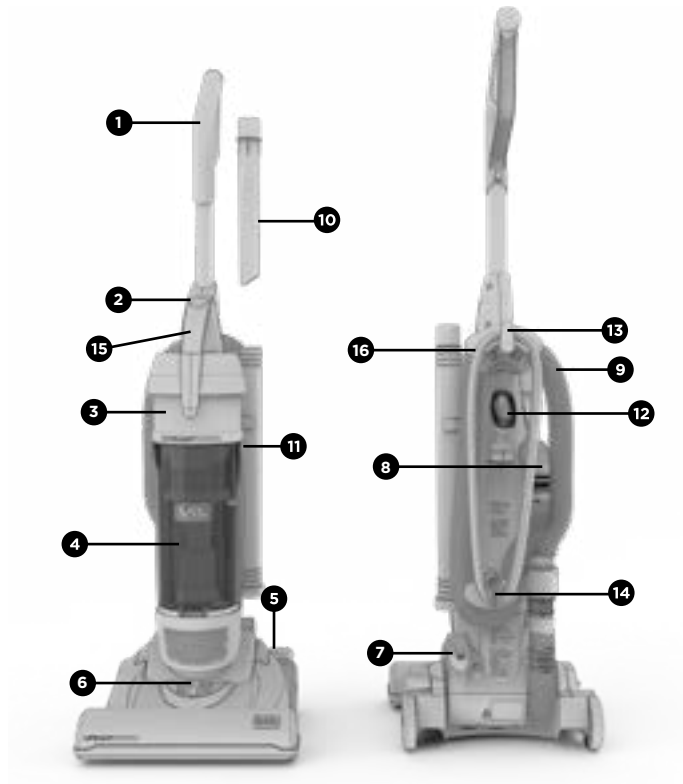

1: Handle Assembly	5: Vacuum Tilt Release Pedal	9: Main Hose	13: Top Cord Wrap
2: Dustbin Canister Release	6: Floor Brush Height Adjustment Knob	10: Crevice Tool	14: Bottom Cord Wrap
3: Dustbin Cover Assembly	7: Power On/Off Pedal	11: Extension Wand	15: Carry Handle
4: Dustbin	8: Hose Inlet	12: Brush Tool	16: Power Cord

Questions? Contact Customer Service

Phone: 855-454-8078




1: Filter Housing Release
2: HEPA Filter

3: Foam Filter
(located beneath the HEPA filter)

5: Dustbin Canister Release

SCAN THE QR CODE


Scan QR for Setup and Maintenance Videos and to purchase spare parts.

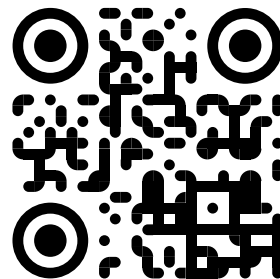


Scan for BDUR1 Instructions and Spare Parts

ASSEMBLY INSTRUCTIONS


HANDLE ASSEMBLY

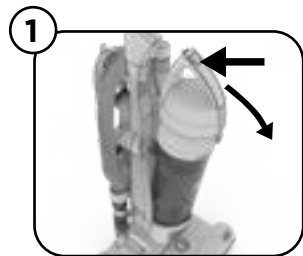


- 1** Press the Dustbin Canister Release and pull out to release.

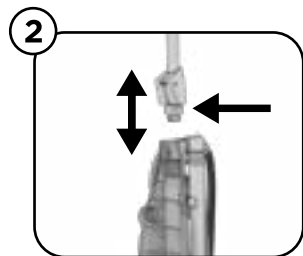

- 2** Insert the handle post into the top of the vacuum. Ensure the screw hole is facing toward the front of the vacuum.

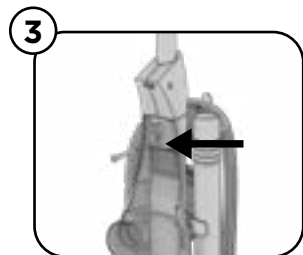

- 3** Insert the assembly screw (included) and tighten with a phillips screwdriver (not included).

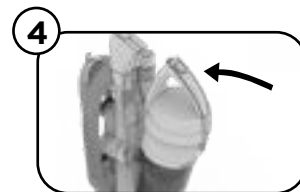


- 4** Attach Dustbin Canister onto the vacuum and push back until the Canister Release clicks into place as shown below.


USING THE ATTACHMENTS

Your vacuum includes a Brush Tool, Crevice Tool, and Extension wand. Each tool attaches to the Hose Adapter and can be used with or without the extension wand.

TOOL USAGE

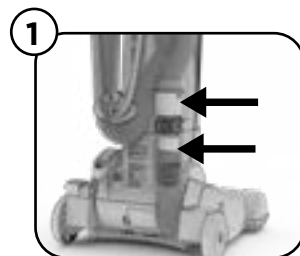

- 1** Pull up to remove the Main Hose from the Hose Outlet.


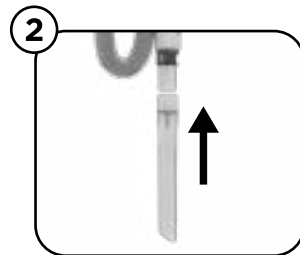


- 2** Slide on your desired tool.




TOOL STORAGE


Store the tools as shown (below) when not in use. The Crevice Tool stores inside the extension wand as shown.

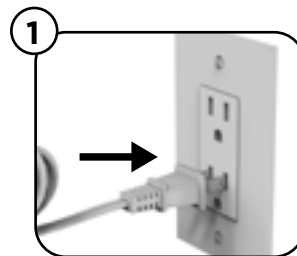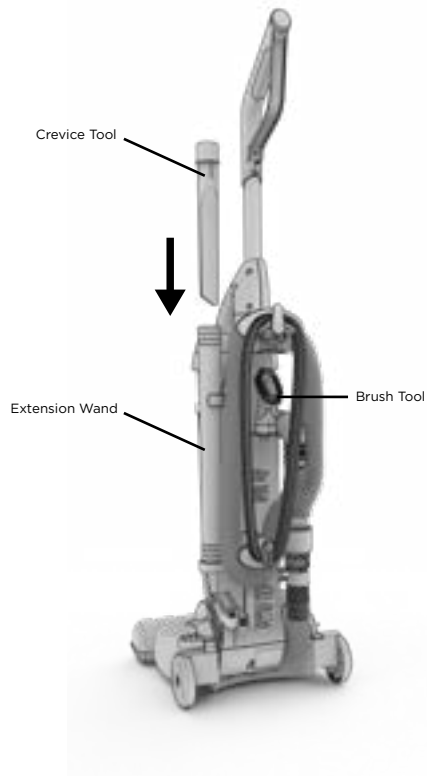


- 1** Plug Power Cord into a polarized outlet.

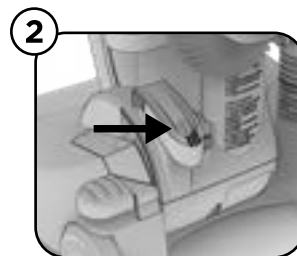


- 2** Tap the Power Pedal once to Turn Vacuum ON.

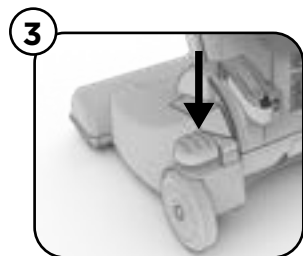

3 Tap the Vacuum Tilt release pedal to unlock the vacuum from the upright position.

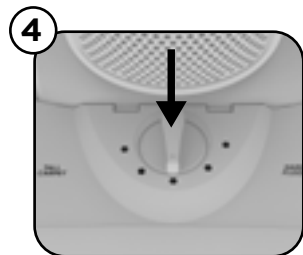


4 Height Adjustment: Adjustable height control allows you to change the height of the floor brush depending on your floor type. When vacuuming on thick carpet, adjust toward the Tall Carpet setting. For thinner carpet and hard floor, adjust toward the Hard Floor setting. Use the adjustment to satisfy your ideal vacuuming performance.

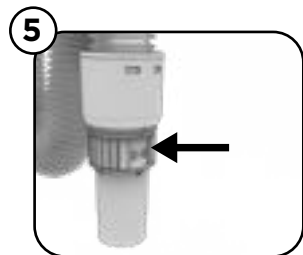


5 Suction Ring Adjustment - when using your vacuum tools, adjust the suction ring to optimize the cleaning effect on upholstery.


▲ WARNING: To avoid injury, turn vacuum OFF and unplug cord from wall when not in use.

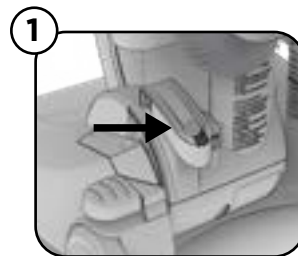

1 Press the Power Trigger once to Turn Vacuum OFF.

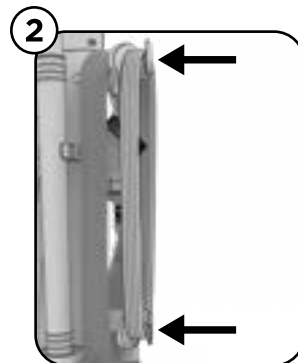

2 Loop the power cord around the bottom and top cord wrap brackets.

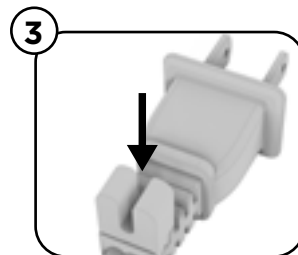


3 Clip the molded plug to the power cord to secure.

▲ WARNING: To avoid injury, turn vacuum OFF and unplug cord from wall when not in use.


CLEANING DUSTBIN AND FILTERS

NOTE: Empty your dustbin and clean filters regularly to ensure optimal performance.

▲ WARNING - Always turn off and unplug vacuum cleaner before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury.

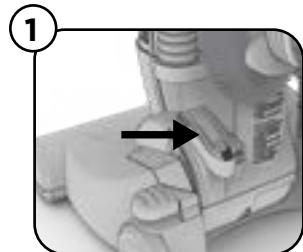

1 Turn Vacuum OFF. Then unplug vacuum.

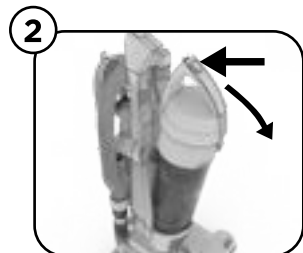


2 To empty dirt from the dustbin and filters press the Dustbin Canister Release and pull out to release.




3 Push down on the dustbin door release as shown. Empty Dustbin contents into trash.



4 Lift the Filter Housing Release to gain access to the HEPA and foam filters. Remove the HEPA and foam filter, tap to dislodge fine dust and then rinse under cold water as needed for a deeper clean **Allow to FULLY dry (24hrs recommended) before re-assembling.**

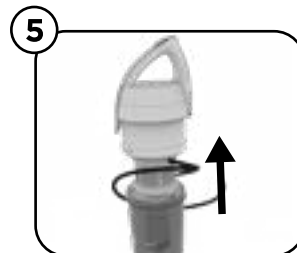


5 For deeper cleaning of the dustbin, twist the Dustbin Cover Assembly and pull up to release from the dustbin. Gently dislodge any debris.

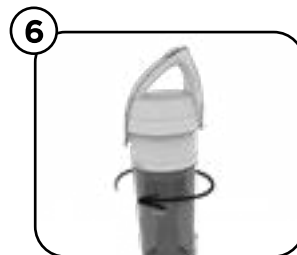

6 Replace the Dustbin Cover Assembly and twist clockwise to secure to the dustbin.

▲ CAUTION: Never operate your vacuum cleaner without the filter in place. Doing so may damage the motor and void the warranty.

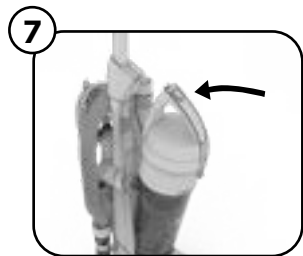

- 7 Attach Dustbin Canister onto the vacuum and push back until the Canister Release clicks into place as shown below.




NOTE: To maintain suction and cleaning performance, check the hose and filters regularly and ensure they are not clogged.

CAUTION: Never operate your vacuum cleaner without the filter in place. Doing so may damage the motor and void the warranty.


CLEANING THE FLOOR BRUSH

WARNING - Always turn off and unplug vacuum cleaner before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury.

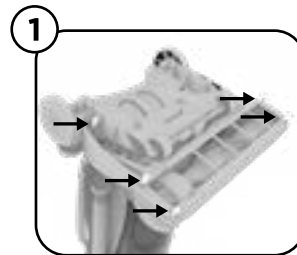


- 1 **REMOVING THE BRUSH BAR ROLLER**


Remove the five screws that hold the brush roller base plate in place as shown.

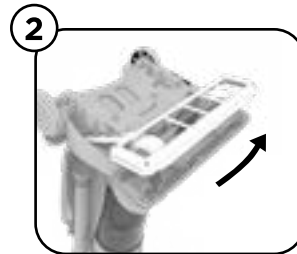


- 2 Remove the brush bar roller base plate by lifting it up.

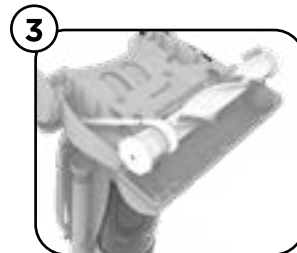


- 3 Remove the brush bar roller by lifting the right side out of the roller guides as shown.

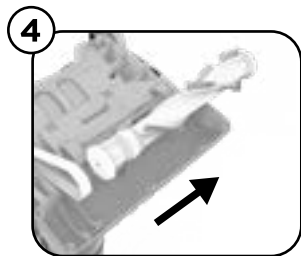

4 Remove the brush bar roller from the belt assembly by pulling the belt towards you and sliding the brush bar out.

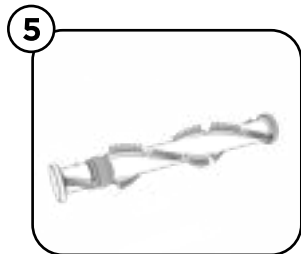


5 Remove all debris from the brush bar roller.

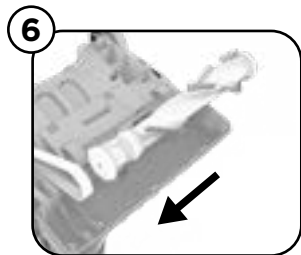


6 Reinstall the brush bar roller by inserting the left side of the roller through the belt and into the roller guides.


NOTE: When the cleaning of the brush bar no longer restores vacuum cleaner suction to full power, check for clogs or replace the filters.

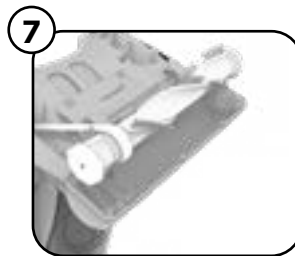

7 Slide the right side of the brush bar roller into the guides as shown.

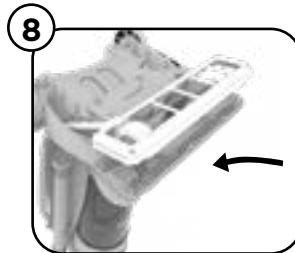

8 Replace the brush bar roller base plate as shown.

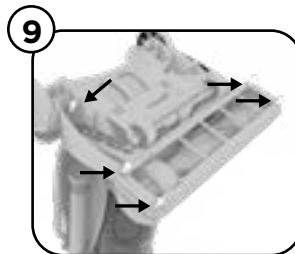

9 Replace the screws that hold the brush roller base plate in place as shown.

Review this table to find do-it-yourself solutions for minor performance problems. Any other service needed should be performed by other qualified service agent.

- ▲ **WARNING:** Always turn off and unplug vacuum before performing maintenance to the appliance. Failure to do so could result in electrical shock or personal injury.

VACUUM DOES NOT POWER ON

CAUSE

1. Unplugged at wall outlet.
2. Tripped circuit breaker/blown fuse at household service panel.

SOLUTION

1. Plug in firmly, push ON/OFF button.
2. Reset circuit breaker or replace fuse.

WEAK SUCTION

CAUSE

1. Full or clogged dust bin.
2. Clogged airflow passages.
3. Dirty filters.
4. Dust bin open.
5. Broken drive belt.

SOLUTION

1. Empty dust bin.
2. Clear airflow passages.
3. Change/Clean filters.
4. Close hood until release button is latched.
5. Replace belt.

Questions? Contact Customer Service

Phone: 855-454-8078

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of Silver Point Innovations LLC. Warranty coverage applies to the original owner and to the original product only and is not transferable. We recommend registering your product online at www.blackanddecker.com

SilverPoint warrants this product to be free from defects in workmanship and materials, under normal household use and conditions, one (1) year from the date of original purchase and maintained according to the requirements outlined in this User Manual. Should this product fail to function in a satisfactory manner, it is best to contact our customer service team at (855) 454-8078 so that we may help resolve the matter. Should service be required by reason of any defect or malfunction during the warranty period, SilverPoint will repair or, at its discretion, replace the product.

The One (1) Year Limited Warranty is subject to the following conditions and exclusions:

The original unit and/or non-wearable parts deemed defective, in SilverPoint's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date. In the event a replacement unit is issued the replacement product will be warranted for the remainder of the original warranty period or thirty (30) days from the date of shipment of the replacement product, whichever is longer. SilverPoint reserves the right to use new, refurbished or used parts in good working condition to repair or replace any product.

Exclusions:

- (1) Normal wear and tear of wearable parts (such as batteries, brushes, HEPA filters, pads, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at www.blackanddecker.com
- (2) Any unit that has been tampered with or used for commercial purposes.
- (3) Damage caused by misuse, abuse, negligent handling, failure to perform regular maintenance (i.e., not cleaning the filters), or damage due to mishandling in transit.
- (4) Consequential and incidental damages.
- (5) Defects caused by repair persons not authorized by SilverPoint.
- (6) Products purchased, used, or operated outside of North America.

Warranty Support:

You must call (855) 454-8078 to initiate a warranty claim and have the product on hand during the call. You will need the original receipt as proof of purchase.

The One (1) Year Limited Warranty does not cover the cost of shipping this product to our service center or its return to the owner. Please call Customer Service at (855) 454-8078 to evaluate your product and receive warranty term instructions.

Disclaimer: This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SilverPoint or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages, (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by this disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SilverPoint product.

Trademark Acknowledgment

BLACK+DECKER® and the BLACK+DECKER Logo are registered trademarks of the BLACK+DECKER Corporation and are used under license.

© 2021 BLACK+DECKER

U.S. & Canada Only

Manufactured by: Silver Point Innovations LLC
261 5th Avenue, Suite 1512, New York NY 10016