



HOME
DECORATORS
COLLECTION®

ASSEMBLY

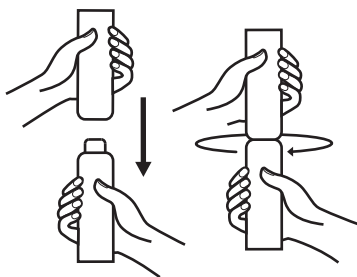


A PRE-LIT TREE SECTION IS OUT?

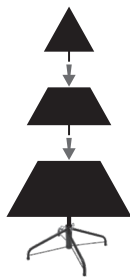


Firmly insert each section downward.

THE TREE IS JUST NOT FULL ENOUGH?

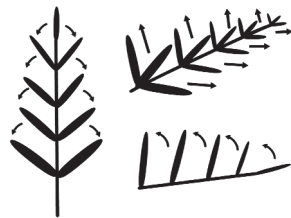

Simply spread the branch tips upward and outward.

BRANCH HANGING LOW?

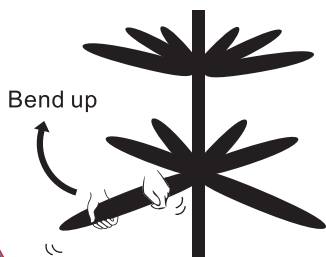

LIGHTS NOT WORKING?

Check for loose connections.



**QUESTIONS,
PROBLEMS,
MISSING PARTS?**

CALL 1-877-527-0313