

CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

= Default Setting

Cycle	Fabric or Load Type	Wash Temp.	Spin Speed	Soil Level	Turbo Wash™	Soak	Stain Care™	Cold Wash™	Extra Rinse	Water Plus	Fabric Softener
Normal	Cotton, linen, towels, shirts, sheets, jeans, mixed loads	Warm	High	Normal							
		Hot	Extra High	Heavy Light							
		Semi Warm	Medium								
Heavy Duty	Heavy soiled cotton fabrics	Cold	No Spin	Normal Light							
		Tap Cold									
		Warm	High								Heavy
		Hot	Extra High								
Bulky	Large items such as blankets and comforters	Semi Warm	Medium	Heavy Light							
		Cold	Low								
		Tap Cold	No Spin								
		Warm	High								Normal
	* Use the BULKY cycle for items such as pillows, comforters, pet bedding and other articles which have difficulty absorbing water. DO NOT WASH EXCESSIVELY LARGE ITEMS. If large/bulky items do not fit easily into the tub, there may not be enough room for them to move during washing. Keep like items together; do not mix large bulky items with smaller clothing items. Failure to follow these instructions may result in damage to the clothing or to the washer.										
Bright Whites™	White fabrics	Hot	Medium	Heavy							
		Warm	Extra High	Normal							
OXI SANITIZE™	Cotton, under-wear, pillow covers, bed sheets, baby wear. (less than 11 lbs.)	Semi Warm	High	Light							
		Hot	High	Heavy							
			Extra High	Normal							
Tub Clean	Refer to page 27.	Low	No Spin	Light							
			High								

CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

 = AVAILABLE OPTION
 = Default Setting

Cycle	Fabric or Load Type	Wash Temp.	Spin Speed	Soil Level	Turbo Wash™	Soak	Stain Care™	Cold Wash™	Extra Rinse	Water Plus	Fabric Softener
Perm. Press	Dress shirts/pants, wrinkle-free clothing, poly/cotton blend clothing, table-cloths	Warm	Medium	Normal							
		Semi Warm	High	Heavy	●	●		●	●	●	●
		Cold	Low	Light							
Towels	Towels, shirts, sheets, jeans, mixed loads	Tap Cold	No Spin								
		Warm	High	Normal							
		Hot	Extra High	Heavy	●	●	●	●	●	●	●
Power Cleanse	Towels, shirts, sheets, jeans, mixed loads	Semi Warm	Medium	Light							
		Cold	Low	Heavy		●			●	●	●
		Tap Cold	No Spin	Light							
Speed Wash	Lightly soiled and small loads	Warm	High	Light							
		Semi Warm	Extra High	Heavy	●	●			●	●	
		Cold	Medium	Normal							
Wool	Item labeled machine washable wool (less than 8 lbs.)	Tap Cold	No Spin								
		Warm	Low	Light							
		Semi Warm	Medium	Heavy		●			●	●	●
Delicates	Dress shirts/blouses, nylons, sheer or lacy garments (less than 8 lbs.)	Tap Cold	No Spin								
		Warm	High	Heavy		●			●	●	●
		Semi Warm	Medium	Normal							
		Cold	No Spin								
		Warm	High	Heavy		●			●	●	●
		Semi Warm	Medium	Normal							

NOTE:

To protect your garments, not every wash/rinse temperature, spin speed, soil level, or option is available with every cycle. A chime will sound and the LED will not light if the selection is not allowed.

*When a cycle is selected, the default time for that cycle is displayed. This time will change as modifiers or options are selected. Once the START/PAUSE button is pressed, the washer will measure the size of the load. The estimated time may change once the load size has been measured. The washer automatically adjusts the wash time for the amount of laundry, water pressure, water and other operating conditions.