

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit has trouble priming / doesn't spray when tank is filled.	Pump has lost its prime.	Turn the nozzle selector dial to the largest micron setting. Once spray begins, release the switch trigger and rotate the nozzle selector dial to the desired position.
Unit sprays improperly.	Nozzle is clogged or fluid in tank is low.	Make sure there is sufficient fluid in the tank. Clean nozzles.
Unit is "spitting".	Liquid in tank is too thick.	Empty the tank, clean both the tank and filter, then try again. Make sure that all chemicals/liquid used in the sprayer are as thin as water.
Spray is weak.	Solution is too thick.	Make sure that all chemicals/liquid used in the sprayer are as thin as water.
Unit runs for a short period then shuts off.	Battery needs charging. Solution is too thick.	Recharge the battery. Make sure that all chemicals/liquid used in the sprayer are as thin as water.

**This product has a Three-year Limited Warranty
for personal, family, or household use.
For warranty details, visit www.ryobitools.com
or call (toll free) 1-800-860-4050.**