



CARE INSTRUCTIONS

BEFORE USE

- Foam is sensitive to temperature. When exposed to colder temperatures your Bean bag will become firmer. Your body heat will help the foam soften.
- External heat source, not recommended on the Bean Bag doing so will damage the Bean Bag.
- New foam may initially have a slight odor: it is completely harmless and will dissipate over a short time with regular use.
- To expedite odor dissipation, remove and wash the cover and place the inner content in a dry sunny location.

WASHING CARE

- Pre-wash the zippered cover before first use.
- Wash zippered cover separate from other items as zipper may cause damage to clothing or linens.
- Wash the zippered cover in cold water using a non-chlorine bleach detergent on a gentle cycle with cold water rinse.
- The Bean Bag can be spot cleaned with mild detergent by hand wash only; do not soak or machine wash the foam. Rinse with warm water.

DETERGENT

- Use a mild liquid detergent, preferably non alkaline, without added bleach or whiteners.

DRYING CARE

- Tumble dry zippered cover on low heat.
- Never use a high heat setting or over dry; this will weaken the fibers, cause shrinkage and or shorten the life of the cover.
- After spot cleaning the Bean Bag dry at room temperature away from heat or light. Do not machine wash or dry.




ZIPPER INSTRUCTIONS

1

OPEN REMOVABLE COVER


Open cover using paper clip, as the pull on the slider has intentionally been removed for children safety.

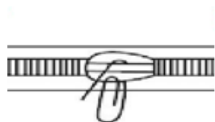

2

PLACE REMOVABLE COVER ON FILLER

Once you have opened your cover, place this on the filler that should be inflated at this time.

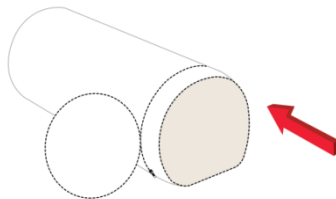

3

CLOSE REMOVABLE COVER

Follow the process for opening the cover to now close the zipper.

